Figure: ATCOM IPPBX IP04

ATCOM® IPPBX IP04

Product Guide

Version: 1.0

2010-05-10

http://ArtTel.ru

Content

CONTACT ATCOM 3

CHAPTER 1 THE INTRODUCTION OF IP04 4

CHAPTER 2 ACCESS TO THE IP04 7

2.1 WEB PAGE ACCESS BY BROWSER 7
2.2 SSH ACCESS BY PUTTY 8
2.3 ACCESS BY BROWSER WITH FALLBACK IP ADDRESS 9
2.4 CONSOLE PORT ACCESS TO IP04 9

CHAPTER 3 CONFIGURE IP04 BY WEB GUI 11

3.1 SYSTEM STATUS 11
3.2 CONFIGURE HARDWARE 11
3.3 TRUNKS 11
3.3.1 Create Analog Trunks 12
3.3.2 VoIP Trunks 13
3.4 OUTGOING CALLING RULES 13
3.5 DIAL PLANS 15
3.6 USERS 15
3.6.1 Create SIP/IAX User 15
3.6.2 Create Analog User 16
3.7 RING GROUPS 18
3.8 CALL QUEUES 19
3.9 VOICE MENUS 20
3.10 TIME INTERVALS 21
3.11 INCOMING CALLING RULES 22
3.12 VOICEMAIL 23
3.13 CONFERENCING 25
3.14 FOLLOW ME 26
3.15 VOICEMAIL GROUPS 28
3.16 VOICE MENU PROMPTS 28
3.17 SYSTEM INFO 30
3.18 BACKUP 32
3.19 ACTIVE CHANNELS 33
3.20 OPTIONS 33
3.21 ASTERISK LOGS 36
3.22 BULK ADD 37
3.23 FILE EDITOR 37
3.24 ASTERISK CLI 38
3.25 NETWORK SETTINGS 39
3.26 FIRMWARE UPDATE 40
3.26.1 Download the Latest Firmware File and Set up TFTP Server. 40

http://ArtTel.ru

3.26.2 Update for IP04 from Web Page *40*
3.27 CALL DETAIL RECORDS 41

CHAPTER 4 AN APPLICATION CASE OF IP04 42

4.1 HOW TO MAKE INTERNAL CALLS THROUGH IP04 43
4.1.1 Access to the Web Page of IP04 by Browser *43*
4.1.2 Add up Users from Web Page of IP04 ..... *43*
4.1.3 Register a SIP user 6001 in AT610 ..... *45*
4.2 HOW TO MAKE A CALL TO OUTSIDE THROUGH PSTN 46
4.2.1 Create an Analog Trunk *46*
4.2.2 Create an Outgoing Calling Rule *47*
4.2.3 Create a Dial Plan *47*
4.2.4 Create a User *48*
4.3 HOW TO GET AN INCOMING CALL FROM OUTSIDE 48
4.3.1 Create an Analog Trunk *48*
4.3.2 Create an Incoming Calling Rule *48*
4.3.3 Create a Voice Menu *48*
4.4 HOW TO CALL EACH OTHER DIRECTLY FROM DIFFERENT NETWORK SEGMENT. 49
4.5 HOW TO CALL THROUGH VOIP TRUNK 52
4.5.1 Call from IP04 to IP08 ..... *52*
4.5.2 Call from IP08 to IP04 ..... *55*
4.6 HOW TO TRANSFER FILES BETWEEN WINDOWS PC AND IP04 57

CHAPTER 5 REFERENCE 59

http://ArtTel.ru

Contact ATCOM

The Introduction of ATCOM

Founded in 1998, ATCOM technology has been always endeavoring in the R&D and manufacturing of the internet communication terminals. The product line of ATCOM includes IP Phone, USB Phone, IP PBX, VoIP gateway and Asterisk Card.

Contact Sales:

Address	A2F , Block 3 ,Huangguan Technology Park , #21 Tairan 9th Rd, Chegongmiao , Futian District , Shenzhen China
Tel	+(86)755-23487618
Fax	+(86)755-23485319
E-mail	sales@atcomemail.com

Contact Technical Support:

Tel	+(86)755-23481119
E-mail	Support@atcomemail.com

Website Address: http://www.atcom.cn/

ATCOM Wiki Website: http://www.openippbx.org/index.php?title=Main_Page

Download Center: http://www.atcom.cn/download.html

http://ArtTel.ru

Chapter 1 the Introduction of IP04

Overview of the IP04

The IP04 is a complete Asterisk Appliance with four single port FXO or FXS modules. It is an embedded open source Linux system with built-in SIP/IAX2 proxy server and NAT features. It provides a solid, uniform platform for traditional PSTN communications as well as VoIP communications.

Targeting for SOHO user and SMB market with an easy to use graphical interface, IP04 provides a cost-saving solution on their telecommunication/data needs. With IP04, company with branch offices in different countries can be easily combined together to work like a virtual single office through Internet.

Features

Open Source Asterisk IP PBX
High performance OSLEC (Open Source Line Echo Canceller)
Configurable IVR menu
Voice Mail, Voicemail to Email
Call forward, Call waiting, Call transfer
Call conference
Call queues, Ring group
SIP trunk, IAX trunk, PSTN analog trunk
Call Detail Record
Access via: SSH/telnet/web
Firmware upgradable via web page
50+ available SIP/IAX2 extensions
20 concurrent calls

Applications

SOHO/SMB telephony system
Hosted service
FAX terminal
IVR system

Interface

1 * RJ45 port
1 * Power port
1 * MMC/SD slot
4 * RJ11 port (FXS/FXO interchangeable)
4 * Single port FXO/FXS module slot

http://ArtTel.ru

Hardware

CPU: 400MHz Blackfin 532 Chip
Four analog (FXO/FXS) module interface.
NAND flash 256 MB
SDRAM 64MB

System

Open Source uClinux

Measurement and Weight

Inner box	225 * 120 * 30mm
G.W./unit	0.765KG
Carton MEAS	456 * 442 * 362 mm
Units per Carton	21 units/ CTN
G.W./CTN	18 KG/CTN

Package

Item	Quantity
IP04	1
RS232 module	1
Power Adapter	1
Manual (disk)	1

http://ArtTel.ru

For the usage of IP04 in VoIP field, you can refer to the following network topology.

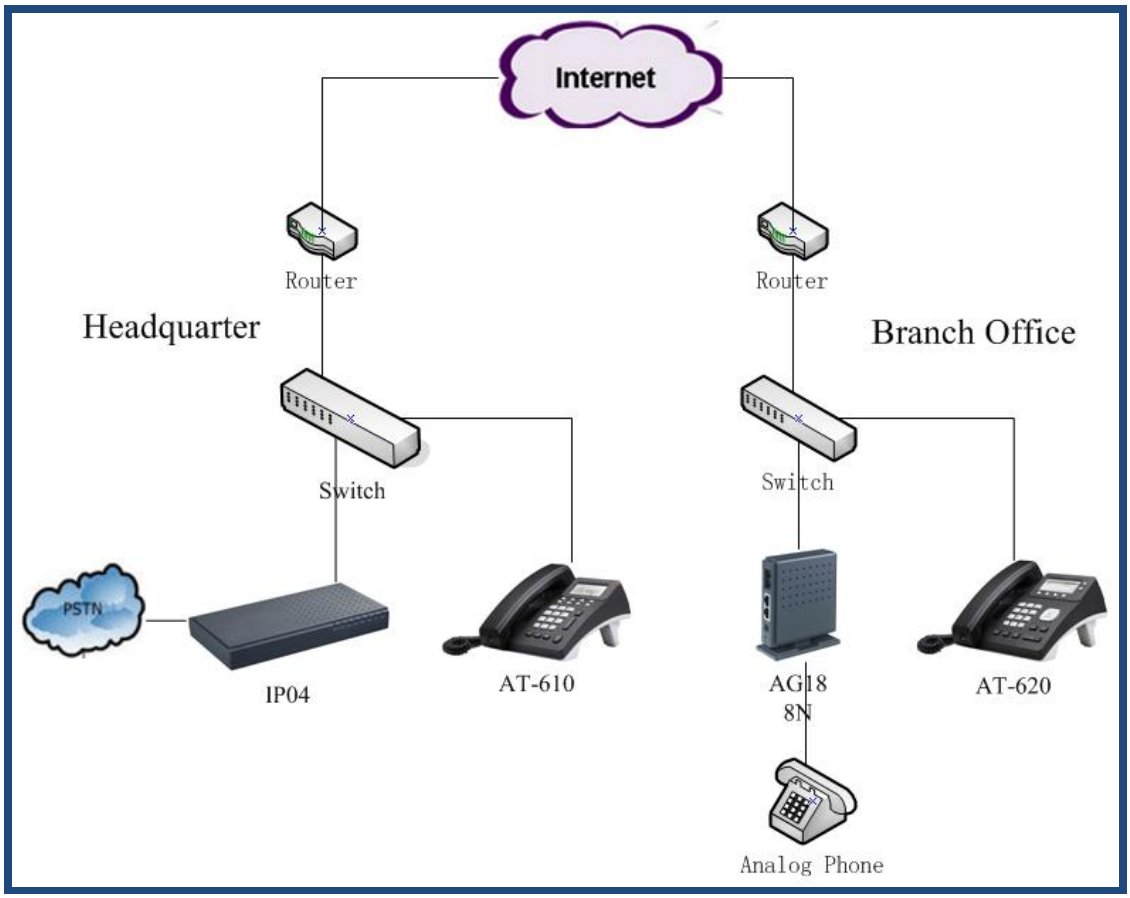

http://ArtTel.ru

Chapter 2 Access to the IP04

You need a PC to access to the IP04, there are four ways for you to access the IP04:

1. Web page access by browser
2. SSH access by putty
3. Access by browser with Fallback IP Address
4. Console port access by RS232 console cable

In order to access to IP04 by the first three ways, you have to check that if your network connection between IP04 and PC is OK. If you do not have network connection between IP04 and PC, you can try to use the last way to access to IP04 and change the IP address for IP-04.

2.1 Web Page Access by Browser

It is the most convenient and common way to access the IP04, you just need to open your browser and input the IP address of IP04 WAN port (the default IP address is 192.168.1.100). You would better use Firefox instead of IE, because there are compatible issues.

Then input the default Username: admin; Password: atcom (the password of old version is mysecret) in the presented screen like the following:

When you login successfully, you can get the configuration web page as below:

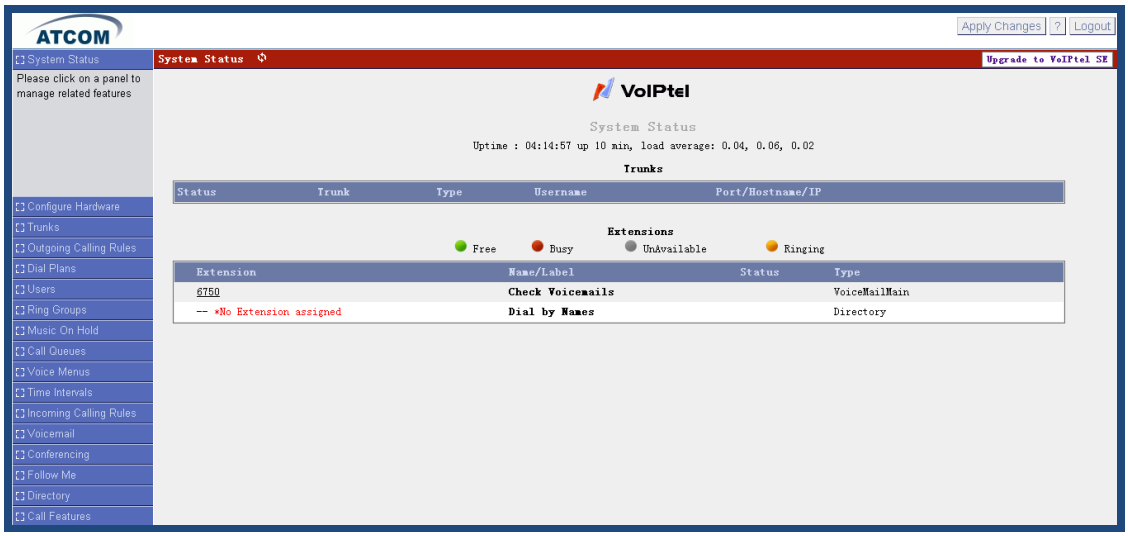

http://ArtTel.ru

2.2 SSH Access by Putty

Logging into IP04 by SSH, you can configure IP04 by Linux command.

1) Please open your putty software, and input the IP04 IP address in the **Host Name** textbox, input port number in the **Port** textbox, click the **SSH** Connection type, then click **open** button. Please refer to the following screen:

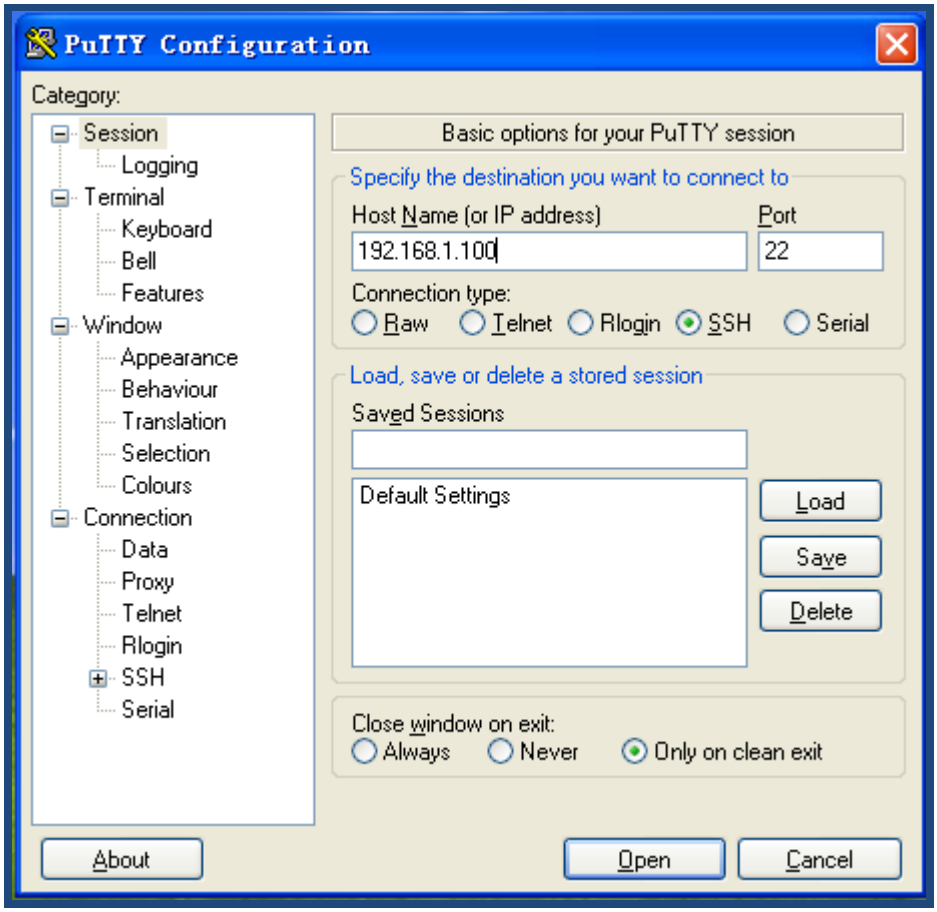

2) Please input username: root, and the default password: 12xerXes16 in the following screen, you can access to IP04 successfully.

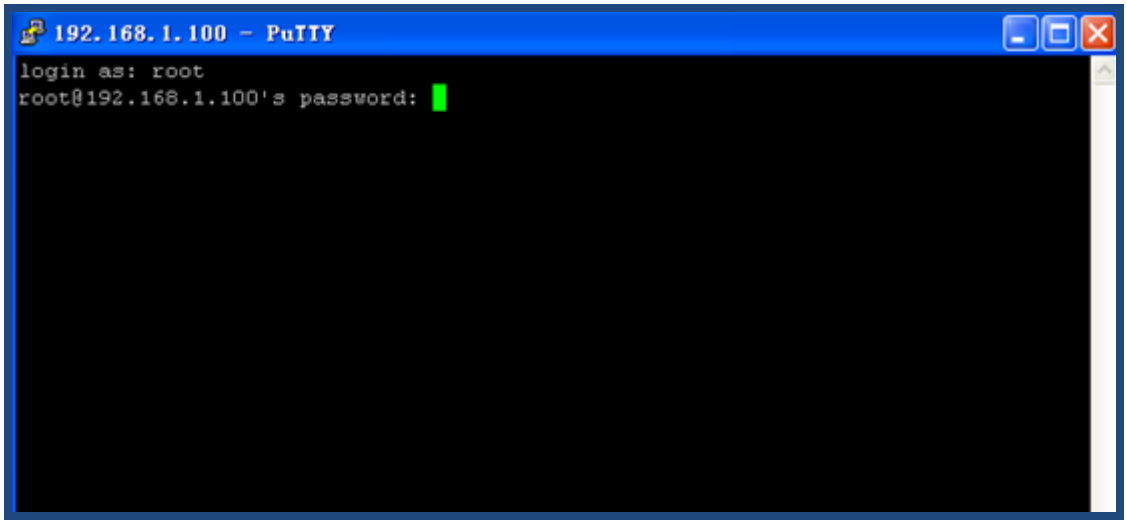

http://ArtTel.ru

When you log into IP04 successfully, you can get the following illustration:

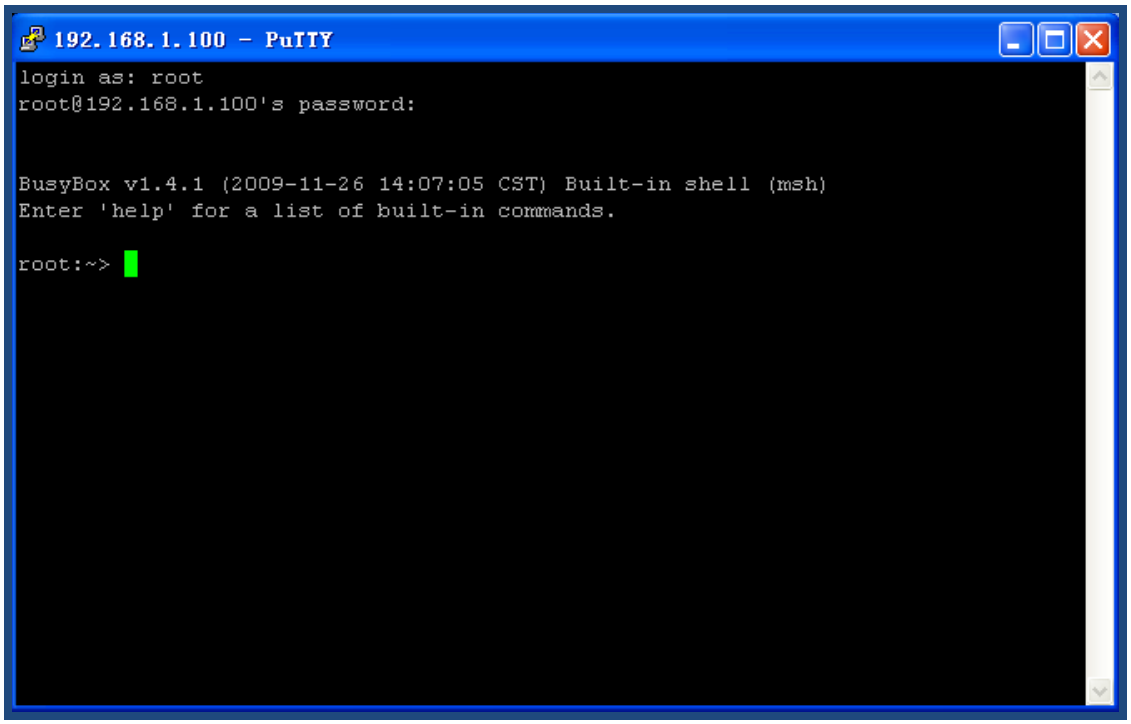
192.168.1.100 - PuTTY
login as: root
root@192.168.1.100's password:
BusyBox v1.4.1 (2009-11-26 14:07:05 CST) Built-in shell (msh)
Enter 'help' for a list of built-in commands.
root:~>

2.3 Access by Browser with Fallback IP Address

This way only be supported by the latest version (voiptel_ce_ip04-0.3.6) of IP04. If you forget the IP Address of IP04 you have set up, you can use the fallback IP Address: 172.31.255.254/30. Before logging into IP04, please set up the IP Address of your PC: 172.31.255.253 and SubMask: 255.255.255.252. At last, you can open your browser and enter:172.31.255.254 to log into the web page of IP04.

2.4 Console Port Access to IP04

If you do not have network connection between IP04 and PC, you can try to access to IP04 by console port. Please try to do as the following steps:

1. Please connect the console port of IP04 to your PC's console port with RS232 console cable, you can refer to the following illustration:

http://ArtTel.ru

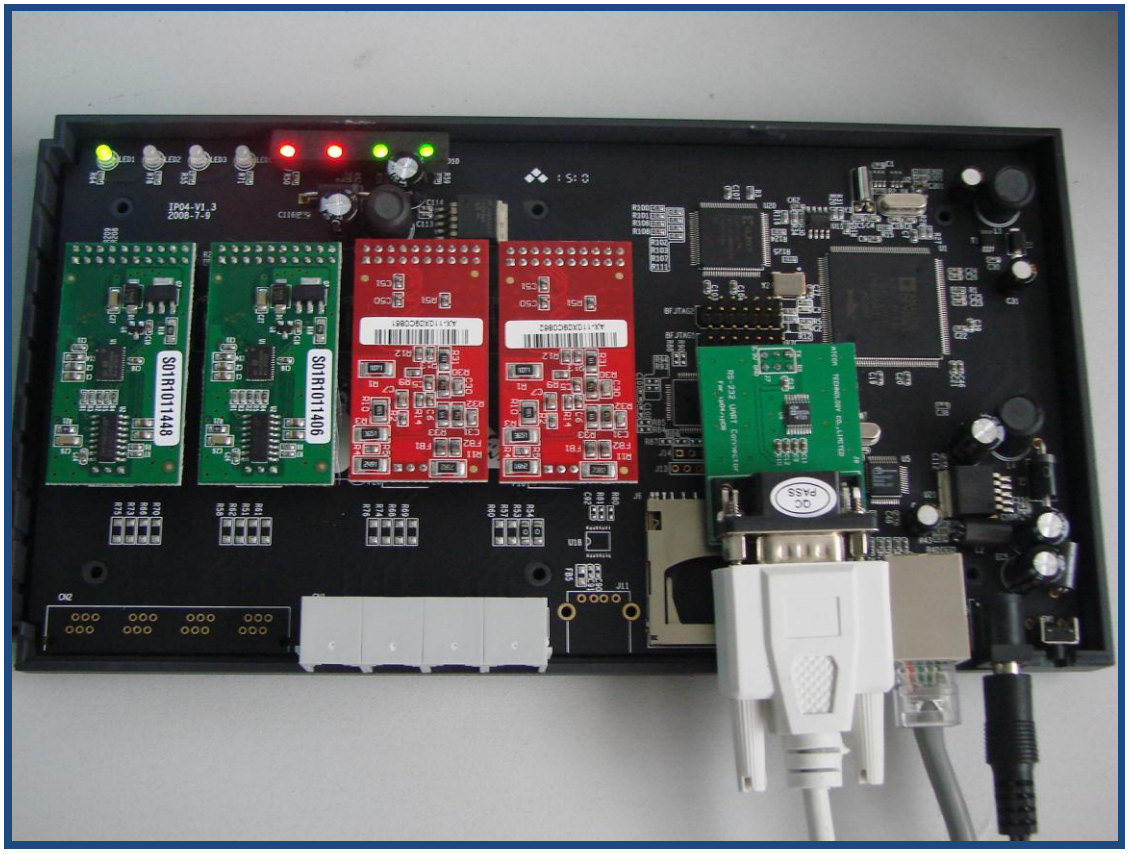

2. Please run your Hyper Terminal, and set up the console port like the following:
   Bits per second: 115200
   Data bits : 8
   Parity: None
   Stop bits: 1
   Flow control: None
3. Change the IP Address by Hyper Terminal

The default IP address of IP-04 is 192.168.1.100. Your network may have a different IP address range such as 192.168.10.xx. In this situation, you can not access to IP-04 by putty and browser if you do not change the IP-04 IP address. So you have to change the IP address for IP-04 by Hyper Terminal to make it in the same network segment as your LAN.

After you have accessed to IP-04 by Hyper Terminal, please use the following command to change the IP address for IP-04.

root:~> ifconfig eth0 192.168.1.151**(the IP address you want to set for IP-04)**

By this way, the IP address you set for IP-04 is temporary, it will recover to the original default IP address after rebooting. If you want to give a static and permanent IP address for IP-04, you can try to set it in web GUI, for detail steps please refer to chapter 3.

http://ArtTel.ru

Chapter 3 Configure IP04 by Web GUI

3.1 System Status

In the system status screen, it displays the functions you configured, such as: trunks, extensions, conference and so on like the following screen:

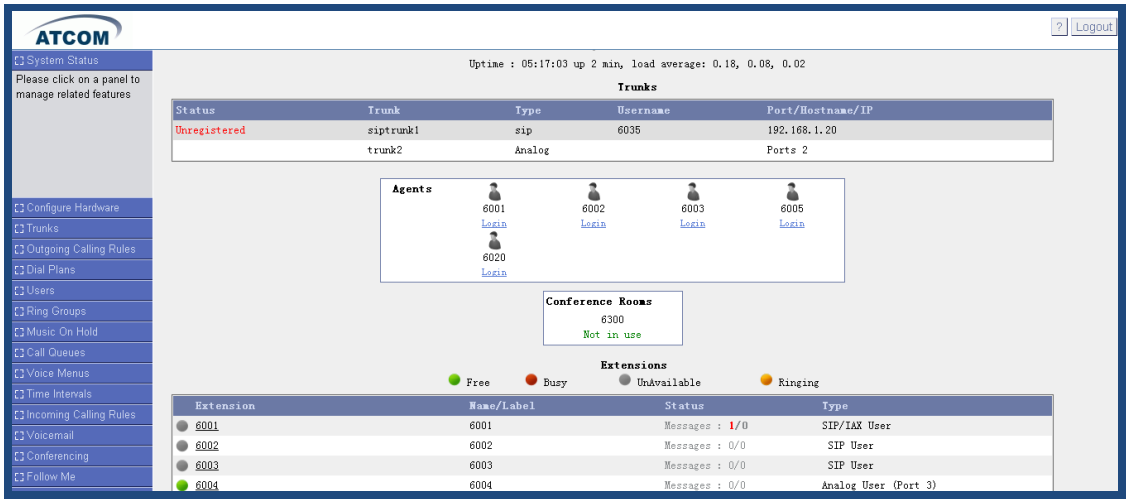

3.2 Configure Hardware

In the configure hardware page, it includes the following components: analog hardware, tone region, advanced settings.

Analog Hardware

When you boot the IP04, which will detect the FXO and FXS modules automatically, the analog hardware component displays the modules which are detected correctly.

Tone Region

You should select the tone region according to your country, if it does not have your country's name in the dropdown list, please ask your service operator which kind of tone region is used in your area.

3.3 Trunks

To receive calls from PSTN and make calls to the outside world, you have to use trunk. Please select the **Trunks** option from the vertical menu on the left of the main page, then you can get the following screen:

http://ArtTel.ru

System Status
Configure Hardware
Trunks
Trunks are outbound lines used to allow the system to make calls to the real world. Trunks can be VoIP lines or traditional telephony lines.
Manage Analog trunks
Analog Trunks
Service Providers
VOIP Trunks
T1/E1/BRI Trunks
New Analog Trunk
No Analog Trunks Defined.

3.3.1 Create Analog Trunks

Analog trunk is associated with FXO port, and it will call outside by PSTN line. Click on **New Analog Trunk** in the illustration above, the pop-up screen is where you create and set up trunk.

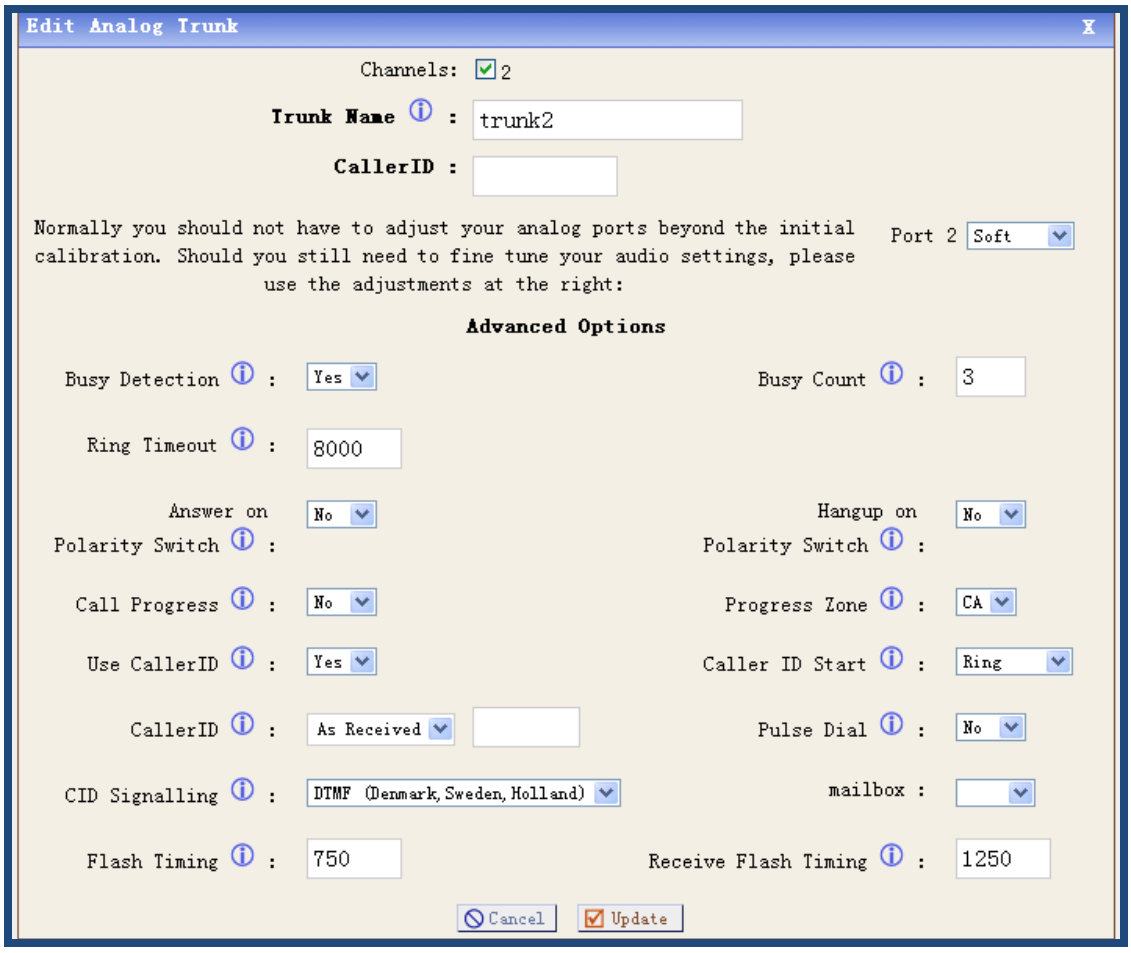
Edit Analog Trunk
Channels: 2
Trunk Name : trunk2
CallerID :
Normally you should not have to adjust your analog ports beyond the initial calibration. Should you still need to fine tune your audio settings, please use the adjustments at the right:
Port 2 Soft
Advanced Options
Busy Detection : Yes
Busy Count : 3
Ring Timeout : 8000
Answer on Polarity Switch : No
Hangup on Polarity Switch : No
Call Progress : No
Progress Zone : CA
Use CallerID : Yes
Caller ID Start : Ring
CallerID : As Received
Pulse Dial : No
CID Signalling : DTMF (Denmark, Sweden, Holland)
mailbox :
Flash Timing : 750
Receive Flash Timing : 1250
Cancel
Update

There are many parameters for you to set up, I just set the following two parameters:
Channels: select the FXO port you want to use. Here I use the port 2.
Trunk Name: a unique label to help you identify the trunk when listed in outgoing calling rules and incoming calling rules. Here I use the trunk2 as my trunk name.

For the advanced options, you can put your cursor on the ⓘ label, you can get the information of the parameter, customers have to set these parameters according to your service provider and your need.

http://ArtTel.ru

3.3.2 VoIP Trunks

A VoIP service provider (VSP) that you have signed up with is also a trunk. Via the VoIP trunk you can dial via the VoIP service to reduce your cost when making international calls. You can set up the VoIP trunk to make calls to the PSTN or other VoIP network depends on the service you use. You can also use the VoIP trunk to link headquarter and branch offices for free internal calls.
Click on **New SIP/IAX Trunk**, the following screen is where you create and set up VoIP trunk:

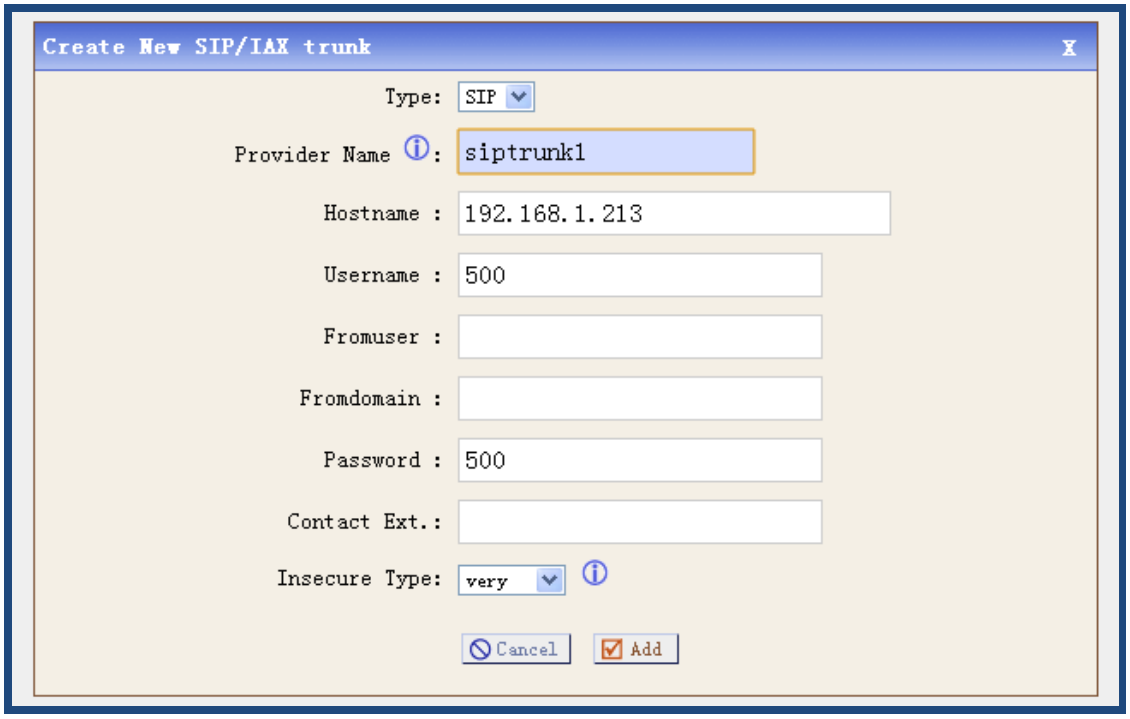

The important parameters are:
Type: You can select SIP or IAX type to meet your need.
Provide Name: a unique label to help you identify the trunk when listed in outgoing calling rules and incoming calling rules.
Hostname: the IP address or domain name of your service provider's server.
Username: the username that your service provider configured.
Password: the password that your service provider configured for the user.

3.4 Outgoing Calling Rules

Outgoing calling rules is used to route an outgoing call, when you make an external call, which trunk and what dial-pattern the call used are configured in outgoing calling rules. Please select the Outgoing Calling Rules option from the vertical menu on the left of the main page, then you can get the following screen:

http://ArtTel.ru

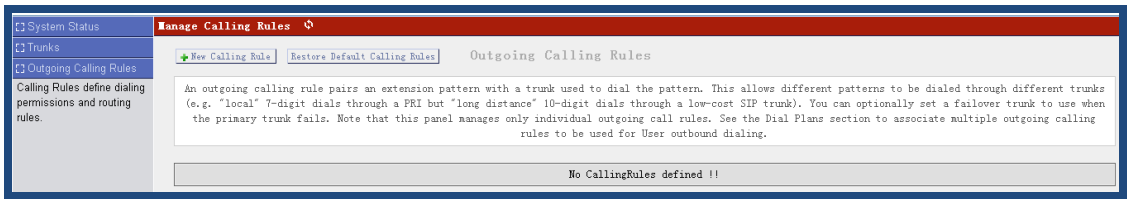
System Status
Trunks
Outgoing Calling Rules
Calling Rules define dialing permissions and routing rules.
Manage Calling Rules
New Calling Rule
Restore Default Calling Rules
Outgoing Calling Rules
An outgoing calling rule pairs an extension pattern with a trunk used to dial the pattern. This allows different patterns to be dialed through different trunks (e.g. "local" 7-digit dials through a PRI but "long distance" 10-digit dials through a low-cost SIP trunk). You can optionally set a failover trunk to use when the primary trunk fails. Note that this panel manages only individual outgoing call rules. See the Dial Plans section to associate multiple outgoing calling rules to be used for User outbound dialing.
No CallingRules defined !!

Click on **New Calling Rule** button on the illustration above, the following screen is where you create and set up outgoing calling rule:

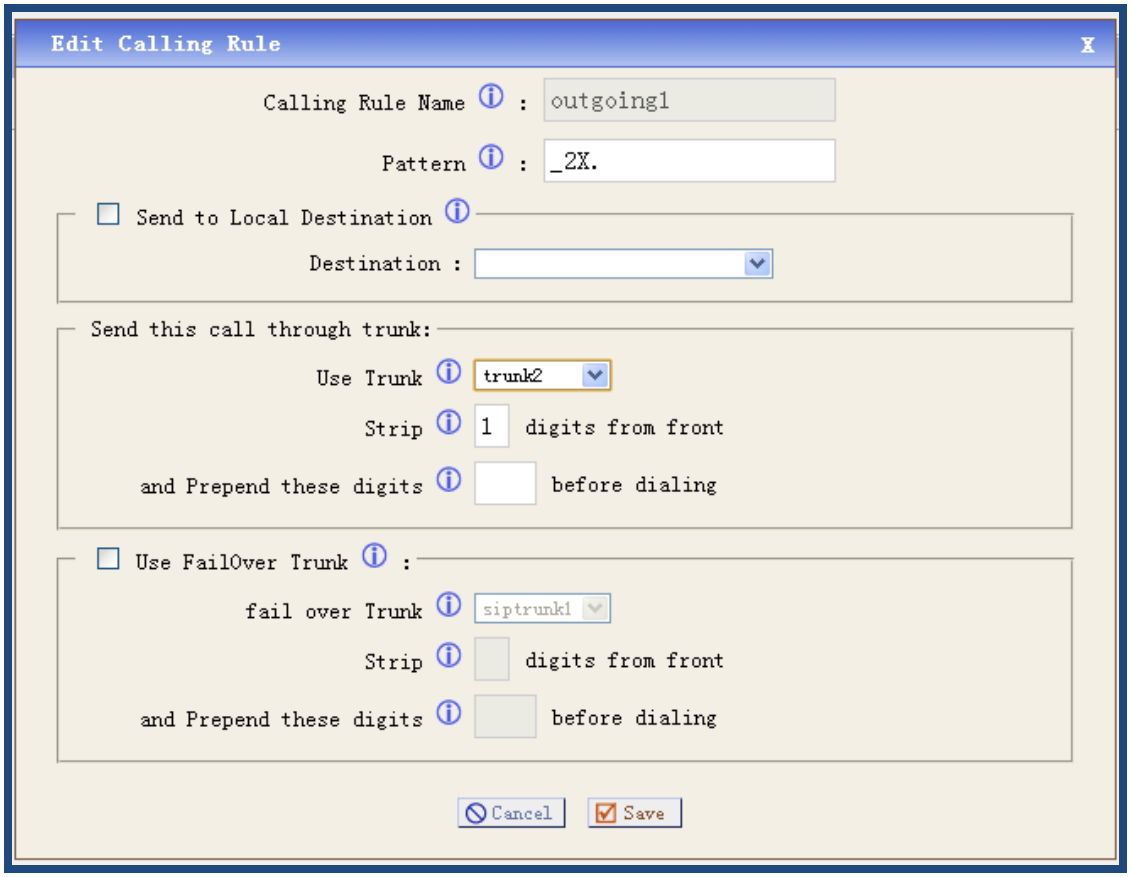

The important parameters I configured are below:

Calling Rule Name: a unique label to help you identify the outgoing calling rule when listed in dial plans, I use outgoing1 as the calling rule name here.

Pattern: it acts like a filter for marching numbers you dialed, here I set up _2X., it means any number you dial out with prefix 2 will use this outgoing call rule.

Use Trunk: select the trunk for outgoing calling rule, here I select the trunk2 I set up before.

Strip: I press 1 here, it will strip the first digit of the number string you dialed.

You can get the detail information about every single parameter by putting your cursor on the label.

At last, please click on **Save** button, and click on **Apply Changes** button in up right corner of the main page.

The way of outgoing calling rules works:

Every time you dial a number, asterisk will do the following in strict order:

- Examine the number you dialed.
- Compare the number with the pattern that you have defined in your first outgoing rule and if

http://ArtTel.ru

matches, it will initiate the call using that trunk. If it does not match, it will compare the number with the pattern that you have defined in the second outgoing rule and so on.

- Pass the number to the appropriate trunk to make the call.

3.5 Dial Plans

A DialPlan is a set of Calling Rules that can be assigned to one or more users. Please select the **Dial Plans** option from the vertical menu on the left of the main page, then you can get the following screen:

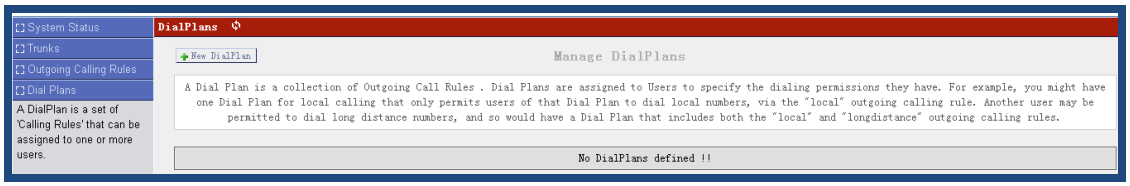
System Status
Trunks
Outgoing Calling Rules
Dial Plans
A DialPlan is a set of 'Calling Rules' that can be assigned to one or more users.
DialPlans
New DialPlan
Manage DialPlans
A Dial Plan is a collection of Outgoing Call Rules . Dial Plans are assigned to Users to specify the dialing permissions they have. For example, you might have one Dial Plan for local calling that only permits users of that Dial Plan to dial local numbers, via the "local" outgoing calling rule. Another user may be permitted to dial long distance numbers, and so would have a Dial Plan that includes both the "local" and "longdistance" outgoing calling rules.
No DialPlans defined !!

Click on **New DialPlan** button on the illustration above, the following screen is where you create and set up dial plan:

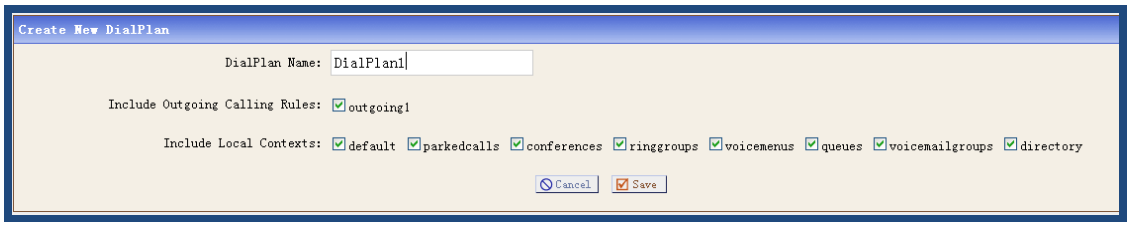
Create New DialPlan
DialPlan Name: DialPlan1
Include Outgoing Calling Rules: outgoing1
Include Local Contexts: default parkedcalls conferences ringgroups voicemenus queues voicemailgroups directory
Cancel
Save

DialPlan Name: a unique label to help you identify the dial plan when listed in user component, you have to set up a dial plan name and select outgoing call rule and local context that you want to use.

3.6 Users

Users component is used to add or remove Analog, SIP, IAX extension. Please select the **Users** option from the vertical menu on the left, then you can get the following screen:

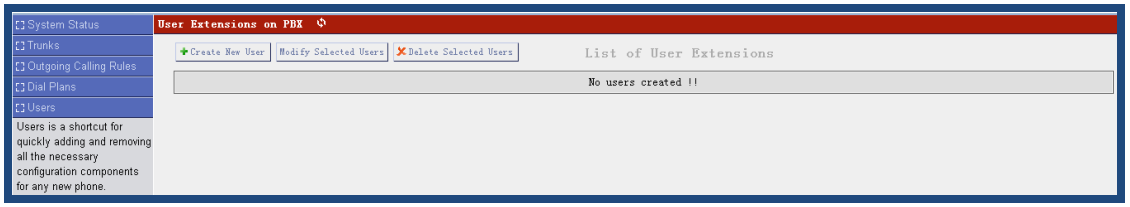
System Status
Trunks
Outgoing Calling Rules
Dial Plans
Users
Users is a shortcut for quickly adding and removing all the necessary configuration components for any new phone.
User Extensions on PBX
Create New User
Modify Selected Users
Delete Selected Users
List of User Extensions
No users created !!

3.6.1 Create SIP/IAX User

Click on **Create New User** button on the illustration above, the following screen is where you create and set up user:

http://ArtTel.ru

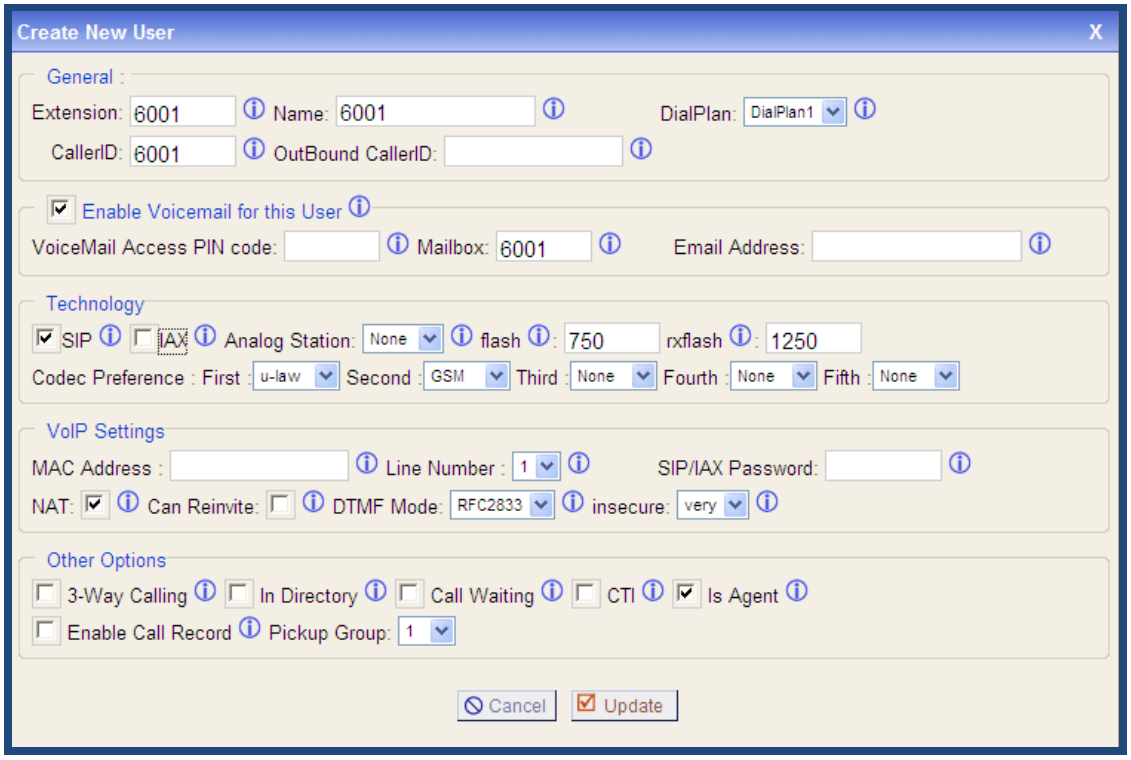

In General component, you have to set up Extension, CallerID, Name, OutBound CallerID parameters, and choose a DialPlan for the extensions. Here I set up user 6001, and select DialPlan1 for the user.

I select **Enable Voicemail for this User option**, so the user has voicemail function.

In the Technology component, you have to select SIP or IAX. Here I want to configure a SIP user, so I select SIP. For the Codec Preference, only the first two types of code you set are available.

In the **Other Options** component, I select **Is Agent** which will be listed in Call Queues as a selectable member for call queue.

At last, please click on **Update** button, and click on **Apply Changes** button in up right corner of the main page.

3.6.2 Create Analog User

Click on **Create New User** button, the following screen is where you create and set up user:

http://ArtTel.ru

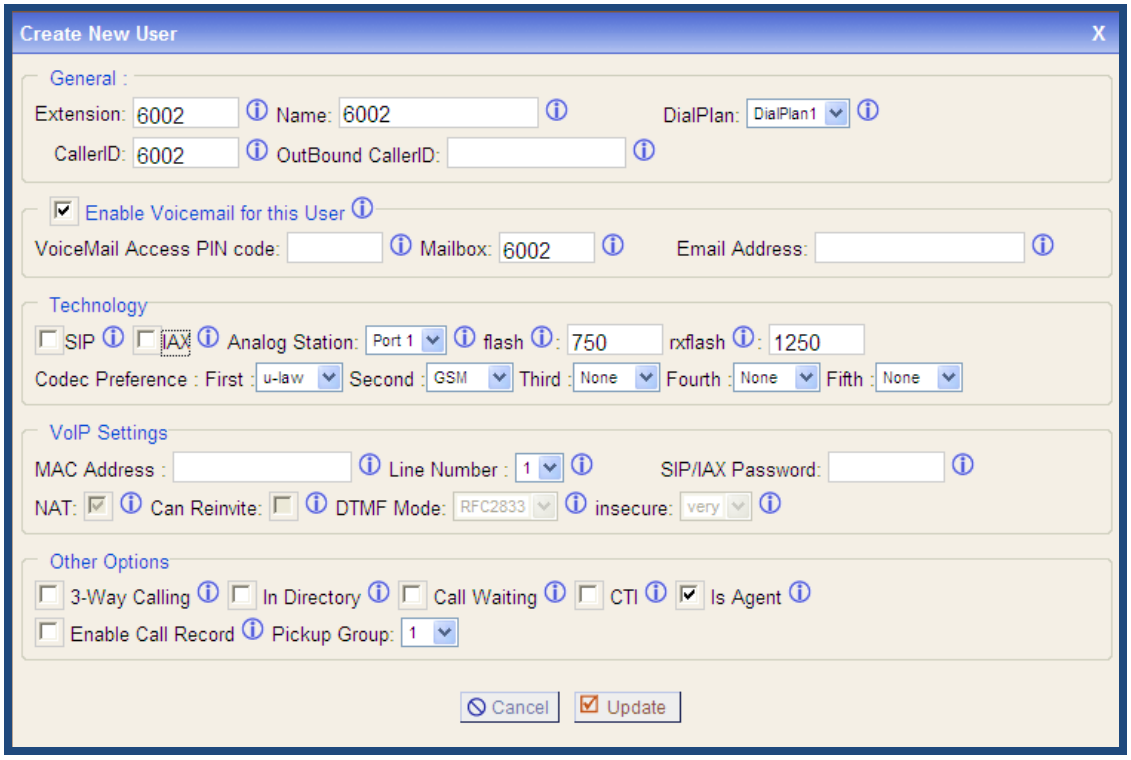

In the General component, you have to setup Extension, CallerID, Name, OutBound CallerID parameters, and choose a dialplan for the phone. Here I set up user 6002, and select DialPlan1 for the user.

I select **Enable Voicemail for this User option**, so the user has voicemail function.

In the Technology componet, you have to select the port in which the analog phone will be plugged from the drop-down list of **Analog Station**. I select **Enable Voicemail for this User option**, so the user have voicemail function.

In the **Other Options** component, I select **Is Agent** which will be listed in Call Queues as a selectable member for call queue.

At last, please click on **Update** button, and click on **Apply Changes** button in up right corner of the main page.

Attension: in the textbox of Extension, the value you set is limited to a range, you can adjust the range in the following screen to meet your requirement. Please select the **Options** option from the vertical menu on the left, then you can get the following screen:

http://ArtTel.ru

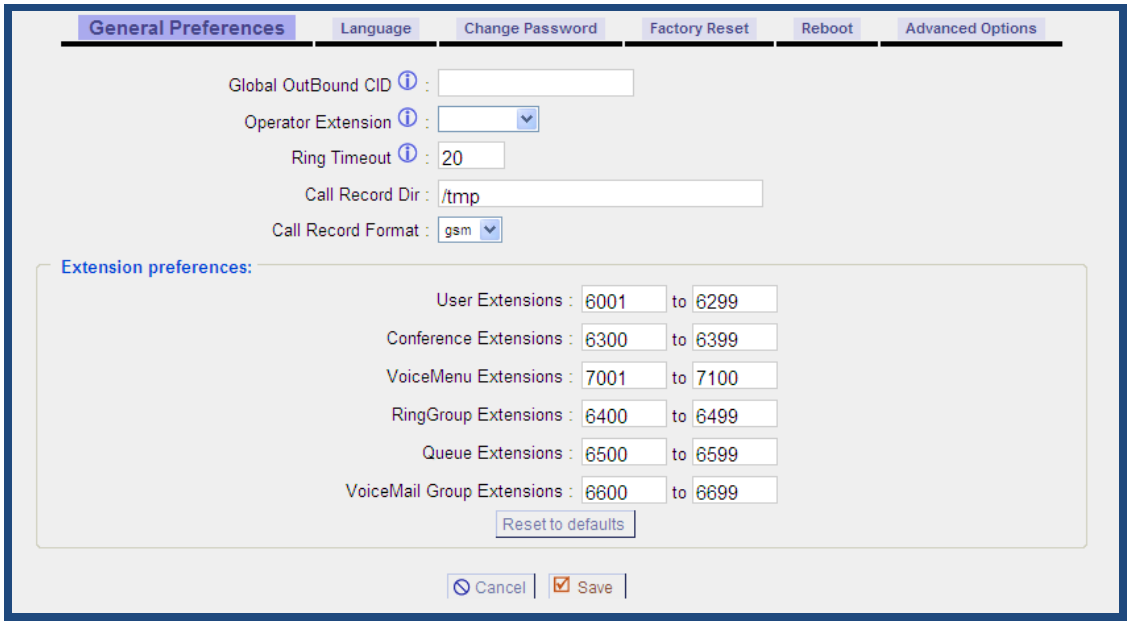

3.7 Ring Groups

Define Ring groups to dial more than one extension simultaneously, or to ring more than one phone sequentially. This feature may also be called Hunt groups.

Please select the **Ring Groups** option from the vertical menu on the left of the main page, then you can get the following screen:

System Status
Trunks
Outgoing Calling Rules
Dial Plans
Users
Ring Groups
Define Ringgroups to dial more than one extension simultaneously, or to ring more than one phone sequentially. This feature may also be called Huntgroups.
Manage RingGroups
New RingGroup
Manage RingGroups
No RingGroups defined !!

Click on **New RingGroup** button on the illustration above, the following screen is where you create and set up ring group:

http://ArtTel.ru

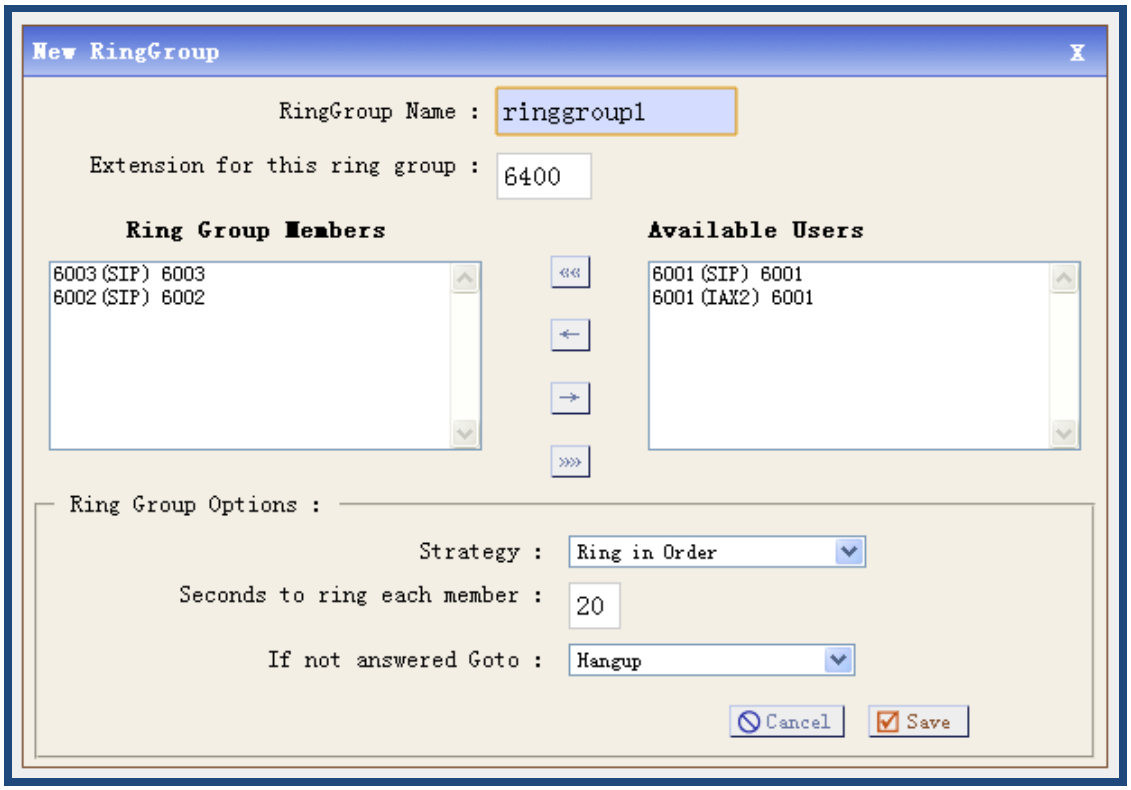

Set the ring group name and extension for the ring group, select ring group members from available users.

Select strategy for ring group:

Ring in Order: when someone calls the ring group, the ring group member will ring in order.

Ring all simultaneously: when someone calls the ring group, all of the ring group member will ring at the same time.

If not answered Goto: choose a destination from the drop-down list, when no one in the ring group answers the call.

At last, please click on **Update** button, and click on **Apply Changes** button in up right corner of the main page.

3.8 Call Queues

Please select the **Call Queues** option from the vertical menu on the left of the main page, then you can get the following screen:

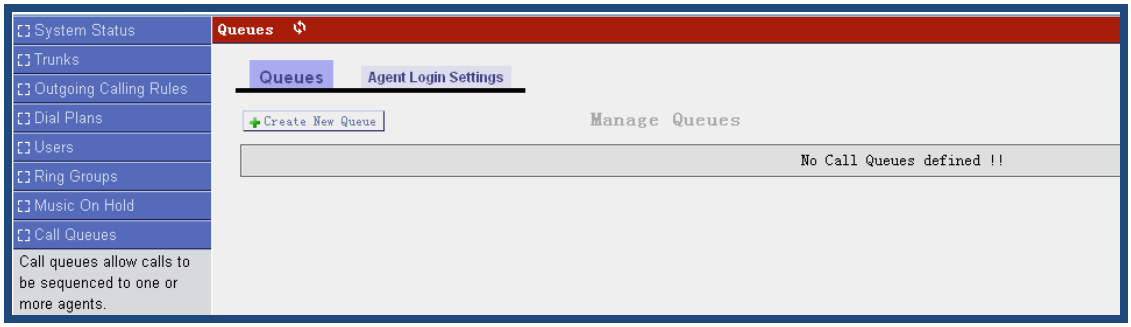

Click on **Create New Queue** button on the illustration above, the following screen is where you

http://ArtTel.ru

create and set up call queue:

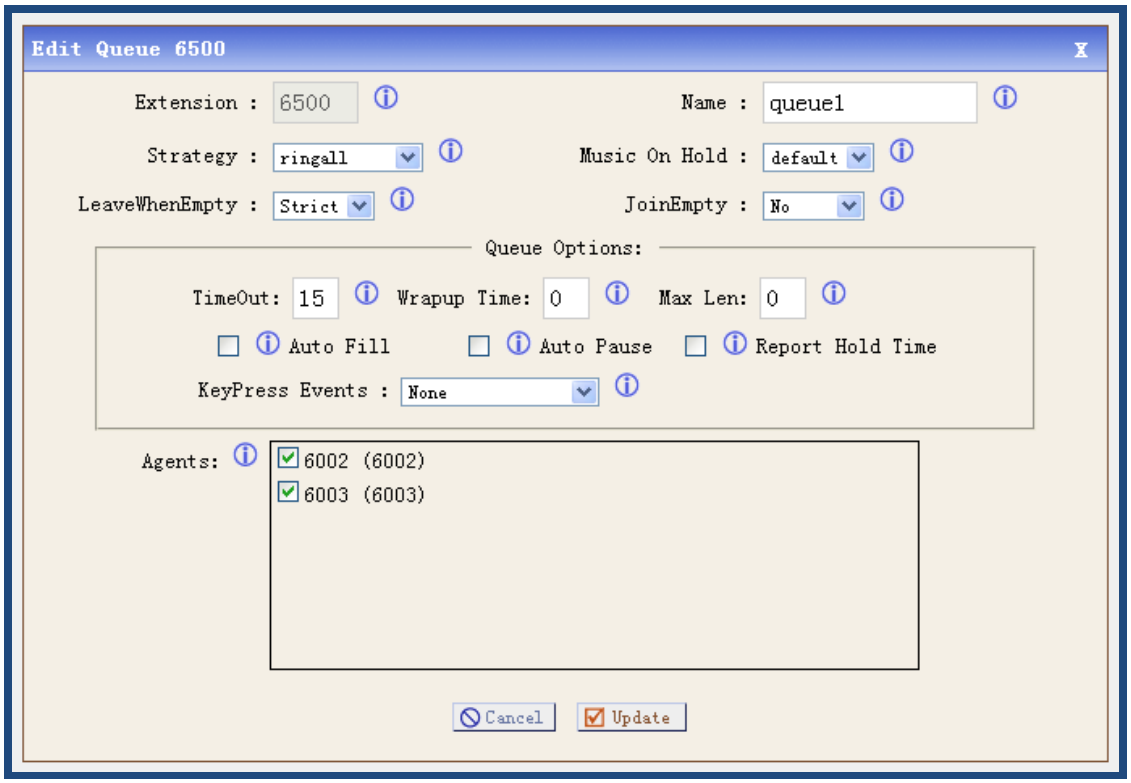

Extension: a unique label to help you identify the call queue when listed in **outgoing calling rules** component.

Agents: select the users which you want them to be queue member.

You can get information of other parameters by putting your mouse on the ⓘ label.

At last, please click on **Update** button, and click on **Apply Changes** button in up right corner of the main page.

3.9 Voice Menus

Like most organization, we would like to redirect all of the incoming calls automatically. The voice menu is very handy for these sorts of things. The system should allow callers to make the selection according to the voice menu.

Please select the **Voice Menus** option from the vertical menu on the left, then you can get the following screen:

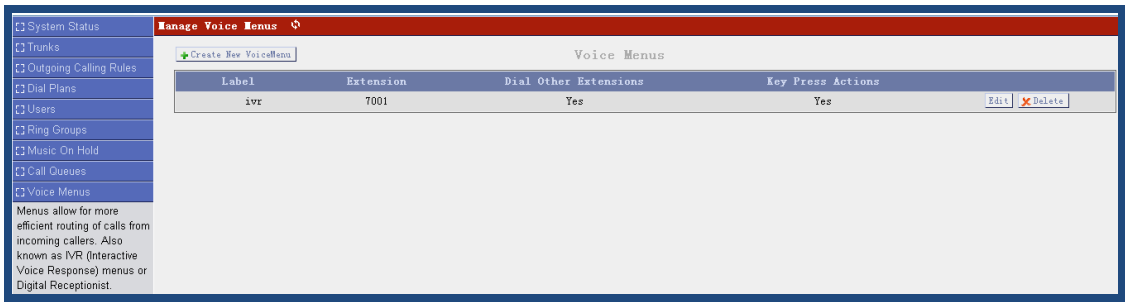

http://ArtTel.ru

Click on **Create New VoiceMenu** button on the illustration above, the following screen is where you create and set up voice menu:

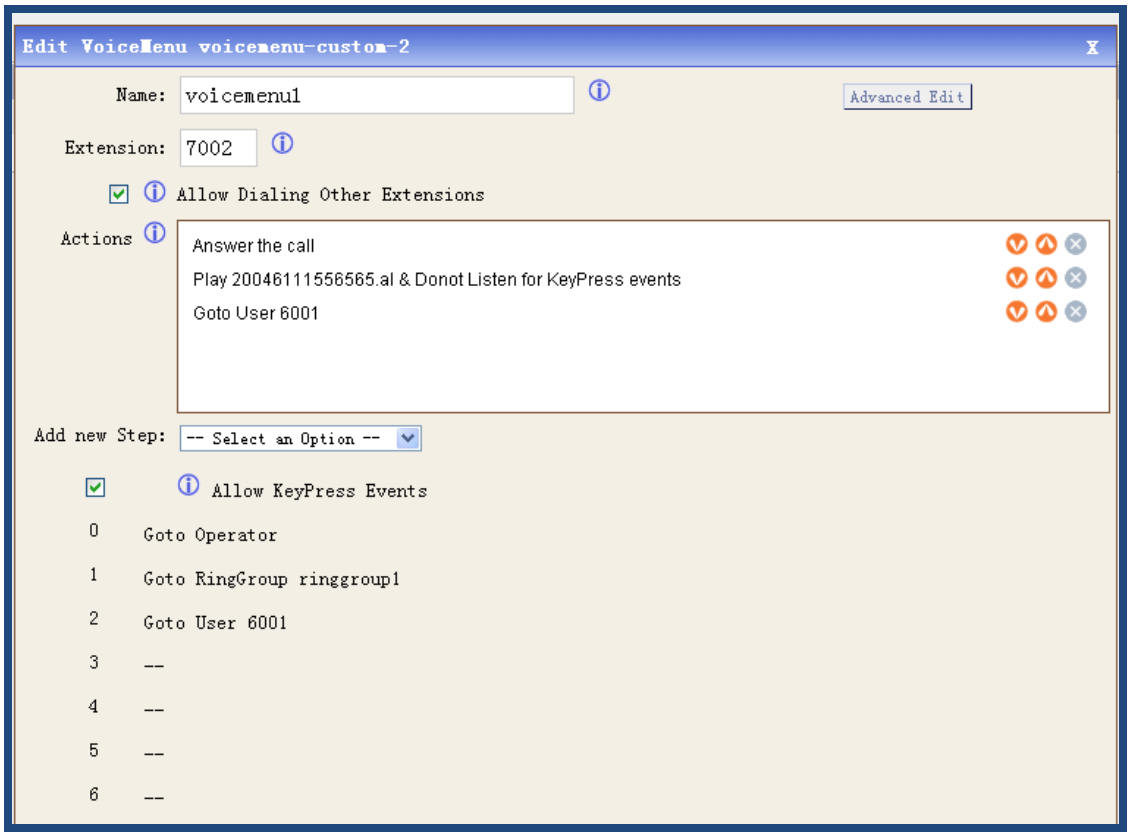

Name: a unique label to help you identify the voice menu when listed in incoming calling rules.

Add new Step: select an action from the drop-down list. I add three steps above, so it will answer the call, and play a sound file, at last go to user 6001.

Click on **Allow KeyPress Events**: when the caller is in voice menu, they can press some specific numbers which are defined here to enter other destination. Here I define three numbers for going to operator, ringgroup, and user respectively.

At last, please click on **Save** button, and click on **Apply Changes** button in up right corner of the main page.

3.10 Time Intervals

Time Intervals defines ranges of working time that will be used by call routing features. Please select the **Time Intervals** option from the vertical menu on the left of the main page, then you can get the following screen:

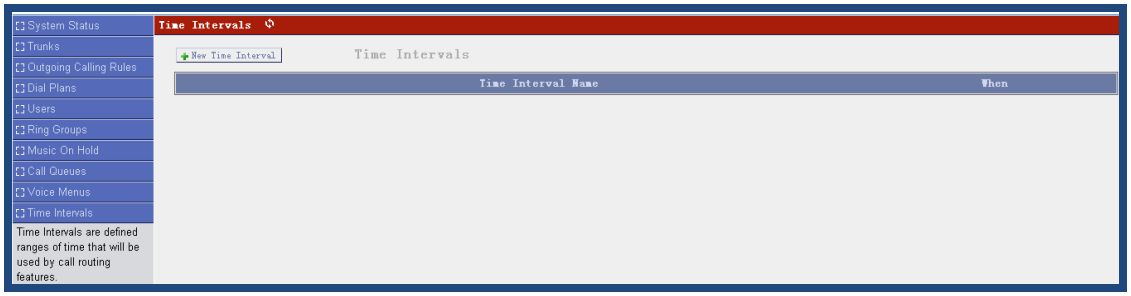

http://ArtTel.ru

Click on **New Time Interval** button on the illustration above, the following screen is where you create and set up time interval:

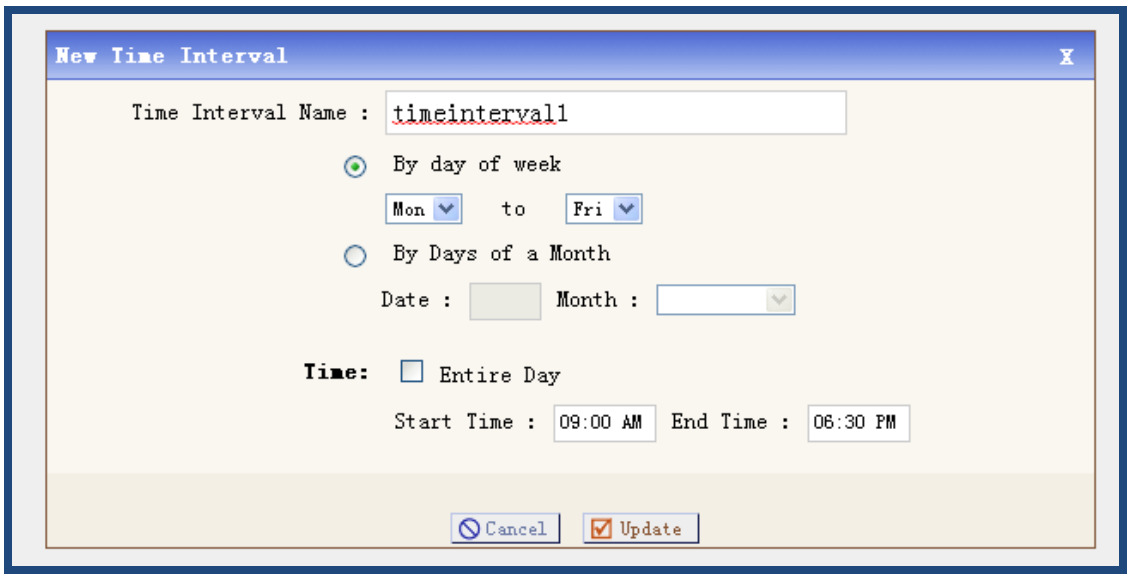

Time Interval Name: a unique label to help you identify the time interval when listed in incoming calling rules. I set up timeinterval1 as time interval name.

By day of week: I select it from Monday to Friday, the incoming call rule only works from Monday to Friday.

Time: I set up it from 09:00 AM to 06:30 PM, the incoming call rule only works from 09:00 AM to 06:30 PM.

At last, please click on **Update** button, and click on **Apply Changes** button in up right corner of the main page.

3.11 Incoming Calling Rules

This is where the behavior of incoming calls from all trunks is being handled. When an incoming call from PSTN or VoIP trunk is received, asterisk needs to know where to direct it. It can be directed to a ring group, an extension, digital receptionist, voice menu or queue. For this purpose, Incoming Calling Rules need to be set up.

Please select the **Incoming Calling Rules** option from the vertical menu on the left of the main page, then you can get the following screen:

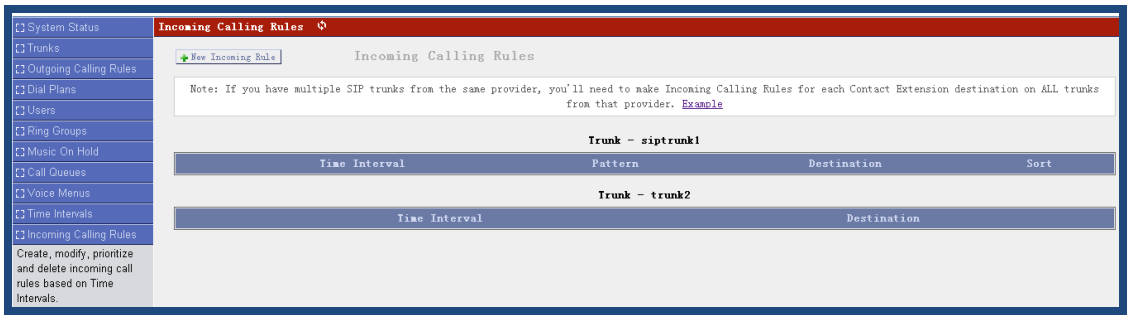

Click on **New Incoming Rule** button on the illustration above, the following screen is where you create and set up time interval:

http://ArtTel.ru

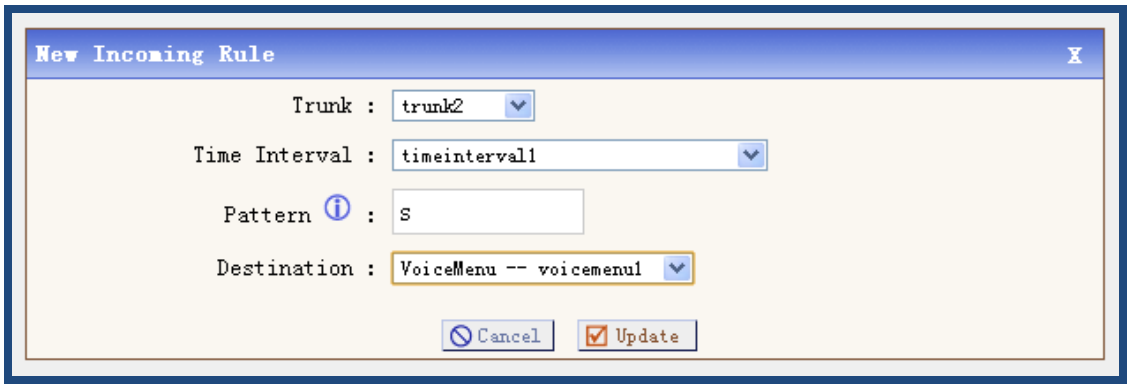

Trunk: select trunk for incoming call to use. I select trunk2 I set up before.

Time Interval: determine the time when the incoming call rule works, I select timeinterval1 I set up before.

Pattern: match the destination number, I use S which will match any destination number.

Destination: I select voicemenu1, so the call will be ruled to voice menu.

At last, please click on **Update** button, and click on **Apply Changes** button in up right corner of the main page.

3.12 Voicemail

When you call someone who does not answer the call, you can leave a voice message for the called party if the called party supports voice mail.

Please select the **Voicemail** option from the vertical menu on the left of the main page, then you can get the following screen:

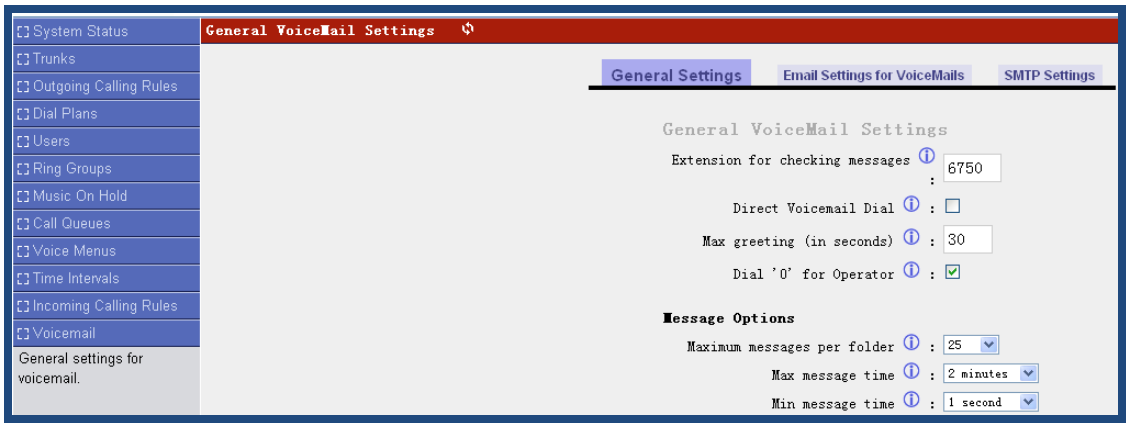

Click on **General Settings** button on the illustration above. You can see the following screen:

http://ArtTel.ru

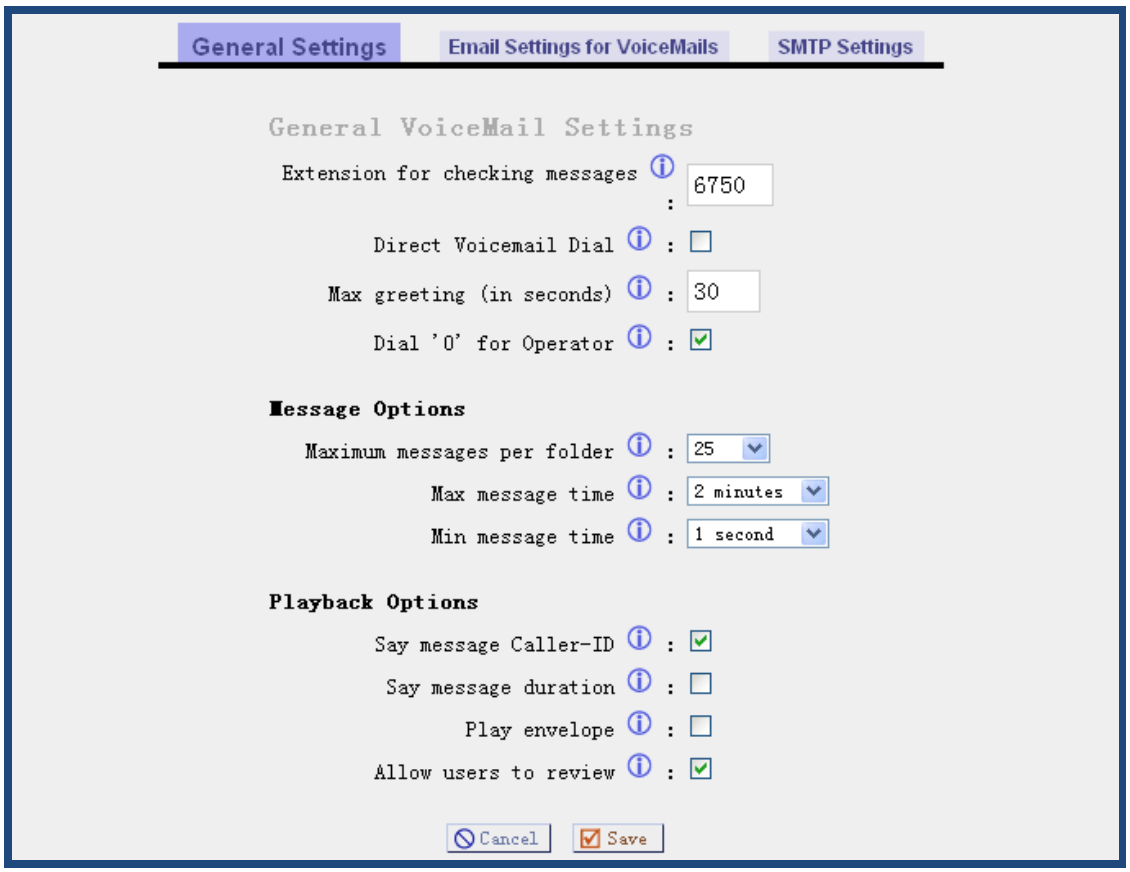

Extension for checking messages: when you dial 6750, you will hear the voice message other people left for you.

You can get information of parameters by putting your cursor on the ⓘ label. If you want to set voicemail function for the user, you have to enable voicemail component when you set up a user. Please refer to the following illustration:

http://ArtTel.ru

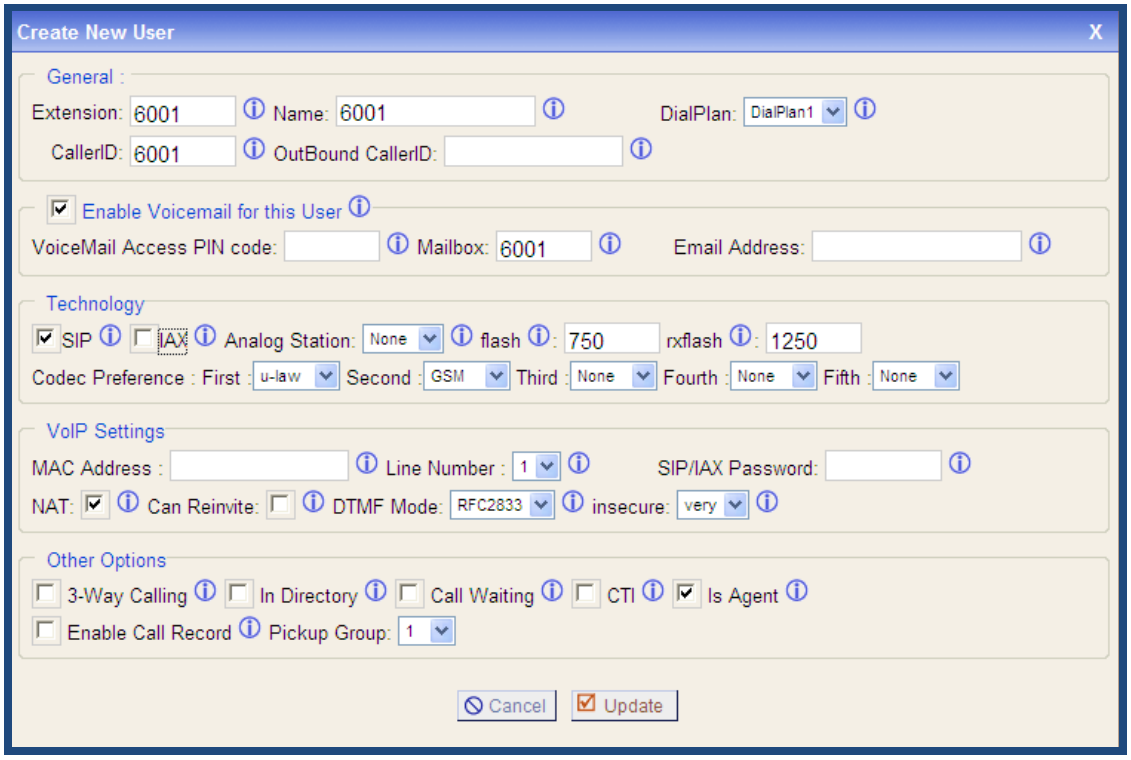

3.13 Conferencing

The conferencing function of Asterisk is similar to a Tele-conference call where multiple callers can call in and participate in a two-way conference like in a party room where everyone can talk and listen to one another or just to listen to a Tele-presentation.

Please select the **Conferencing** option from the vertical menu on the left of the main page, then you can get the following screen:

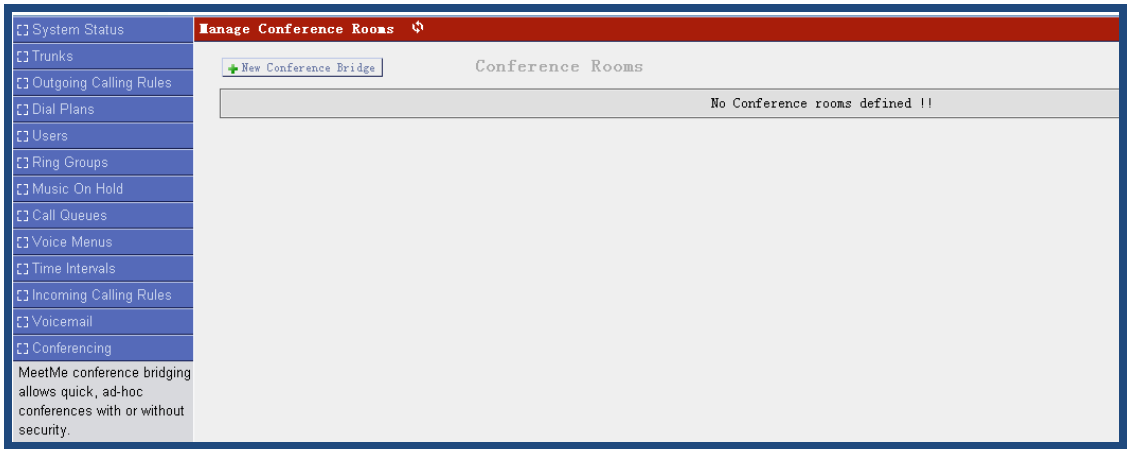

Click on **New Conference Bridge** button on the illustration above. Below is what my conference configuration page looks like:

http://ArtTel.ru

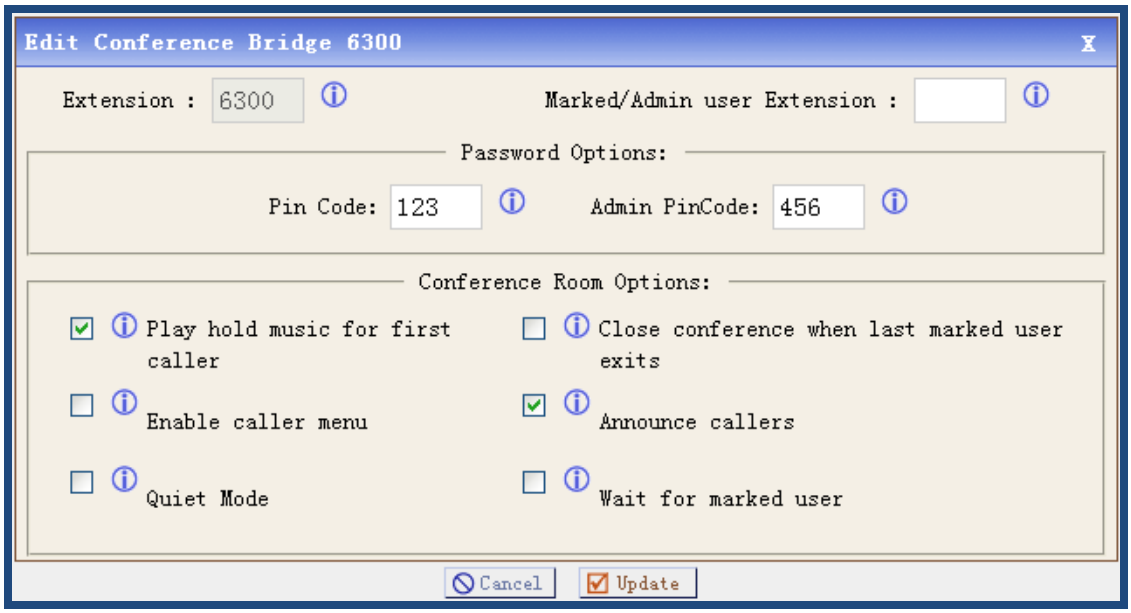

Naturally there are some options that you may wish to have for the conference room. They are entirely up to you. The main important things are for you to create the conference room number and the conference pin code for you to know how to enter into the conference. The rest of the fields are optional. You can get information of other parameters by putting your mouse on the ⓘ label.

This conference number is 6300, the Pin Code is 123 for common member, the Pin Code is 456 for Admin. So you have to dial 6300 then, press the Pin Code, if you want to enter the conference. I enable the play hold music for option and announce callers option, so the first member who enter the conference will listen to a music and the online members will be informed when someone enter the conference.

At last, please click on **Update** button, and click on **Apply Changes** button in up right corner of the main page.

3.14 Follow Me

If A calls B, B does not answer, the call will be transferred to C who is set up in follow me.

Please select the **Follow Me** option from the vertical menu on the left, then you can get the following screen:

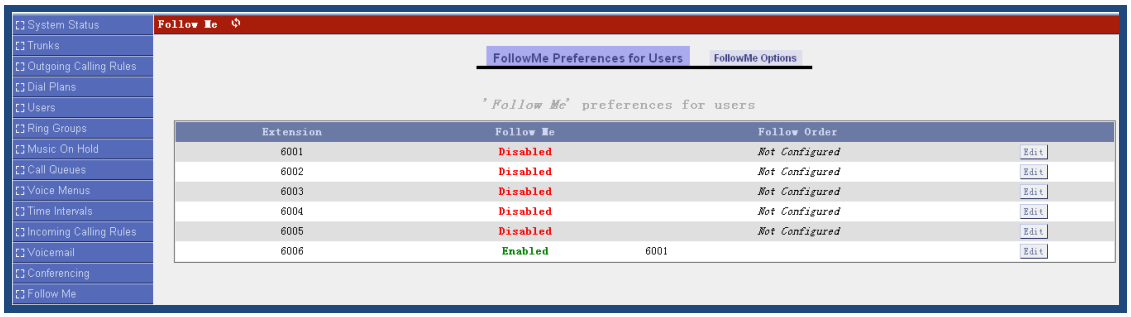

You can choose user for which you want to setup follow me function, Here taking the user 6006

http://ArtTel.ru

for an example, click on the **edit** button at the same line as 6006, you can get the following screen:

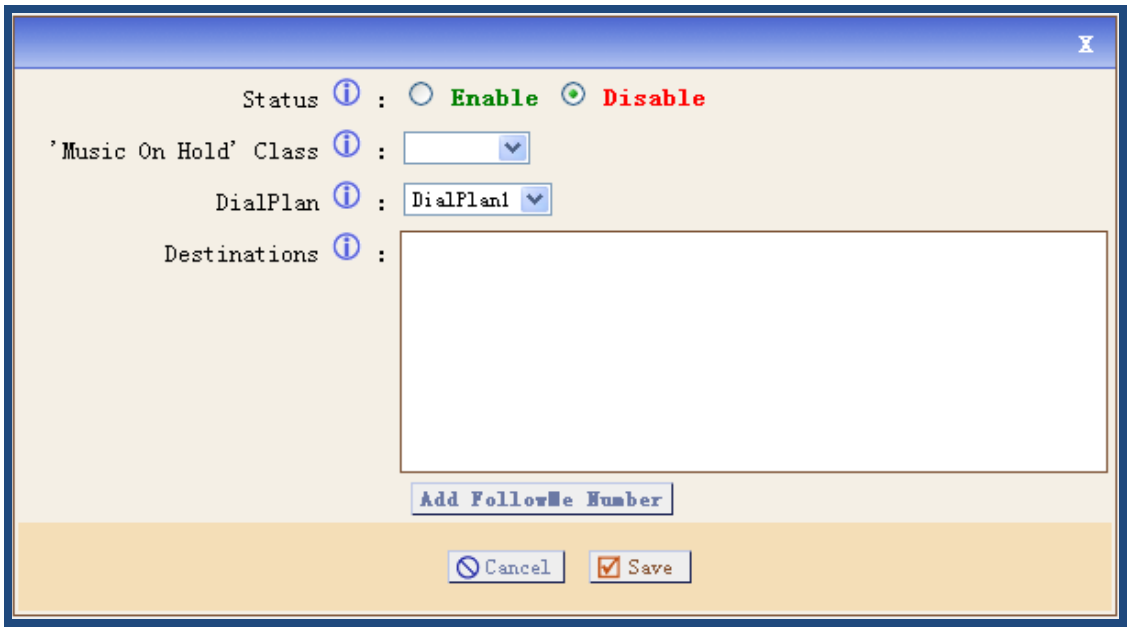

Select the **enable** status, and click on **Add FollowMe Number** button to add a destination phone.

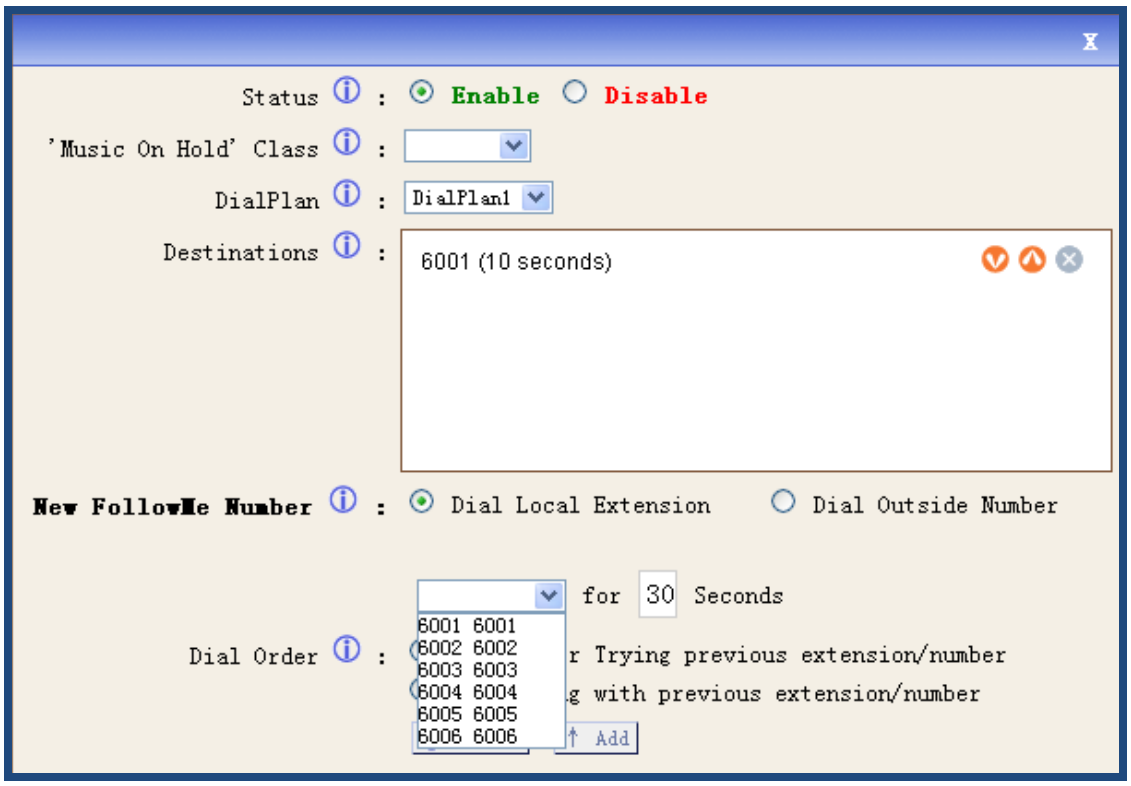

Click on **Dial Local Extension** and select 6001. Click on **Add** button and click on **Apply Changes** button in up right corner of the main page.

Through the above settings, someone calls 6006, but 6006 does not answer, the call will be transferred to 6001 automatically.

http://ArtTel.ru

3.15 VoiceMail Groups

Define VoiceMail Groups to leave a voicemail message for a group of users by dialing an extension.

Please select the **VoiceMail Groups** option from the vertical menu on the left of the main page, then you can get the following screen:

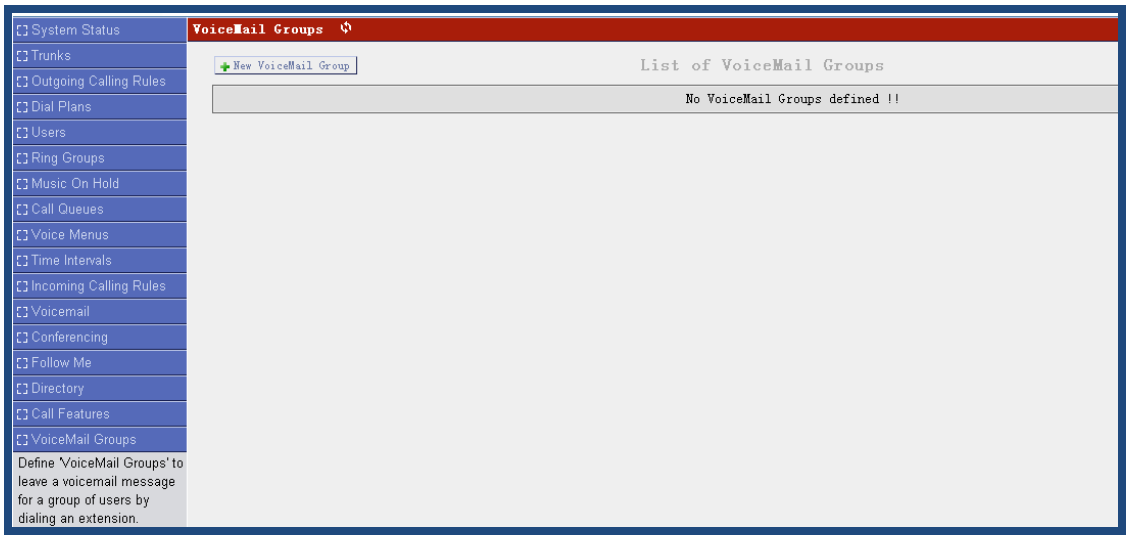

Click on **New VoiceMail Group** button on the illustration above. Below is what my VoiceMail Group configuration page looks like:

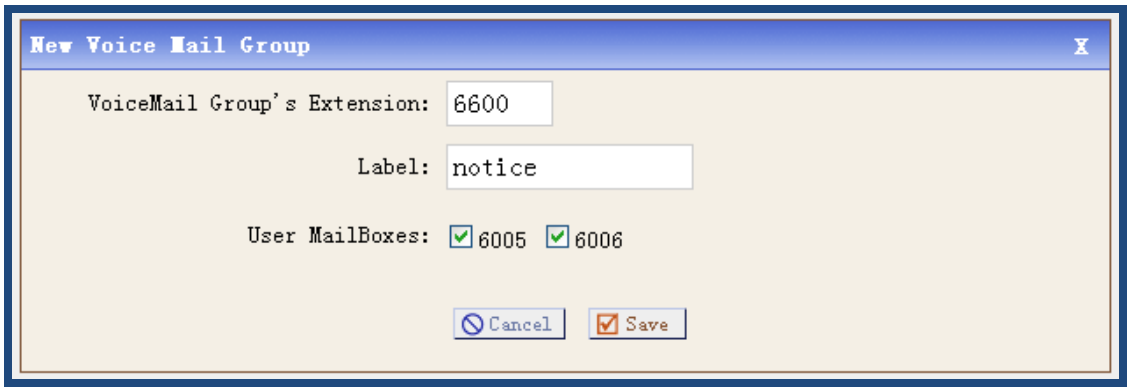

From the above settings, I can dial 6600 to leave message for user 6005 and 6006.

3.16 Voice Menu Prompts

This component is used for recording custom voice menu.

Please select the **Voice Menu Prompts** option from the vertical menu on the left of the main page, then you can get the following screen:

http://ArtTel.ru

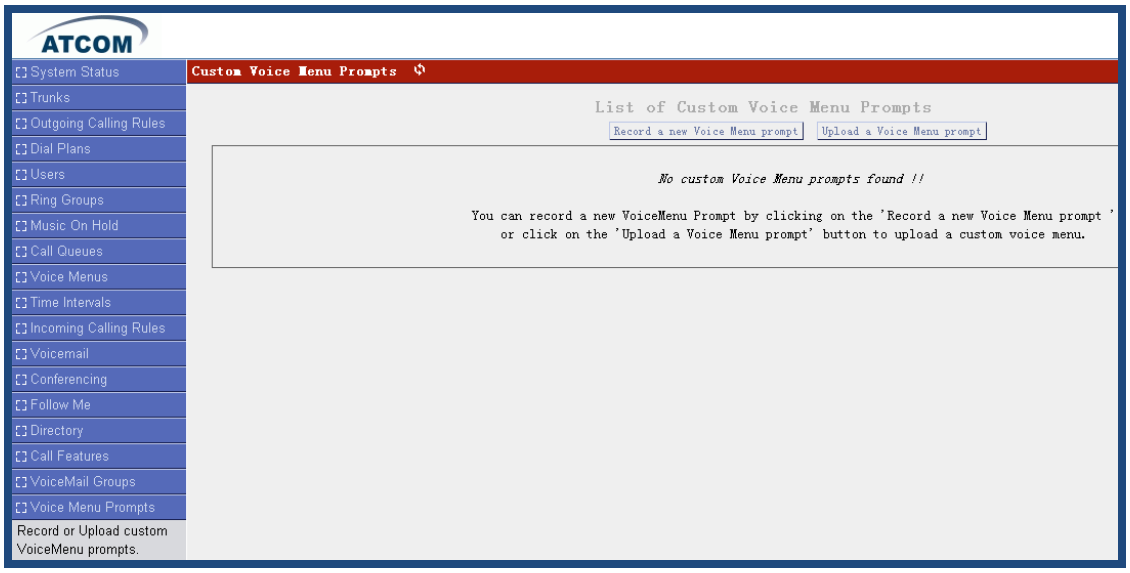
ATCOM
System Status
Trunks
Outgoing Calling Rules
Dial Plans
Users
Ring Groups
Music On Hold
Call Queues
Voice Menus
Time Intervals
Incoming Calling Rules
Voicemail
Conferencing
Follow Me
Directory
Call Features
VoiceMail Groups
Voice Menu Prompts
Record or Upload custom VoiceMenu prompts.
Custom Voice Menu Prompts
List of Custom Voice Menu Prompts
Record a new Voice Menu prompt
Upload a Voice Menu prompt
No custom Voice Menu prompts found !!
You can record a new VoiceMenu Prompt by clicking on the 'Record a new Voice Menu prompt ' or click on the 'Upload a Voice Menu prompt' button to upload a custom voice menu.

Click on **Record a new Voice Menu prompt** button on the illustration above. Below is what my Record a new Voice Menu prompt configuration page looks like:

File Name: give a filename for the record sound file, here I give a name: WelcomToATCOM
Dial this User Extension to record a new voice: dial to a user, then the user pick up the phone and speak the voice menu which will be recorded. Here I select 6001 I set up before.
Click on **Record** button, the asterisk will call to 6001, 6001 will show like the following:

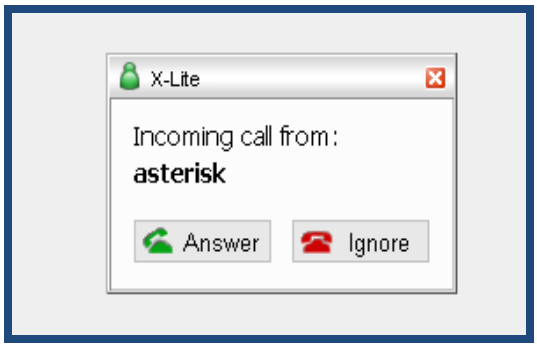

Click on **Answer** button, then you call speak and start to record what you say. The following illustration will be presented after you click on the **Answer** button.

http://ArtTel.ru

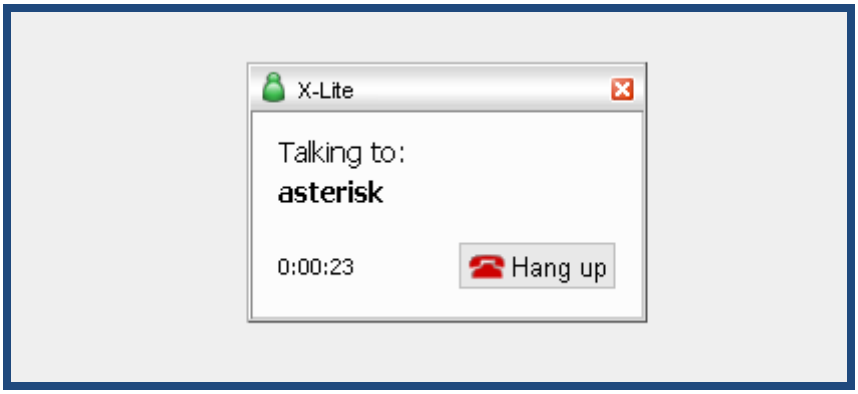

When you want to finish the record, please click on **Hang up** button.

After you finish the recording, please refresh you webpage, and enter into **voice menu prompts** component again, you can see you have had a sound file like the above.

3.17 System Info

From this component, you can easily get the basic system information, it includes:
General Information:

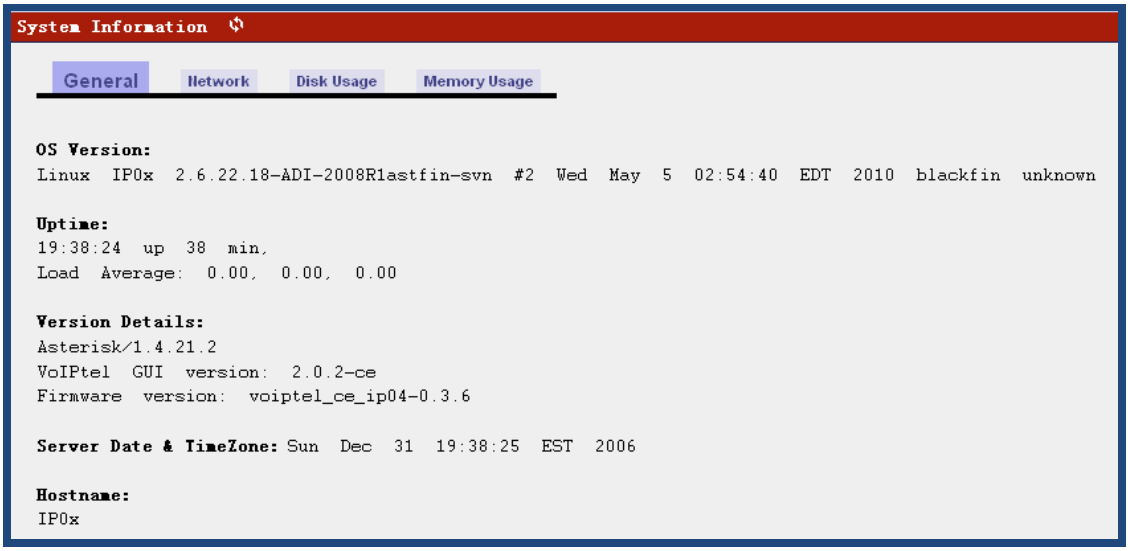

The latest version of IP04 is voiptel_ce_ip04-0.3.6. You can see the version that you are using from **Version Details** in the above illustration.

http://ArtTel.ru

Network Information:

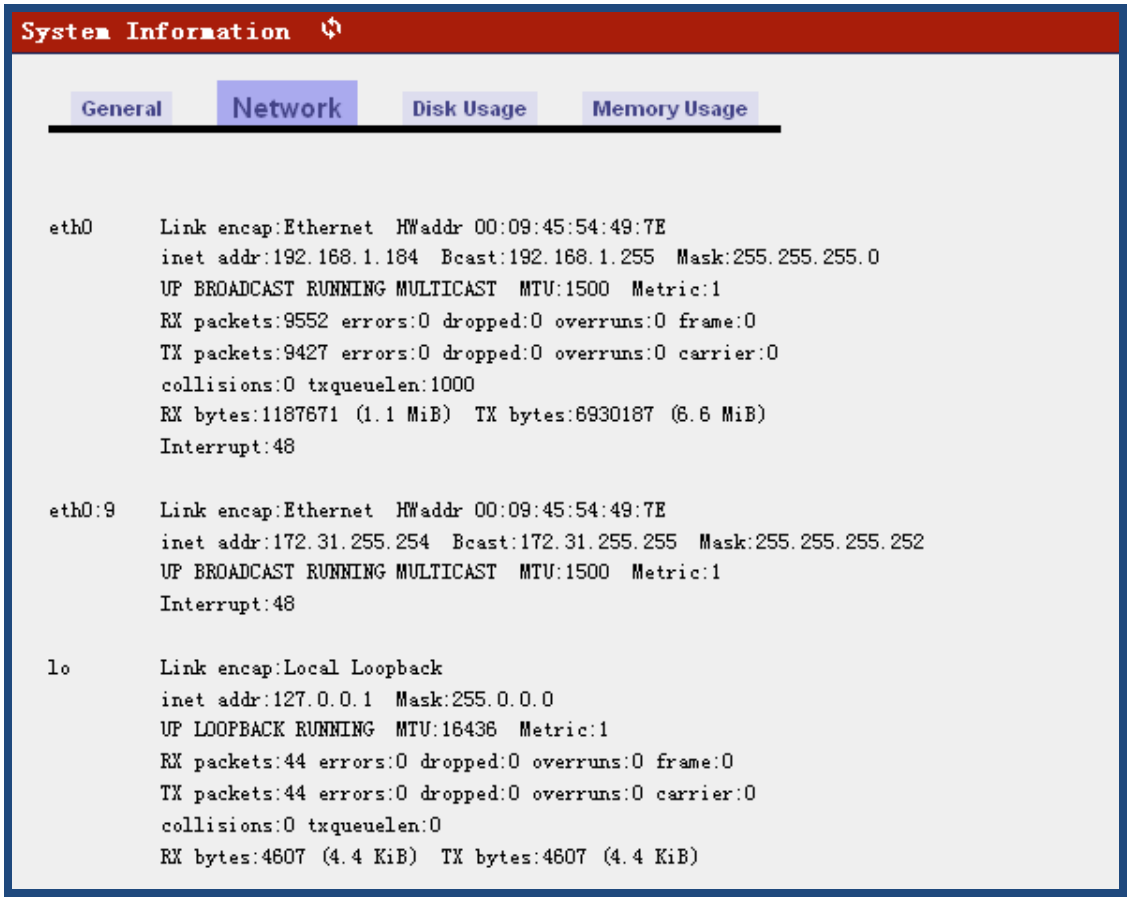
System Information
General
Network
Disk Usage
Memory Usage
eth0 Link encap:Ethernet HWaddr 00:09:45:54:49:7E
inet addr:192.168.1.184 Bcast:192.168.1.255 Mask:255.255.255.0
UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
RX packets:9552 errors:0 dropped:0 overruns:0 frame:0
TX packets:9427 errors:0 dropped:0 overruns:0 carrier:0
collisions:0 txqueuelen:1000
RX bytes:1187671 (1.1 MiB) TX bytes:6930187 (6.6 MiB)
Interrupt:48
eth0:9 Link encap:Ethernet HWaddr 00:09:45:54:49:7E
inet addr:172.31.255.254 Bcast:172.31.255.255 Mask:255.255.255.252
UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
Interrupt:48
lo Link encap:Local Loopback
inet addr:127.0.0.1 Mask:255.0.0.0
UP LOOPBACK RUNNING MTU:16436 Metric:1
RX packets:44 errors:0 dropped:0 overruns:0 frame:0
TX packets:44 errors:0 dropped:0 overruns:0 carrier:0
collisions:0 txqueuelen:0
RX bytes:4607 (4.4 KiB) TX bytes:4607 (4.4 KiB)

Disk Usage Information:

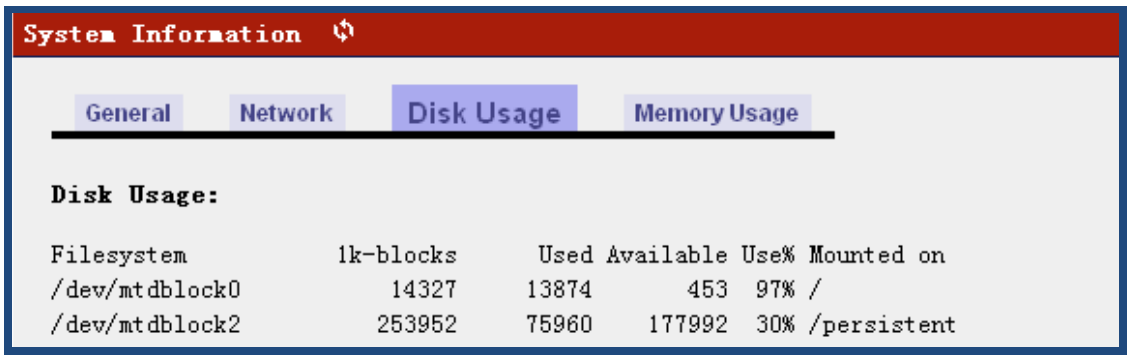

Memory Usage Information:

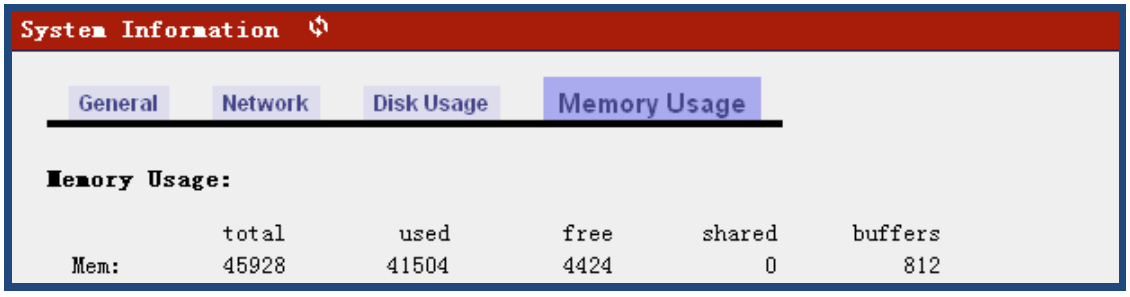

http://ArtTel.ru

3.18 Backup

Backup and Restore are two of the mandatory functions of any application. IP04 is no exception. Customers can backup all the files under the /etc/asterisk/ directory and restore them.

Please select the **Backup** option from the vertical menu on the left of the main page, then you can get the following screen:

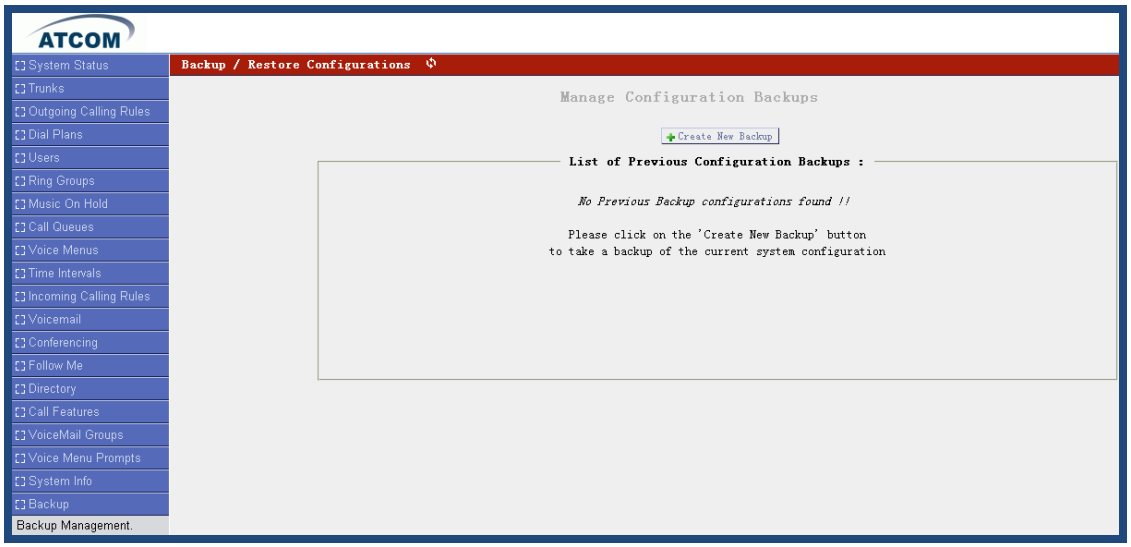

Click on **Create New Backup** button on the illustration above, you can get the following illustration:

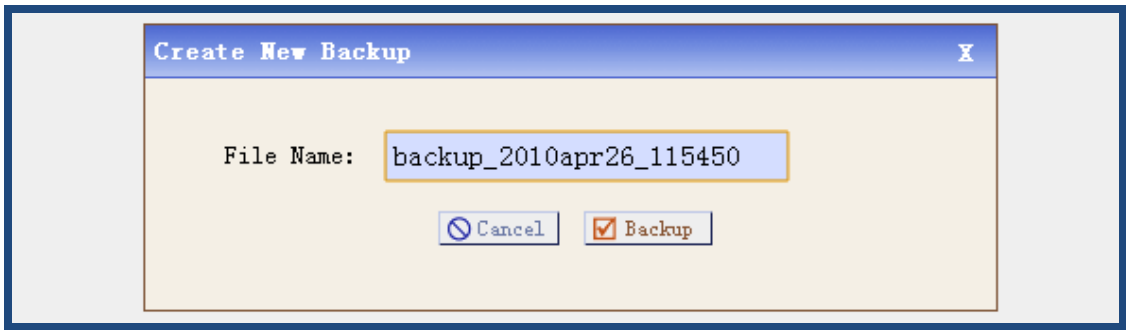

File Name: give a file name for the backed up file.

Click on **Backup** button, once the backup process is completed, you will see a screen with the backup filename displayed in illustration below.

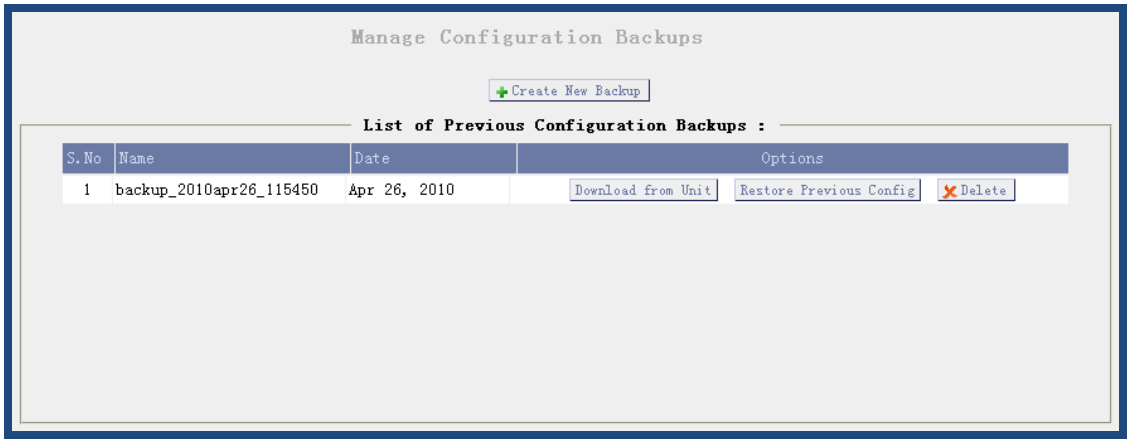

http://ArtTel.ru

Backup itself is not useful if it cannot be restored, IP04 also has this function. This is a very simple procedure. All you need to do is to click on the **Restore Previous Config** option.

3.19 Active Channels

The channels which are in communication status will be displayed in this component.
Please select the **Active Channels** option from the vertical menu on the left, then you can get the following screen:

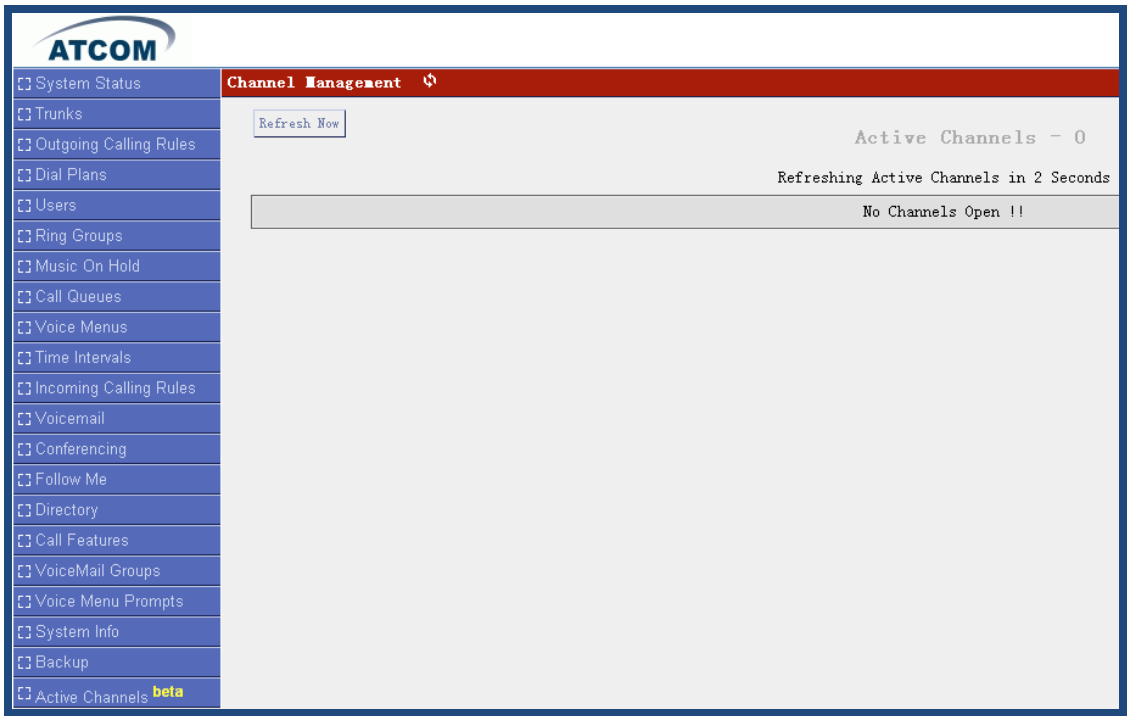

Here my IP04 is using 2,3,4 channels, so I get the following information :

3.20 Options

This component is used for administrator to manage the system, it includes the following modules:

- General Preferences
- Language
- Change Password
- Factory Reset
- Reboot
- Advanced Options

http://ArtTel.ru

General Preferences: you can set up a user to be the operator and the range of extension number for different types' extensions like the following screen:

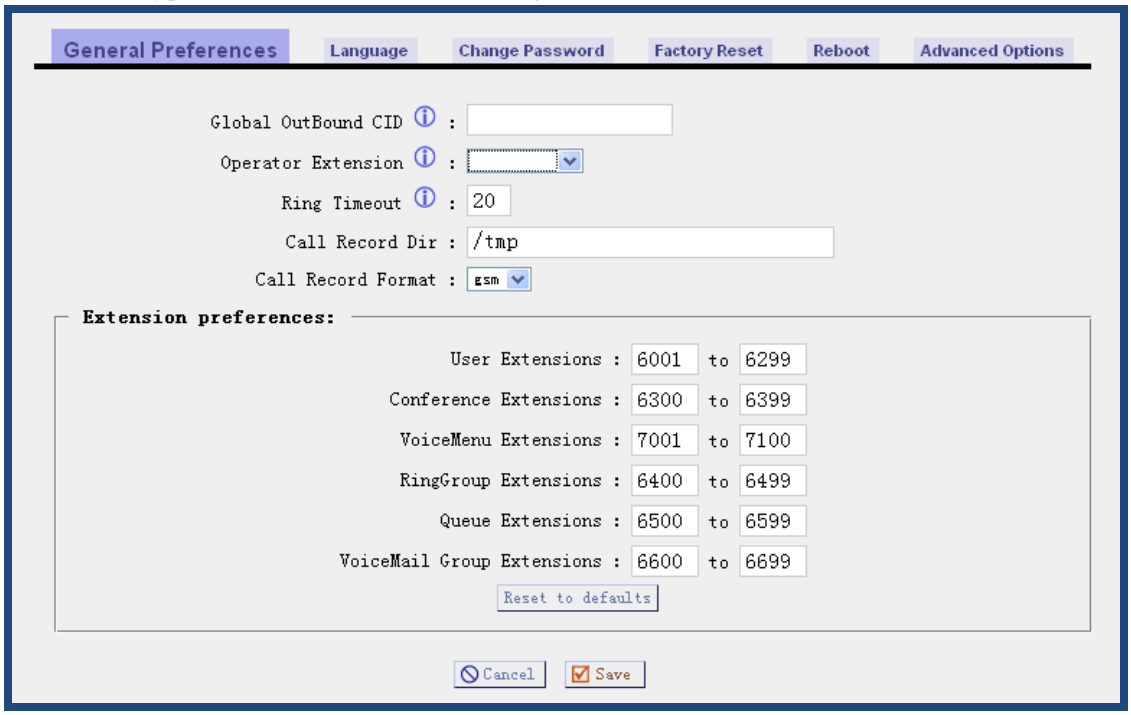

Language: change the sound file language in which they play.

Change Password: it is used for customers to change the admin password, click on the **Change Password** button, the following illustration will be presented below:

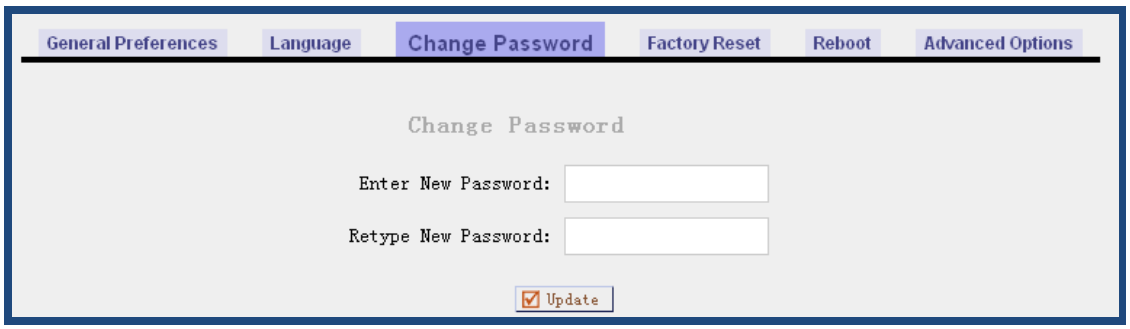

After inputting your new password, please click on **Update** button, then click on **Apply Changes** button on the up right corner of the main page.

Factory Reset: it will help you to recover to the default factory settings. Click on **Factory Reset** button, the following illustration will be presented below:

http://ArtTel.ru

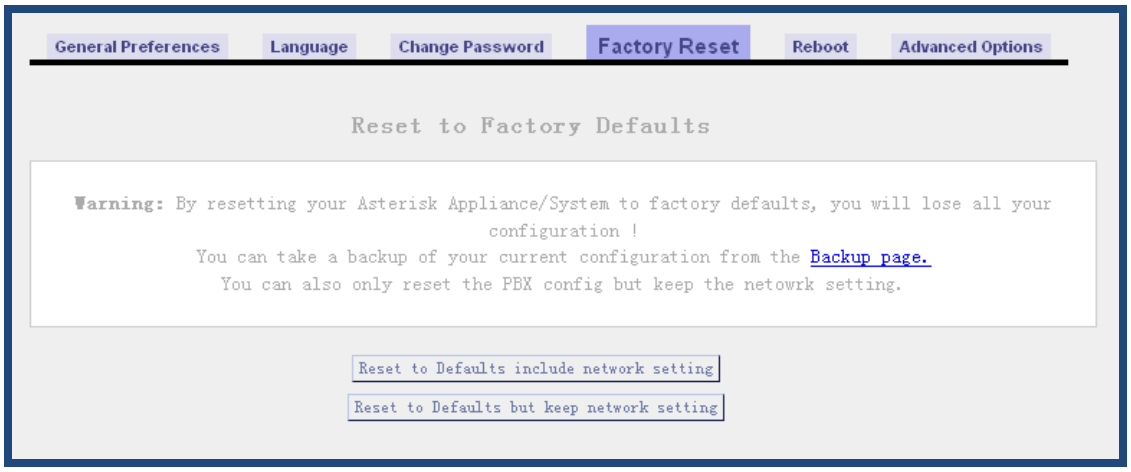
General Preferences
Language
Change Password
Factory Reset
Reboot
Advanced Options
Reset to Factory Defaults
Warning: By resetting your Asterisk Appliance/System to factory defaults, you will lose all your configuration !
You can take a backup of your current configuration from the Backup page.
You can also only reset the PBX config but keep the netowrk setting.
Reset to Defaults include network setting
Reset to Defaults but keep network setting

Please click on **Reset to Defaults** button to recover to default factory setting, then click on **Apply Changes** button on the up right corner of the main page.

Reboot: you can click on **Reboot** button→**Reboot Now** button to reboot your system.

Advanced Options: in default, IP04 web page hides several advanced options in the vertical menu on the left, if you need to use them, you have to display the options by clicking on **Show Advanced Options** in the following illustration:

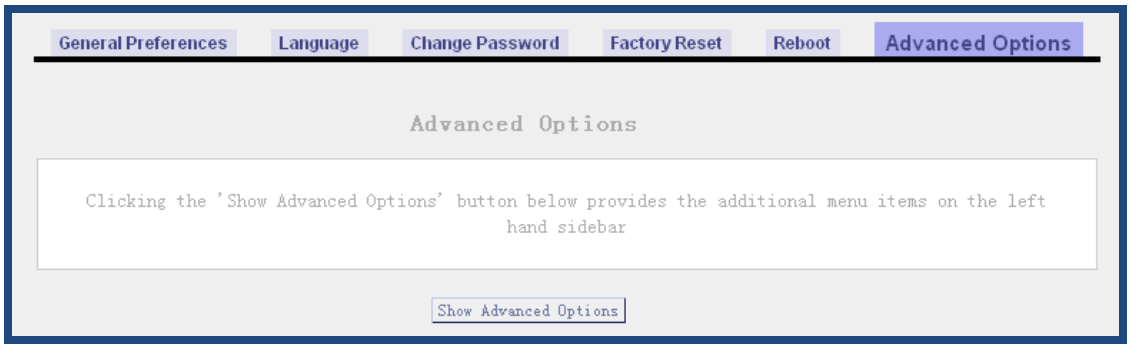

After click on **Show Advanced Options** in the illustration above, you can see the advanced options in the vertical menu on the left of the main page like the following:

http://ArtTel.ru

3.21 Asterisk Logs

After click on **Options→Advanced Options→Show Advanced Options**, please select the **Asterisk Logs** option from the vertical menu on the left of the main page, then you can get the following screen:

Click on the textbox, you can get the following screen:

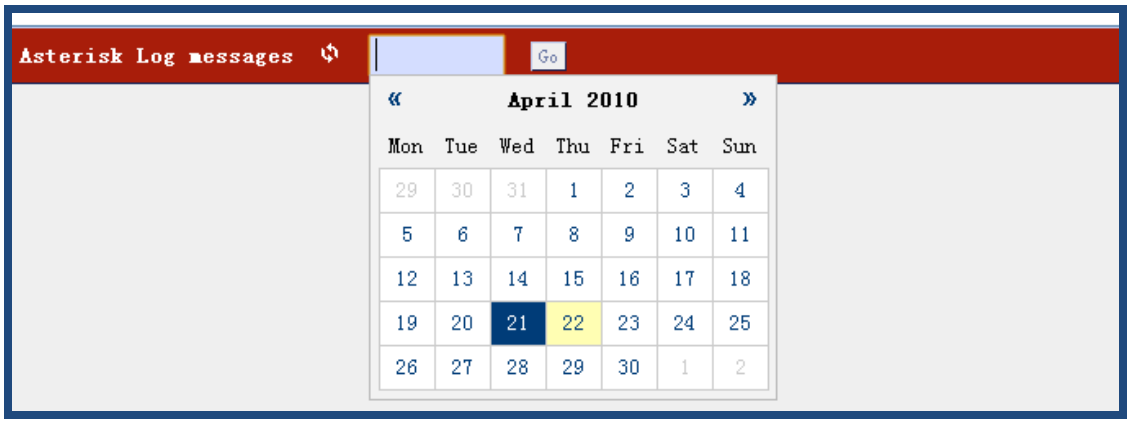

You can see a date table, and you can select the log to watch by clicking on the date. After choosing the date, please click on **Go** button, you can see the asterisk log of the day you choosed. Here I need to see the asterisk log of April 21st,2010, I click on 21 in the date table, I get the following screen:

I click on **Go** button, then I get the log in the following screen:

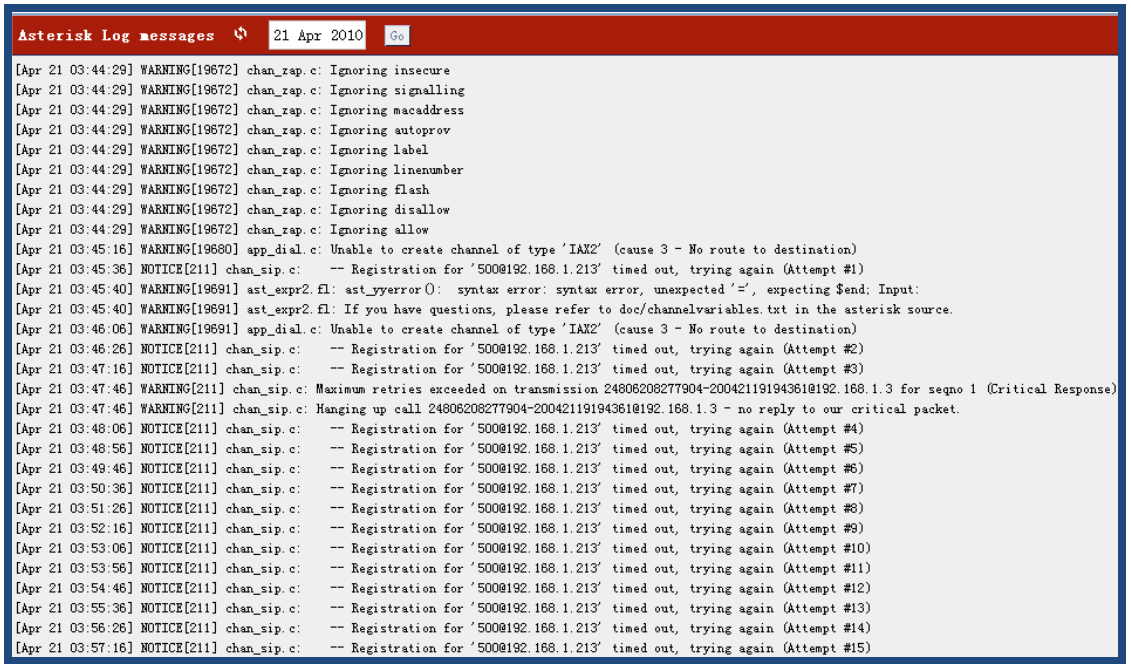
Asterisk Log messages
21 Apr 2010
Go
[Apr 21 03:44:29] WARNING[19672] chan_zap.c: Ignoring insecure
[Apr 21 03:44:29] WARNING[19672] chan_zap.c: Ignoring signalling
[Apr 21 03:44:29] WARNING[19672] chan_zap.c: Ignoring macaddress
[Apr 21 03:44:29] WARNING[19672] chan_zap.c: Ignoring autoprov
[Apr 21 03:44:29] WARNING[19672] chan_zap.c: Ignoring label
[Apr 21 03:44:29] WARNING[19672] chan_zap.c: Ignoring linenumber
[Apr 21 03:44:29] WARNING[19672] chan_zap.c: Ignoring flash
[Apr 21 03:44:29] WARNING[19672] chan_zap.c: Ignoring disallow
[Apr 21 03:44:29] WARNING[19672] chan_zap.c: Ignoring allow
[Apr 21 03:45:16] WARNING[19680] app_dial.c: Unable to create channel of type 'IAX2' (cause 3 - No route to destination)
[Apr 21 03:45:36] NOTICE[211] chan_sip.c: -- Registration for '500@192.168.1.213' timed out, trying again (Attempt #1)
[Apr 21 03:45:40] WARNING[19691] ast_expr2.fl: ast_yyerror(): syntax error: syntax error, unexpected '=', expecting $end; Input:
[Apr 21 03:45:40] WARNING[19691] ast_expr2.fl: If you have questions, please refer to doc/channelvariables.txt in the asterisk source.
[Apr 21 03:46:06] WARNING[19691] app_dial.c: Unable to create channel of type 'IAX2' (cause 3 - No route to destination)
[Apr 21 03:46:26] NOTICE[211] chan_sip.c: -- Registration for '500@192.168.1.213' timed out, trying again (Attempt #2)
[Apr 21 03:47:16] NOTICE[211] chan_sip.c: -- Registration for '500@192.168.1.213' timed out, trying again (Attempt #3)
[Apr 21 03:47:46] WARNING[211] chan_sip.c: Maximum retries exceeded on transmission 24806208277904-20042119194361@192.168.1.3 for seqno 1 (Critical Response)
[Apr 21 03:47:46] WARNING[211] chan_sip.c: Hanging up call 24806208277904-20042119194361@192.168.1.3 - no reply to our critical packet.
[Apr 21 03:48:06] NOTICE[211] chan_sip.c: -- Registration for '500@192.168.1.213' timed out, trying again (Attempt #4)
[Apr 21 03:48:56] NOTICE[211] chan_sip.c: -- Registration for '500@192.168.1.213' timed out, trying again (Attempt #5)
[Apr 21 03:49:46] NOTICE[211] chan_sip.c: -- Registration for '500@192.168.1.213' timed out, trying again (Attempt #6)
[Apr 21 03:50:36] NOTICE[211] chan_sip.c: -- Registration for '500@192.168.1.213' timed out, trying again (Attempt #7)
[Apr 21 03:51:26] NOTICE[211] chan_sip.c: -- Registration for '500@192.168.1.213' timed out, trying again (Attempt #8)
[Apr 21 03:52:16] NOTICE[211] chan_sip.c: -- Registration for '500@192.168.1.213' timed out, trying again (Attempt #9)
[Apr 21 03:53:06] NOTICE[211] chan_sip.c: -- Registration for '500@192.168.1.213' timed out, trying again (Attempt #10)
[Apr 21 03:53:56] NOTICE[211] chan_sip.c: -- Registration for '500@192.168.1.213' timed out, trying again (Attempt #11)
[Apr 21 03:54:46] NOTICE[211] chan_sip.c: -- Registration for '500@192.168.1.213' timed out, trying again (Attempt #12)
[Apr 21 03:55:36] NOTICE[211] chan_sip.c: -- Registration for '500@192.168.1.213' timed out, trying again (Attempt #13)
[Apr 21 03:56:26] NOTICE[211] chan_sip.c: -- Registration for '500@192.168.1.213' timed out, trying again (Attempt #14)
[Apr 21 03:57:16] NOTICE[211] chan_sip.c: -- Registration for '500@192.168.1.213' timed out, trying again (Attempt #15)

http://ArtTel.ru

3.22 Bulk Add

Using bulk add, you can add multi-users one time. You can define the number of the users you want to create.

After click on **Options→Advanced Options→Show Advanced Options**, please select the **Bulk Add** option from the vertical menu on the left, then you can get the following screen:

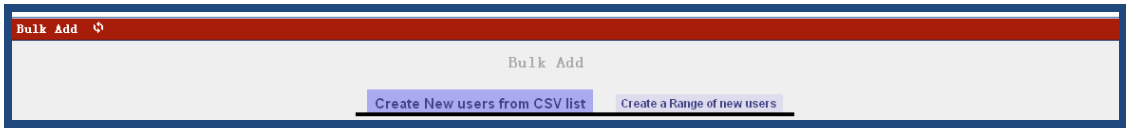

Click on the **Create a Range of new users** button in the illustration above, the following screen is where you create bulk users.

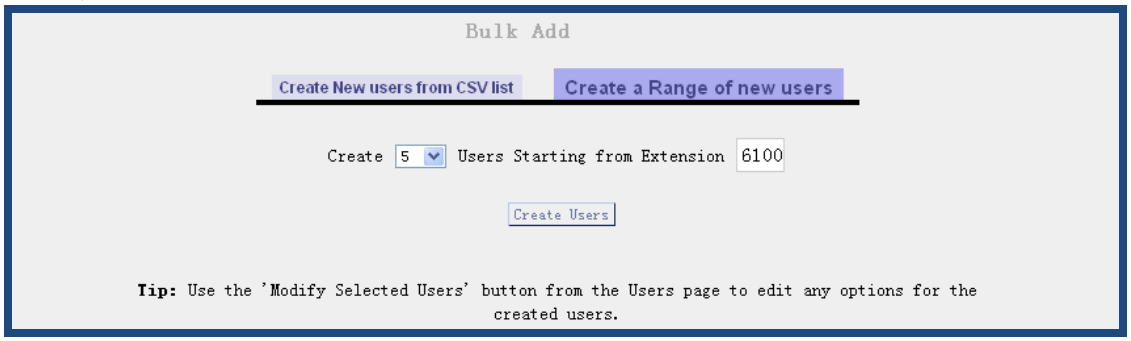
Bulk Add
Create New users from CSV list
Create a Range of new users
Create 5 Users Starting from Extension 6100
Create Users
Tip: Use the 'Modify Selected Users' button from the Users page to edit any options for the created users.

Here I want to create five users, and the extensions starts from 6100, so I select 5 in the **Create** drop-down list, and I set 6100 in the textbox of **User Starting from Extension.**

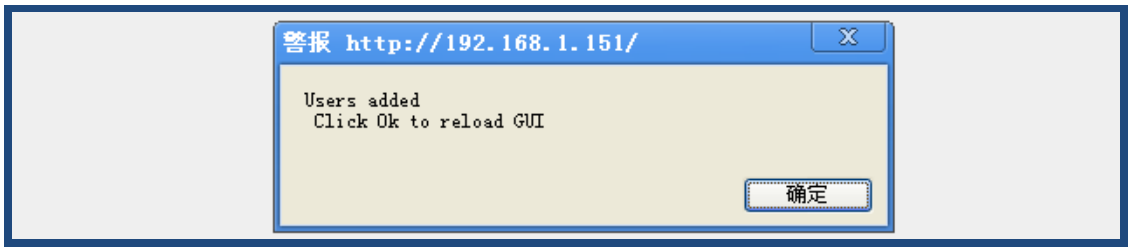

At last, click on

button in the pop-up screen, then click on **Apply Changes** button on the up right corner of the main page.

Please select the **System Status** option in the vertical menu on the left of the main page, you can see you have added five users: 6100, 6101,6102,6103,6104.

3.23 File Editor

After click on **Options→Advanced Options→Show Advanced Options**, please select the **File Editor** option from the vertical menu on the left, then you can get the following screen:

From the drop-down list of config files, you can select the file you want to edit or read.

http://ArtTel.ru

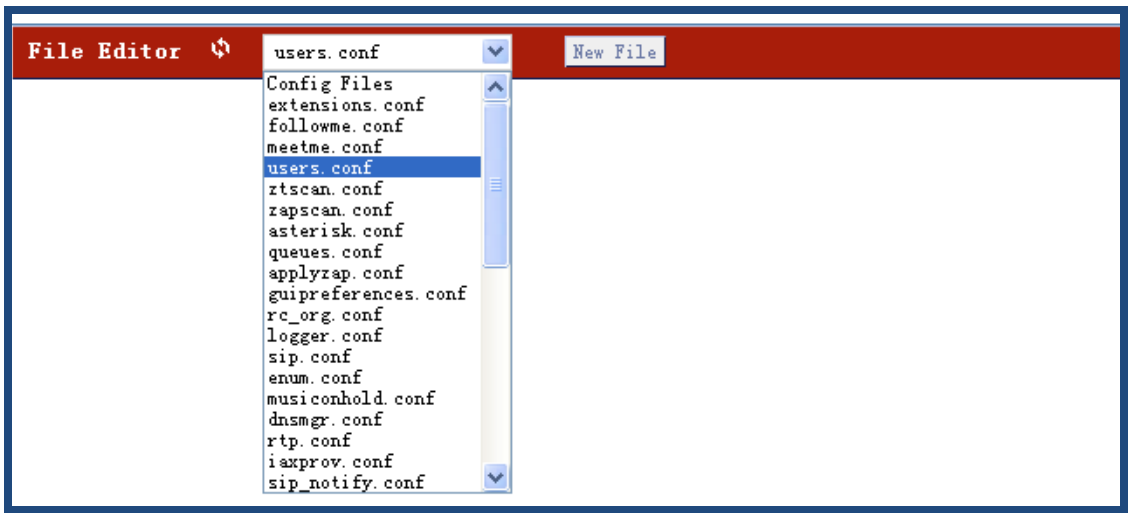

Here I select users.conf file, so I can see the file and edit to meet my requirement.

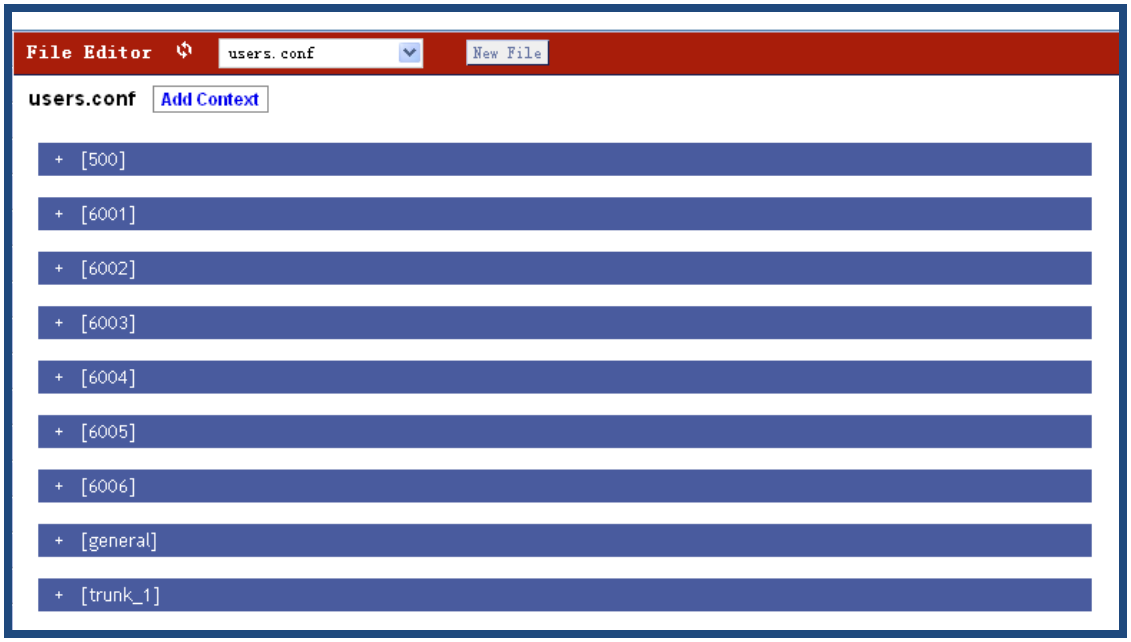

3.24 Asterisk CLI

These are some of the available CLI commands that can be executed from the console, you can input the asterisk CLI commands from the web page directly.

After click on **Options→Advanced Options→Show Advanced Options**, please select the **Asterisk CLI** option from the vertical menu on the left, then you can get the following screen:

http://ArtTel.ru

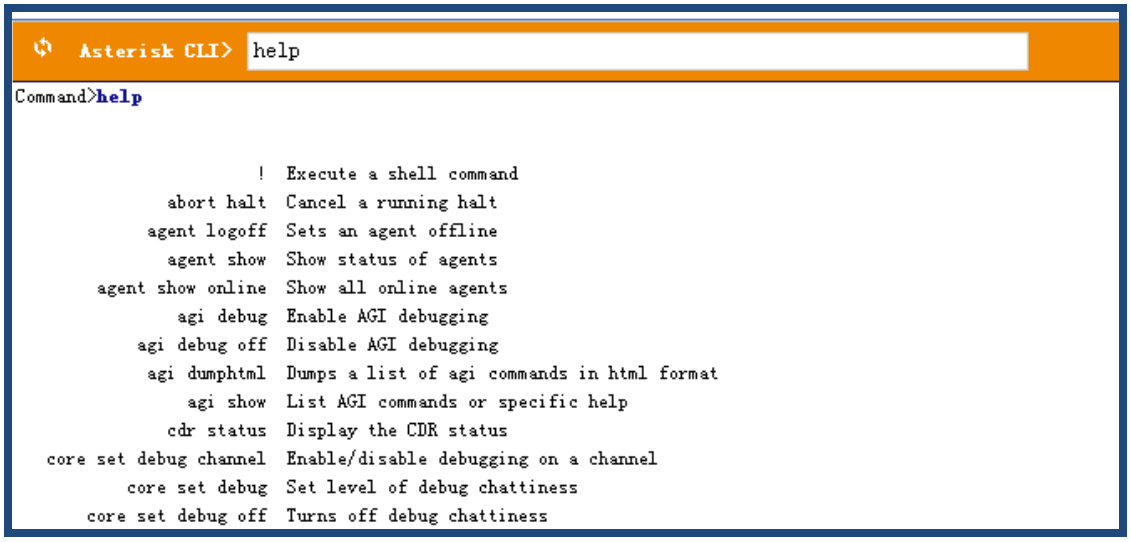
Asterisk CLI> help
Command>help
! Execute a shell command
abort halt Cancel a running halt
agent logoff Sets an agent offline
agent show Show status of agents
agent show online Show all online agents
agi debug Enable AGI debugging
agi debug off Disable AGI debugging
agi dumphtml Dumps a list of agi commands in html format
agi show List AGI commands or specific help
cdr status Display the CDR status
core set debug channel Enable/disable debugging on a channel
core set debug Set level of debug chattiness
core set debug off Turns off debug chattiness

Here I input help command in the textbox, so I can get all the command which I can use in CLI mode.

3.25 Network Settings

In order to give a static and permanent IP address for IP-04, you have to set it in web GUI. After you enter into the web GUI of IP-04, you can try to configure IP address according to the following steps:

After click on **Options→Advanced Options→Show Advanced Options**, please select **Network Settings** option from the vertical menu on the left of main page, the following screen is where you configure the network:

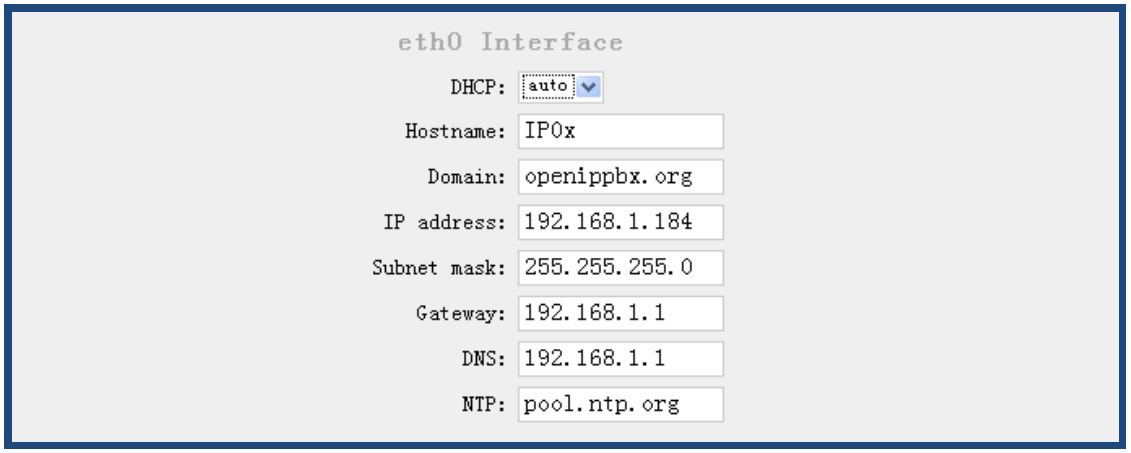

In the drop-down list of **DHCP**, you can see the following three options:

1. DHCP: yes: IP04 will obtain the dynamic IP address from your router.
2. DHCP: auto: IP04 will use the static IP specified below and ping the default gateway. When there is no response from the default gateway, the IP-04 will switch to dynamically obtain the IP address from your router.
3. DHCP: no: IP04 will use the static IP address set below.

If you want to get static and permanent IP address, please do not select “yes”, after configure other parameters, please click “save” in the bottom of your page to save your setting.

http://ArtTel.ru

3.26 Firmware Update

You can update to the latest version for IP04 by TFTP.

3.26.1 Download the Latest Firmware File and Set up TFTP Server.

1) Download the md5 file from http://www.atcom.cn/downloads/IPPBX/Firmware/IP04-v0.3.6-100506.md5, then put it in your TFTP server root directory.
2) Run your TFTP server, and I set up it like the following:

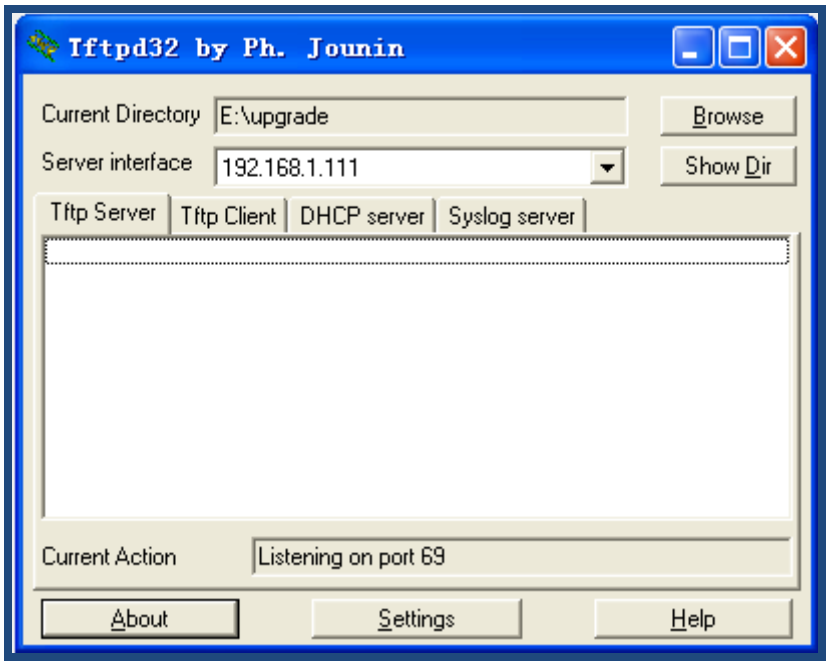

"E:\upgrade" is the root directory of my TFTP server, "192.168.1.111" is the IP Address of my TFTP server.

3.26.2 Update for IP04 from Web Page

After click on **Options→Advanced Options→Show Advanced Options**, please select **Firmware update** option from the vertical menu on the left of main page, the following screen is where you update for IP04:

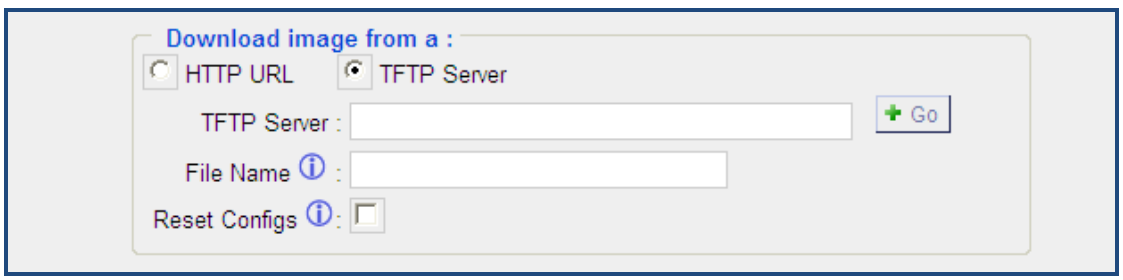

http://ArtTel.ru

TFTP Server: enter the IP Address of your TFTP server in this textbox.
File Name: enter the update file name
Reset Configs: if you choose reset Configs, it will delete all of your configuration you have done before.
After setting up, please click on **Go** button to update for IP04.
Power off and power on the IP-04, wait for several minutes. When the TEL port LEDs light up, it means the update is finished and you have the latest firmware.

3.27 Call Detail Records

This component provides the record of all incoming and outgoing calls including the channels used and duration of calls. After click on **Options→Advanced Options→Show Advanced Options**, please select the **Call Detail Records** option from the vertical menu on the left, then you can get the following screen:

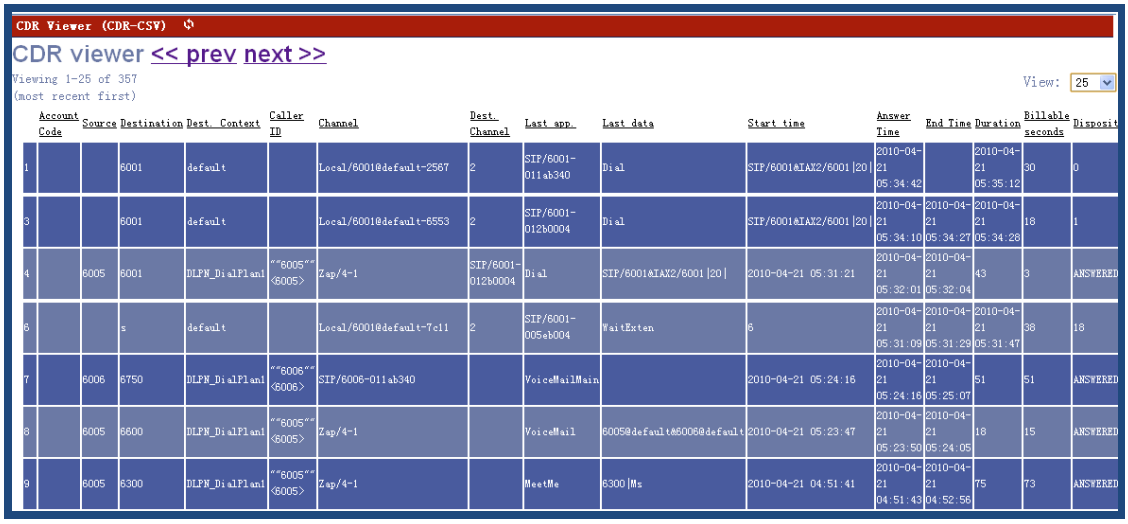

	Account Code	Source	Destination	Dest. Context	Caller ID	Channel	Dest. Channel	Last app.	Last data	Start time	Answer Time	End Time	Duration	Billable seconds	Disposit
1			6001	default		Local/6001@default-2567	2	SIP/6001-011ab340	Dial	SIP/6001&IAX2/6001|20	2010-04-21 05:34:42		2010-04-21 05:35:12	30	0
3			6001	default		Local/6001@default-6553	2	SIP/6001-012b0004	Dial	SIP/6001&IAX2/6001|20	2010-04-21 05:34:10	2010-04-21 05:34:27	2010-04-21 05:34:28	18	1
4		6005	6001	DLPN_DialPlan1	""6005"" <6005>	Zap/4-1	SIP/6001-012b0004	Dial	SIP/6001&IAX2/6001|20|	2010-04-21 05:31:21	2010-04-21 05:32:01	2010-04-21 05:32:04	43	3	ANSWERED
6			s	default		Local/6001@default-7c11	2	SIP/6001-005eb004	WaitExten	6	2010-04-21 05:31:09	2010-04-21 05:31:29	2010-04-21 05:31:47	38	18
7		6006	6750	DLPN_DialPlan1	""6006"" <6006>	SIP/6006-011ab340		VoiceMailMain		2010-04-21 05:24:16	2010-04-21 05:24:16	2010-04-21 05:25:07	51	51	ANSWERED
8		6005	6600	DLPN_DialPlan1	""6005"" <6005>	Zap/4-1		VoiceMail	6005@default@6006@default	2010-04-21 05:23:47	2010-04-21 05:23:50	2010-04-21 05:24:05	18	15	ANSWERED
9		6005	6300	DLPN_DialPlan1	""6005"" <6005>	Zap/4-1		MeetMe	6300|Ms	2010-04-21 04:51:41	2010-04-21 04:51:43	2010-04-21 04:52:56	75	73	ANSWERED

You can click on the **prev** to look up the last page for call record, and click on the **next** to look up the **next** page for call record, you can also set the value from the drop-down list of **view** which means how many calls will be displayed in one page.

http://ArtTel.ru

Chapter 4 an Application Case of IP04

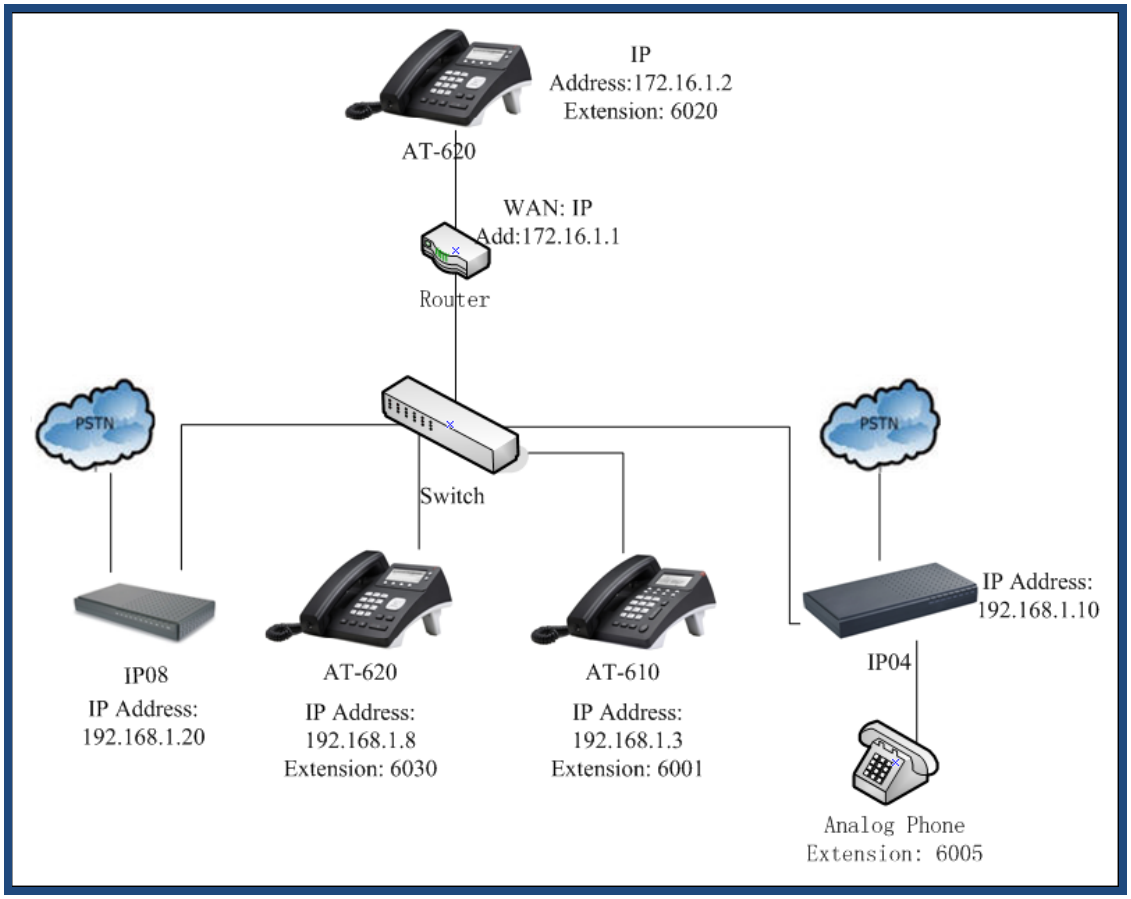

Figure: Network Topology

In the network topology above: user 6020 and user 6001 will be registered to IP04, user 6030 will be registered to IP04, analog phone 6005 is connected to FXS port of IP04. After configuration, it will realize the following function:

1) The internal user 6005 and user 6001 can call each other directly.
2) 6005 and 6001 can dial-out through IP04 to PSTN.
3) 6005 and 6001 can get incoming calls from PSTN by IP04.
4) 6030 can call-out to PSTN and get incoming call from PSTN through IP04.
5) User 6001 and 6030 can call each other through VoIP trunk, although they are registered to different IP PBX.
6) User 6020, 6005 and 6001 can call each other directly, although they are not in the same network segment.

http://ArtTel.ru

4.1 How to Make Internal Calls through IP04

4.1.1 Access to the Web Page of IP04 by Browser

After connecting IP04 to LAN, please open your browser of PC with windows OS and input the IP Address of IP04 (the default IP address is 192.168.1.100), then you can get the following screen:

Please input the default Username: admin; Password: atcom in the presented screen above.
When you login successfully, you can get the configuration web page as below:

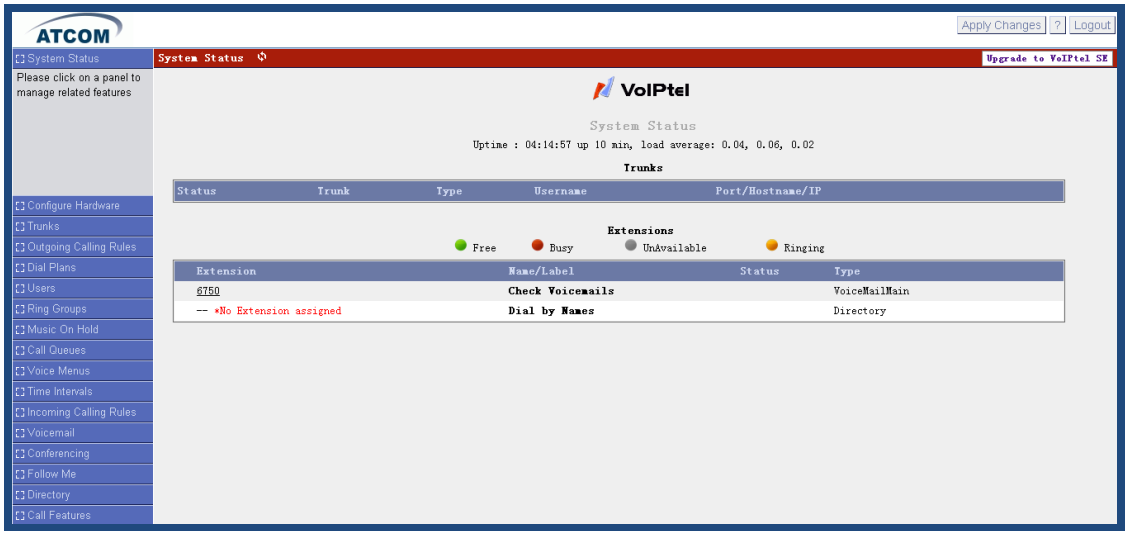

4.1.2 Add up Users from Web Page of IP04

1) Add up a DialPlan

Before you add up user, you have to add up a DialPlan, please click on **Dial Plans→New DialPlan**, I add up a DialPlan like the following:

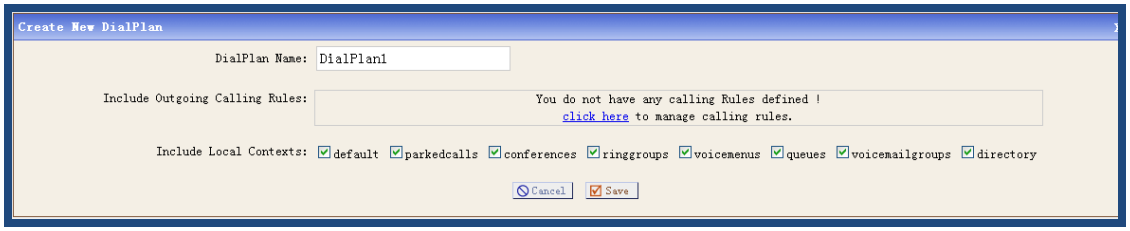

http://ArtTel.ru

After configuring, please click on **Save** button, and click on **Apply Changes** button in up right corner of the main page.

2) Add up SIP user 6001

After logging into the web page of IP04, please click on **Users→ Create New User**, I configure user 6001 like the following:

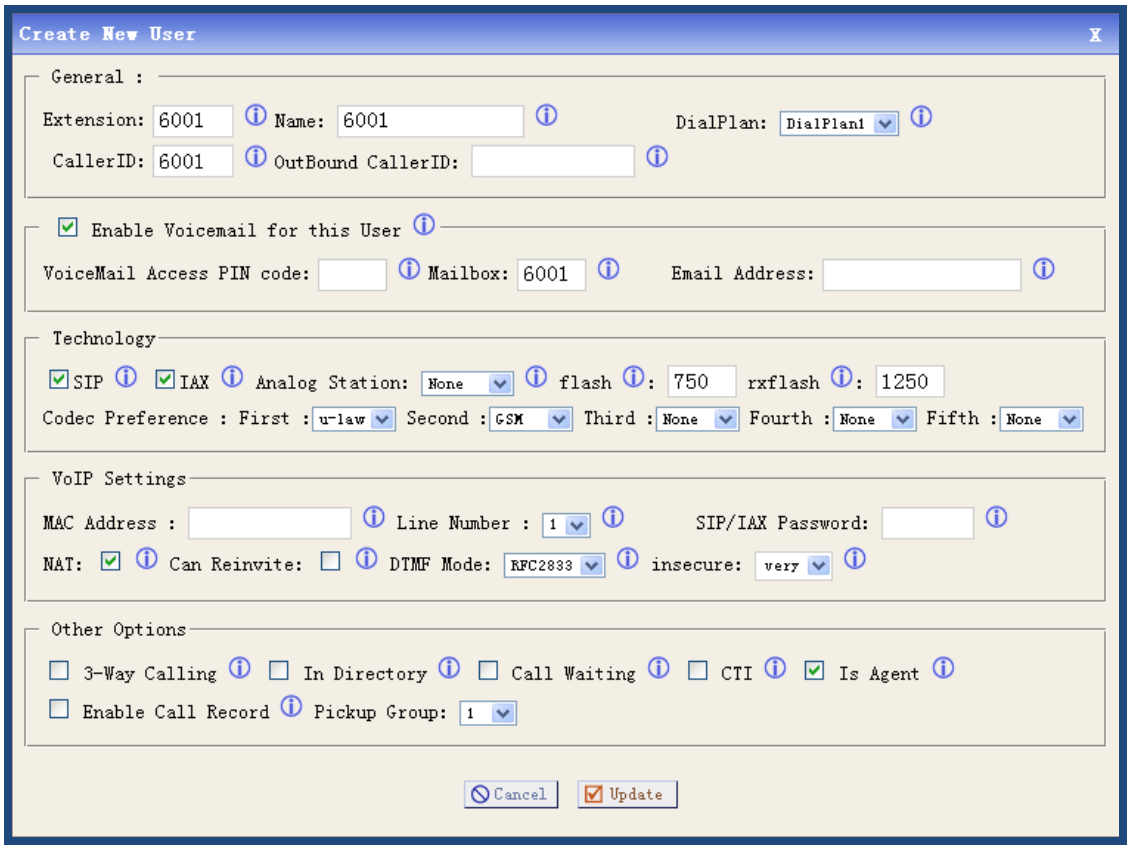

At last, please click on **Update** button, and click on **Apply Changes** button in up right corner of the main page.

3) Add up an Analog user 6005

After logging into the web page of IP04, please click on **Users→ Create New User**, I add a user 6005 like the following:

http://ArtTel.ru

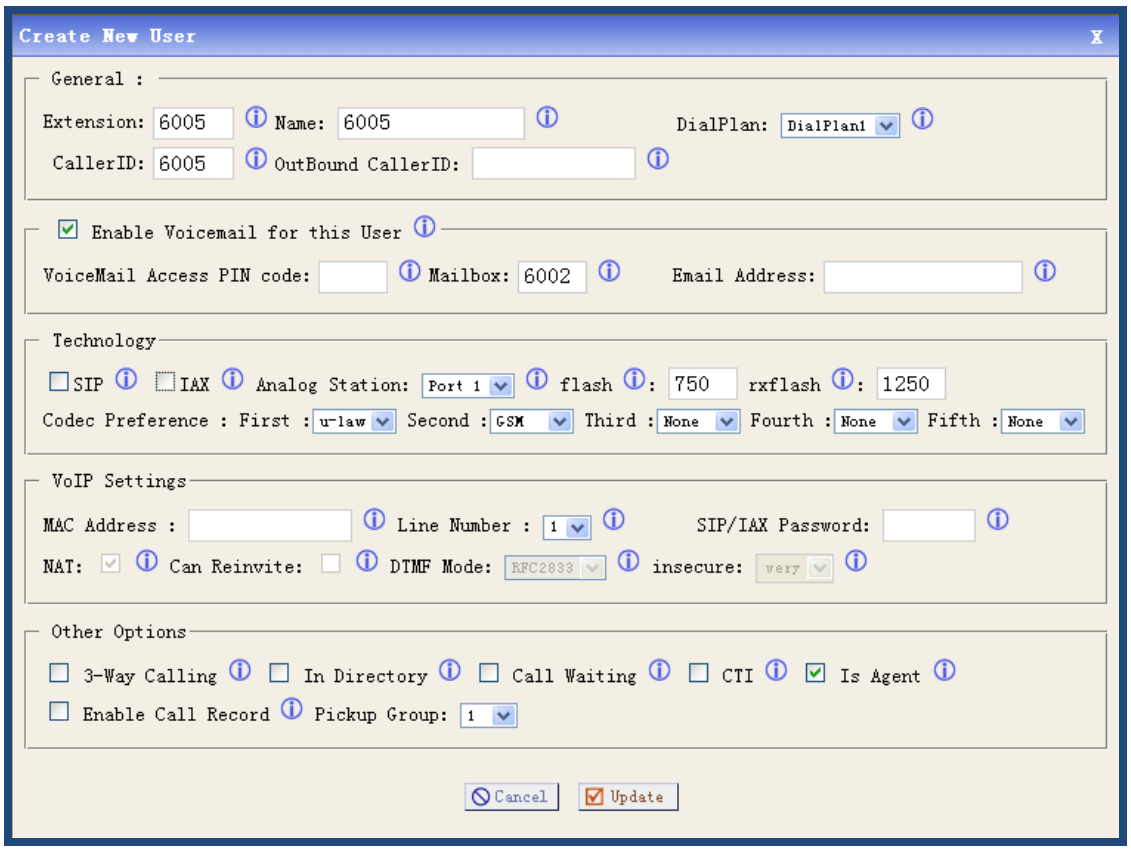

At last, please click on **Update** button, and click on **Apply Changes** button in up right corner of the main page.

Please pay attention to the **Technology** component, there is an **Analog Station** drop-down list, I choose port 1 in which port the analog phone plugs.

4.1.3 Register a SIP user 6001 in AT610

After logging into the web page of IP Phone AT-610, please select VOIP option, I register the 6001 as the following illustration:

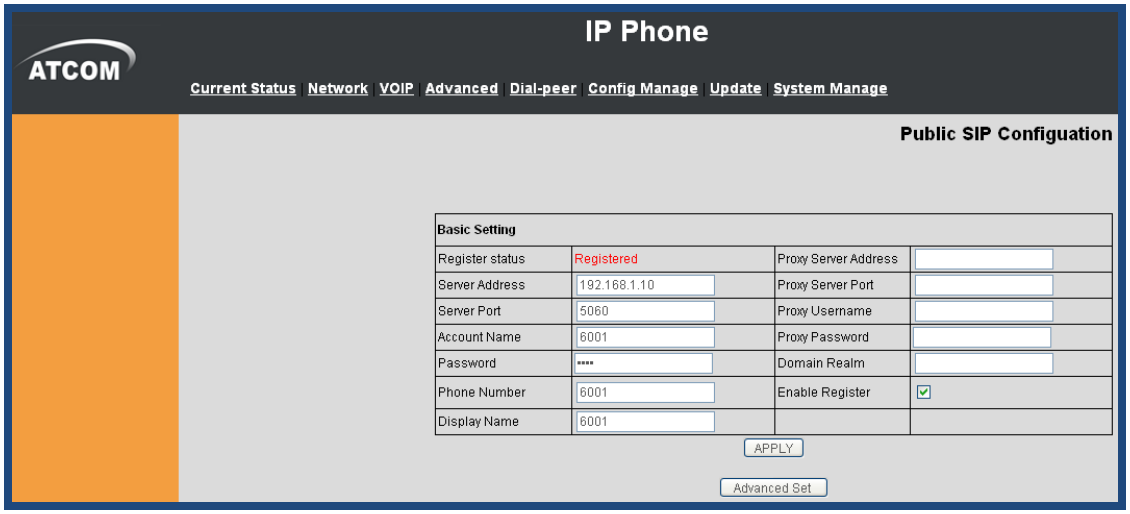

http://ArtTel.ru

After configuring, please click on the **APPLY** button.
Now you can call each other directly between user 6001 and 6005.

4.2 How to Make a Call to Outside through PSTN

In order to dial out to PSTN with IP04, you need an analog trunk, an outgoing calling rule, a dial plan and a user. Here I will give the simple configuration steps which show how to make a call to outside, for detail configuration, you can refer to chapter 3.

4.2.1 Create an Analog Trunk

After logging into the web page of IP04, please click on **Trunks→ Analog Trunks**, I configure an analog trunk like the following:

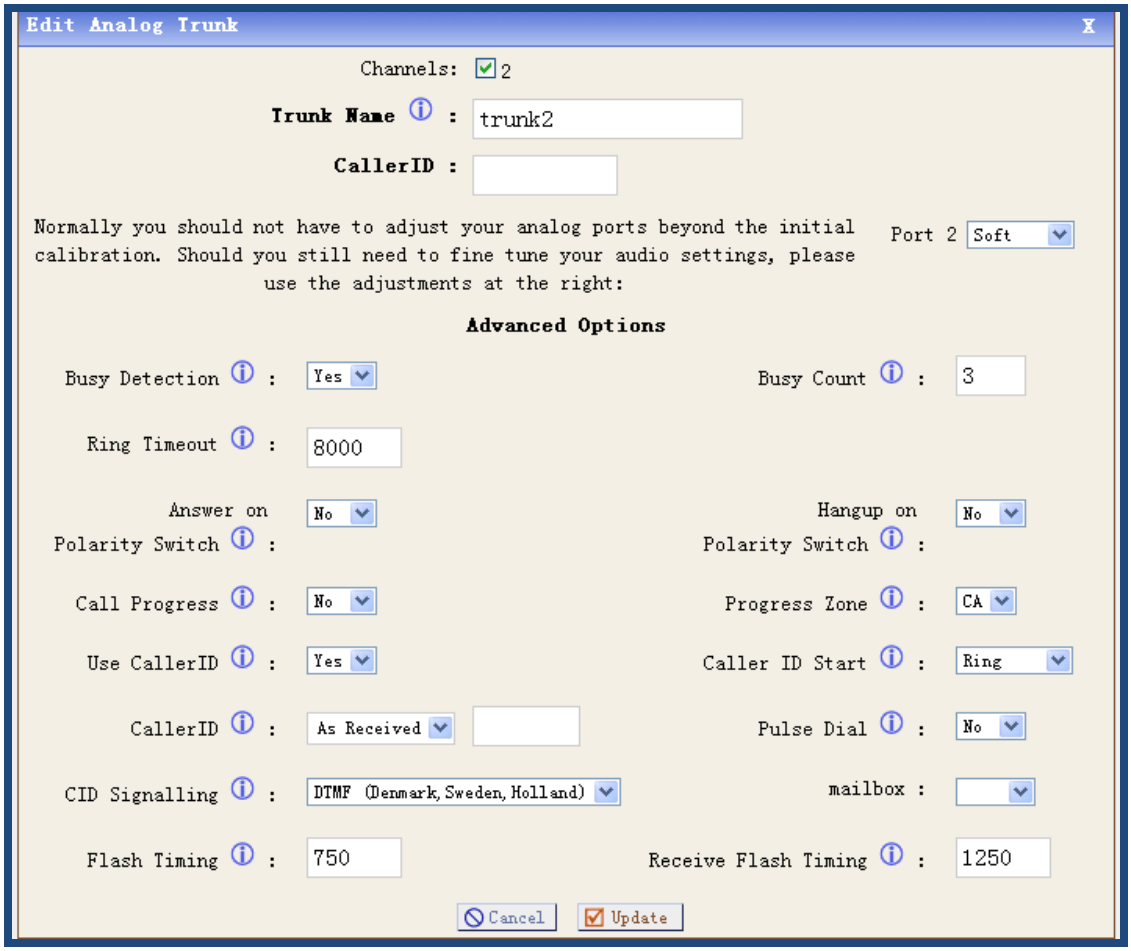
Edit Analog Trunk
X
Channels: 2
Trunk Name : trunk2
CallerID :
Normally you should not have to adjust your analog ports beyond the initial calibration. Should you still need to fine tune your audio settings, please use the adjustments at the right:
Port 2 Soft
Advanced Options
Busy Detection : Yes
Busy Count : 3
Ring Timeout : 8000
Answer on Polarity Switch : No
Hangup on Polarity Switch : No
Call Progress : No
Progress Zone : CA
Use CallerID : Yes
Caller ID Start : Ring
CallerID : As Received
Pulse Dial : No
CID Signalling : DTMF (Denmark, Sweden, Holland)
mailbox :
Flash Timing : 750
Receive Flash Timing : 1250
Cancel
Update

At last, please click on **Update** button, and click on **Apply Changes** button in up right corner of the main page.

http://ArtTel.ru

4.2.2 Create an Outgoing Calling Rule

After logging into the web page of IP04, please click on **Outgoing Calling Rules→ New Calling Rule**, I configure an outgoing calling rule like the following:

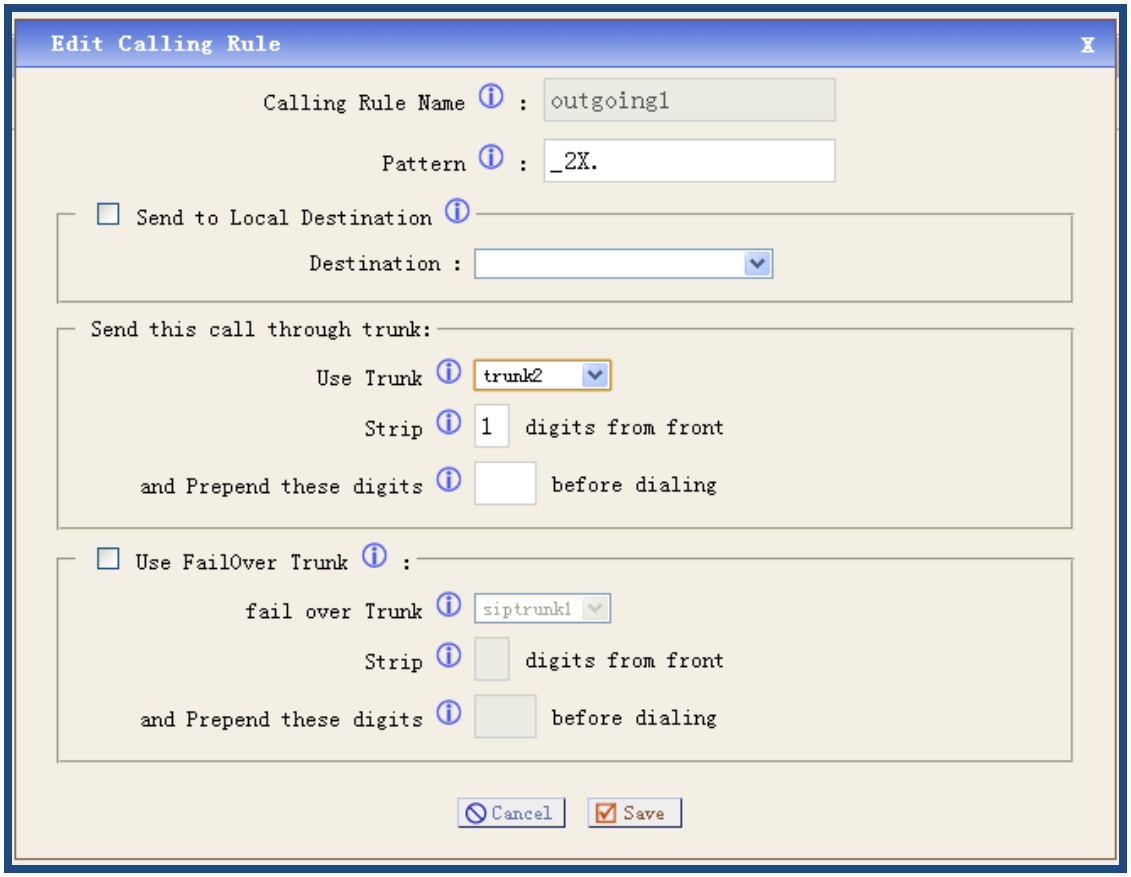

At last, please click on **Save** button, and click on **Apply Changes** button in up right corner of the main page.

4.2.3 Create a Dial Plan

After logging into the web page of IP04, please click on **Dial Plans→ New DialPlan**, I configure a dial plan like the following:

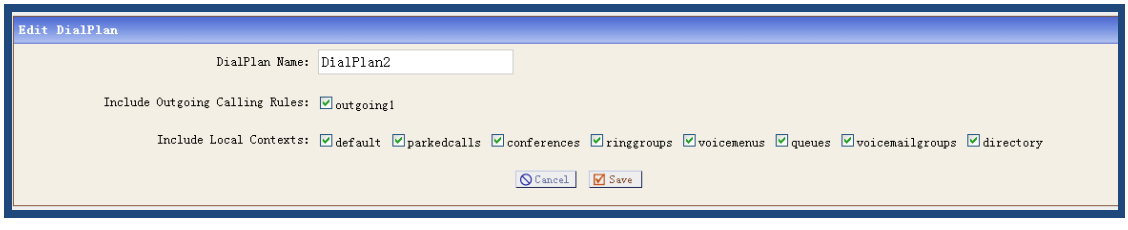

At last, please click on **Save** button, and click on **Apply Changes** button in up right corner of the main page.

http://ArtTel.ru

4.2.4 Create a User

I will use the user 6001 I created before, here I need to reselect a dial plan for 6001, here I need to use DialPlan2, so I select DialPlan2 in the DialPlan drop-down list.
Now I can call out with prefix 2, if the caller number is 10086, I will dial 210086.

4.3 How to Get an Incoming Call from outside

In order to get an incoming call from outside with IP04, you need an analog trunk, an incoming calling rule, a destination (here I use IVR). Here I will give the simple configuration steps which show how to get an incoming call from outside, for detail configuration, you can refer to chapter 3.

4.3.1 Create an Analog Trunk

I use the trunk2 I created in 4.2.1

4.3.2 Create an Incoming Calling Rule

After logging into the web page of IP04, please click on **Incoming Calling Rules→ New Incoming Rule**, I configure an incoming calling rule like the following:

At last, please click on **Update** button, and click on **Apply Changes** button in up right corner of the main page.

4.3.3 Create a Voice Menu

After logging into the web page of IP04, please click on **Voice Menus→ Create New VoiceMenu**, I create a voice menu like the following:

http://ArtTel.ru

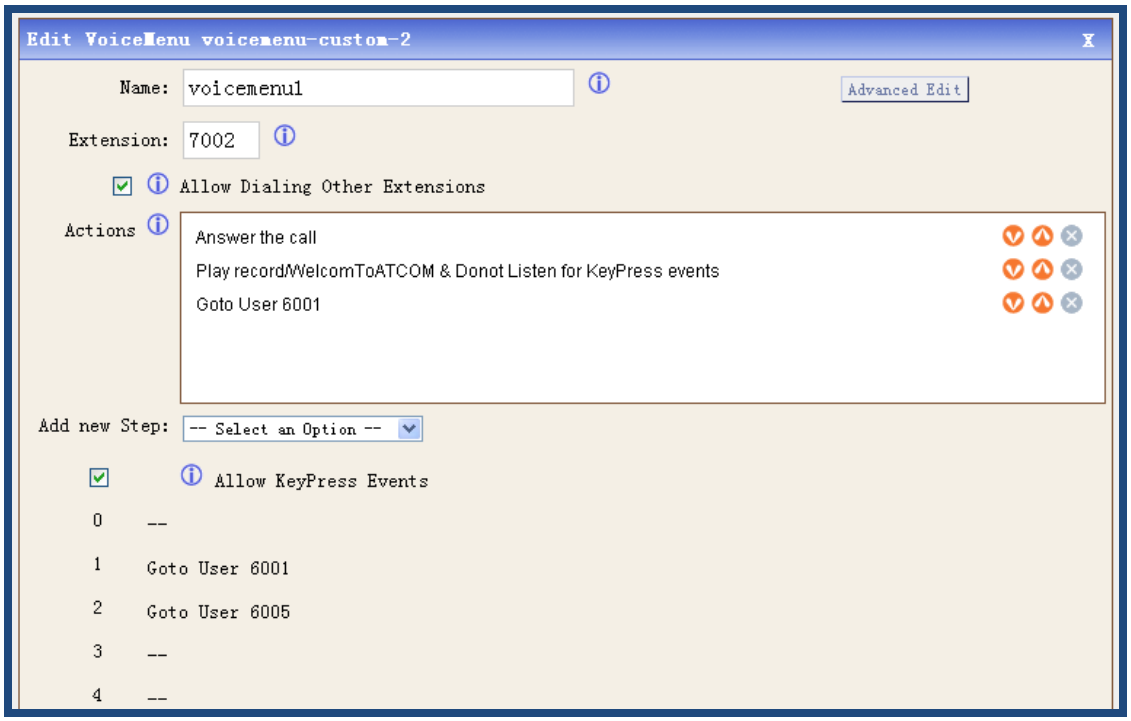

When the call comes from port 2, the system will play a record sound file, if the caller presses 1, user 6001 will ring, if the caller presses 2, user 6005 will ring. If the caller does not press any key, the call will go to 6001.

You can also configure IP04 to let 6030 call outside and get incoming call by IP04, the steps are the same as IP04, you can refer to configuration of IP04.

4.4 How to Call Each Other Directly from Different Network Segment.

Take the user 6020, 6005 and 6001 for example, I will configure router, users and IP04, then the three users can call each other directly.

1) Set up router

   From the web page of your router, please configure the IP address, subnet mask and default gateway of WAN port, I configured a static IP Address 172.16.1.1; Subnet Mask: 255.255.0.0; Default Gateway: 172.16.1.254. You can refer to the following:

http://ArtTel.ru

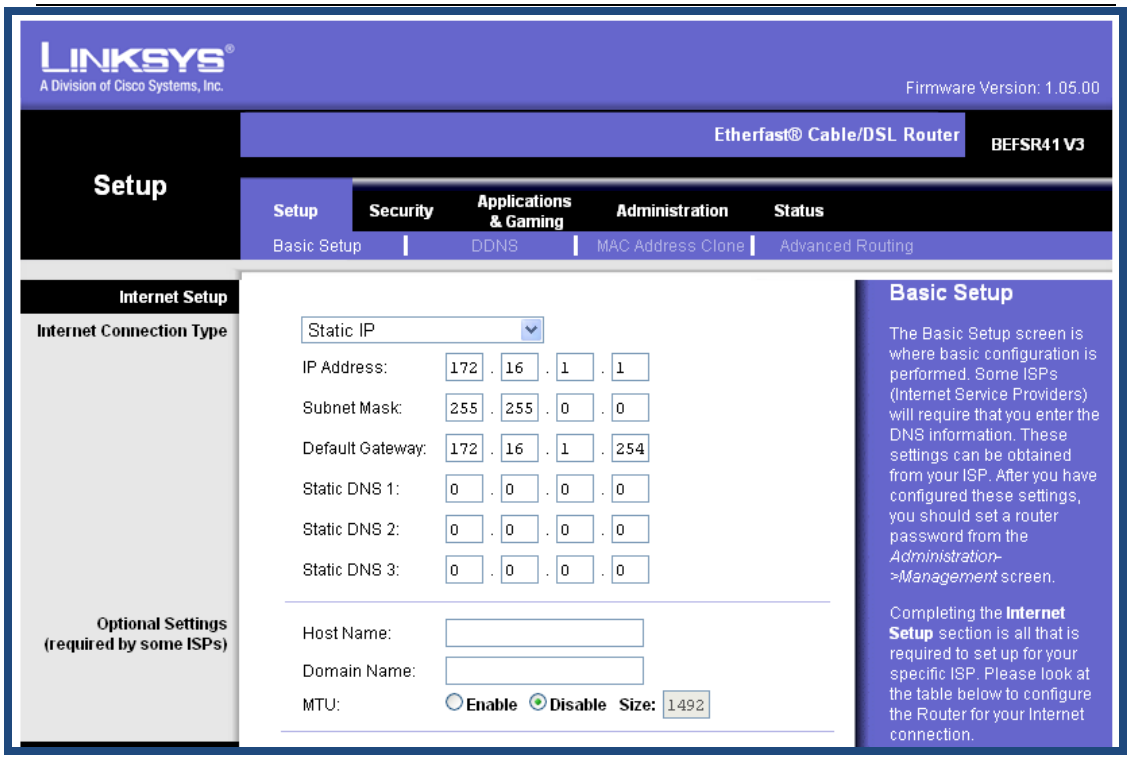
LINKSYS
A Division of Cisco Systems, Inc.
Firmware Version: 1.05.00
Setup
Etherfast® Cable/DSL Router
BEFSR41 V3
Setup
Security
Applications & Gaming
Administration
Status
Basic Setup
DDNS
MAC Address Clone
Advanced Routing
Internet Setup
Internet Connection Type
Static IP
IP Address: 172 . 16 . 1 . 1
Subnet Mask: 255 . 255 . 0 . 0
Default Gateway: 172 . 16 . 1 . 254
Static DNS 1: 0 . 0 . 0 . 0
Static DNS 2: 0 . 0 . 0 . 0
Static DNS 3: 0 . 0 . 0 . 0
Optional Settings (required by some ISPs)
Host Name:
Domain Name:
MTU: Enable Disable Size: 1492
Basic Setup
The Basic Setup screen is where basic configuration is performed. Some ISPs (Internet Service Providers) will require that you enter the DNS information. These settings can be obtained from your ISP. After you have configured these settings, you should set a router password from the Administration->Management screen.
Completing the Internet Setup section is all that is required to set up for your specific ISP. Please look at the table below to configure the Router for your Internet connection.

From the web page of your router, please configure the IP address, subnet mask and DHCP, I configure them like the following:

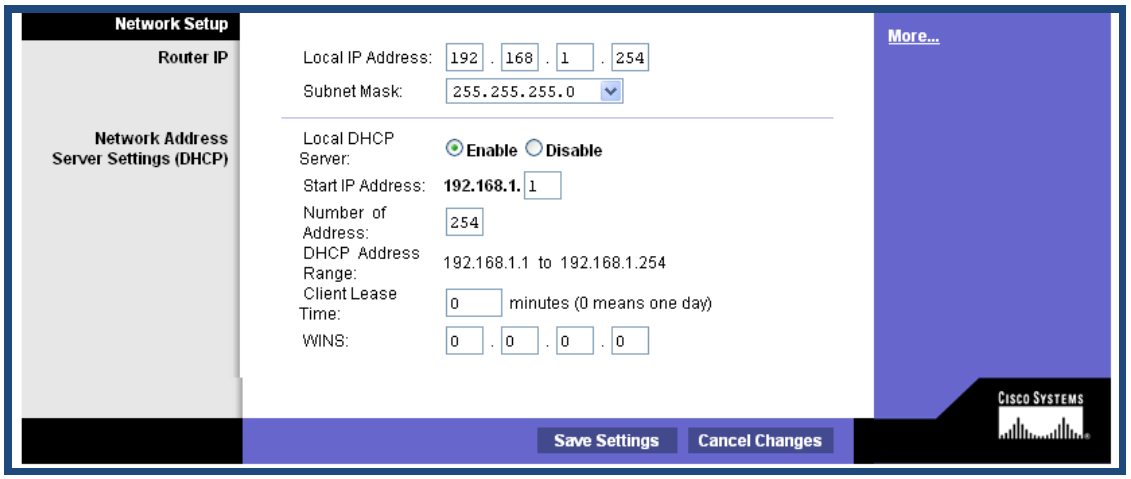
Network Setup
Router IP
Local IP Address: 192 . 168 . 1 . 254
Subnet Mask: 255.255.255.0
Network Address Server Settings (DHCP)
Local DHCP Server: Enable Disable
Start IP Address: 192.168.1. 1
Number of Address: 254
DHCP Address Range: 192.168.1.1 to 192.168.1.254
Client Lease Time: 0 minutes (0 means one day)
WINS: 0 . 0 . 0 . 0
More...
Save Settings
Cancel Changes
Cisco Systems

From the webpage of your router, please configure port range forwarding like the following:

http://ArtTel.ru

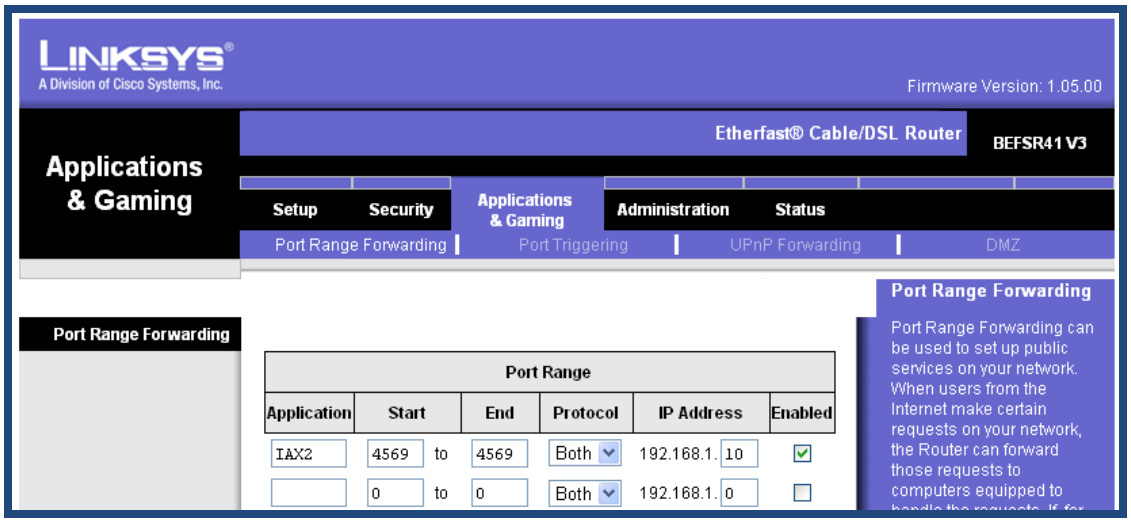

The user 6020 uses IAX2, the port number is 4569, 192.168.1.10 is the IP address of IP04.

2) Add an IAX user 6020 in IP04

After logging into the web page of IP04, please click on **Users→ Create New User**, I configure 6020 like the following:

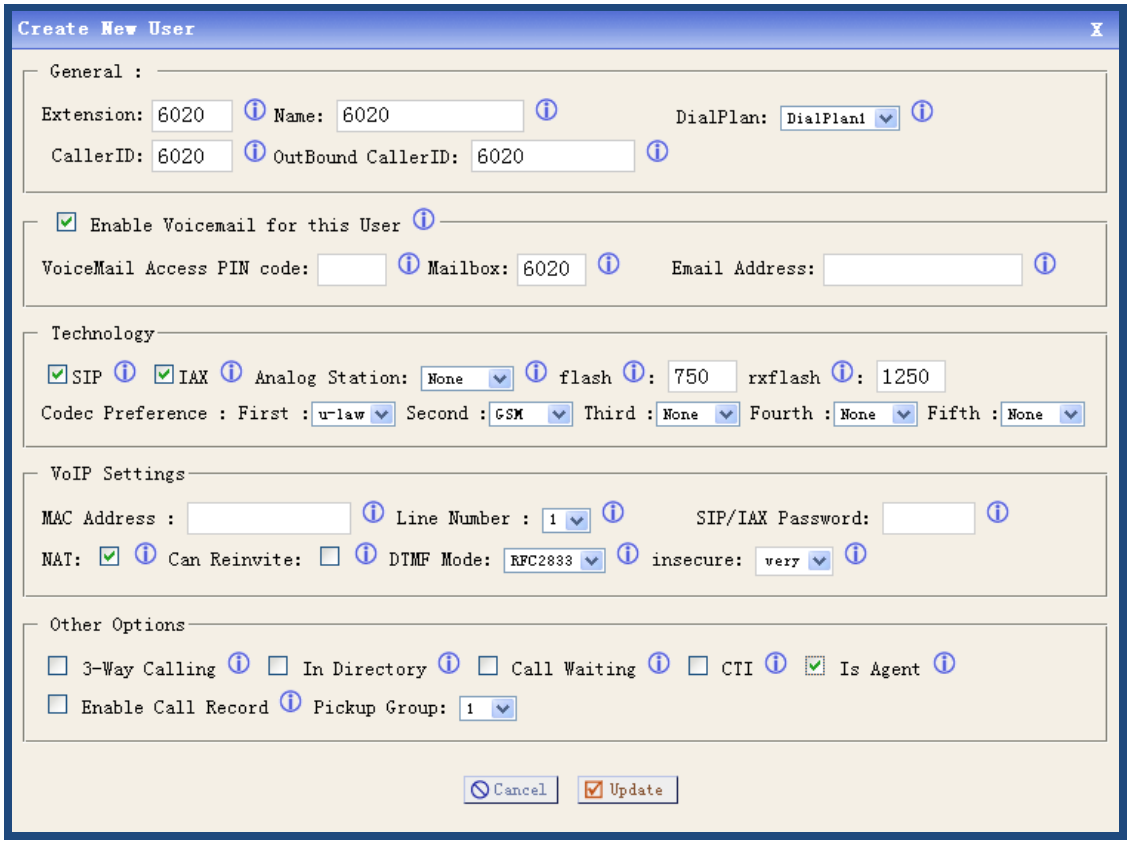

At last, please click on **Update** button, and click on **Apply Changes** button in up right corner of the main page.

3) Set up AT-620 and register an IAX2 user 6020

After logging into web page of IP Phone AT-620, please select **Network** option to enter the screen of configuring IP Address. I set up a static IP Address: 172.16.1.2; Netmask: 255.255.0.0; Gateway: 172.16.1.254. After finishing the configuration, please click on the **Apply** button. You

http://ArtTel.ru

can refer to the following screen:

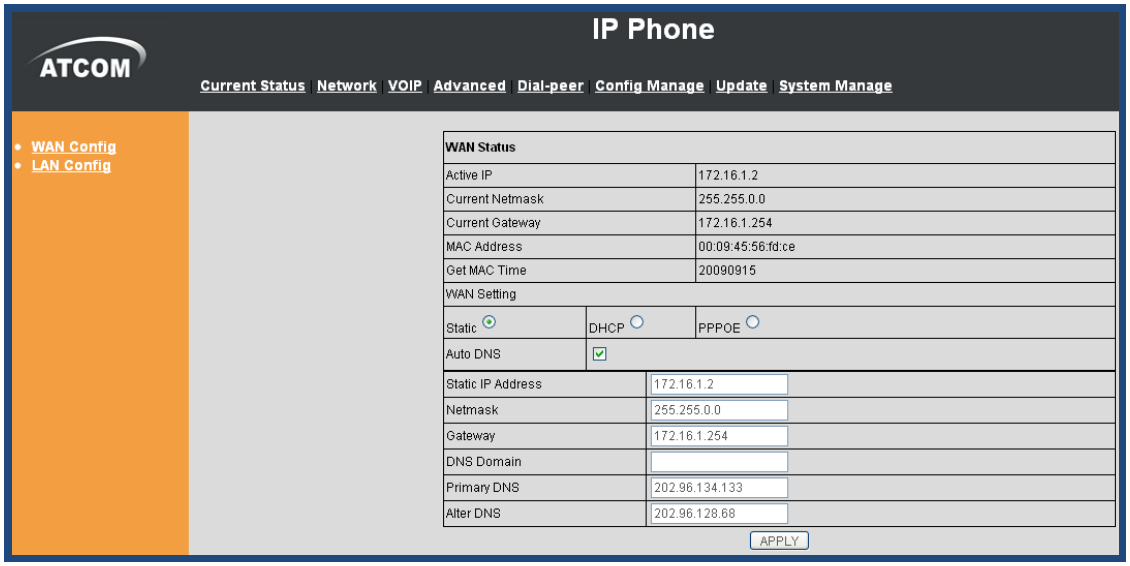

Please select the **VOIP** option, then select the **IAX2** option, I register the IAX2 user 6020 as the following illustration:

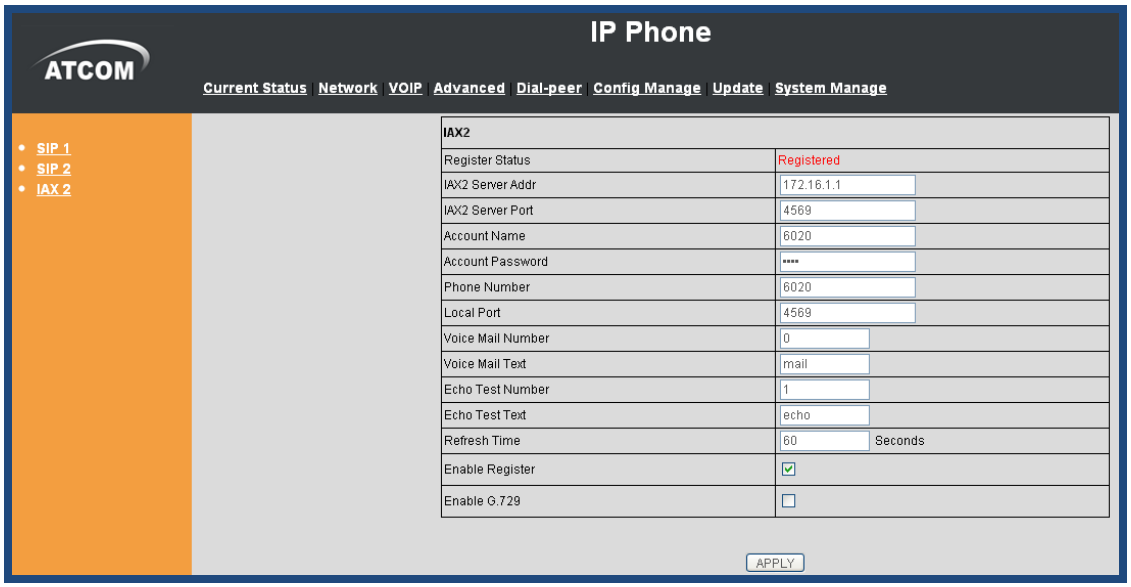

After configuring, please click on the **APPLY** button.

Attention: here you must register IAX2 user instead of SIP user, because the user 6020 is not in the same network segment as IP04. If you use SIP user, you can not get sound when the communication is established.

Now you can call each other among 6020,6001 and 6005 directly.

4.5 How to Call through VoIP Trunk

4.5.1 Call from IP04 to IP08

In order to call from IP04 to IP08, I will create a SIP user in IP08 for the SIP trunk in IP04, create

http://ArtTel.ru

a SIP trunk, an outgoing call rule and a dial plan in IP04.

1) Add an SIP user 6035(it will be used as SIP trunk in IP04) in IP08, after logging into the web page of IP08, please click on **Users→ Create New User**, I add the user 6035 like the following:

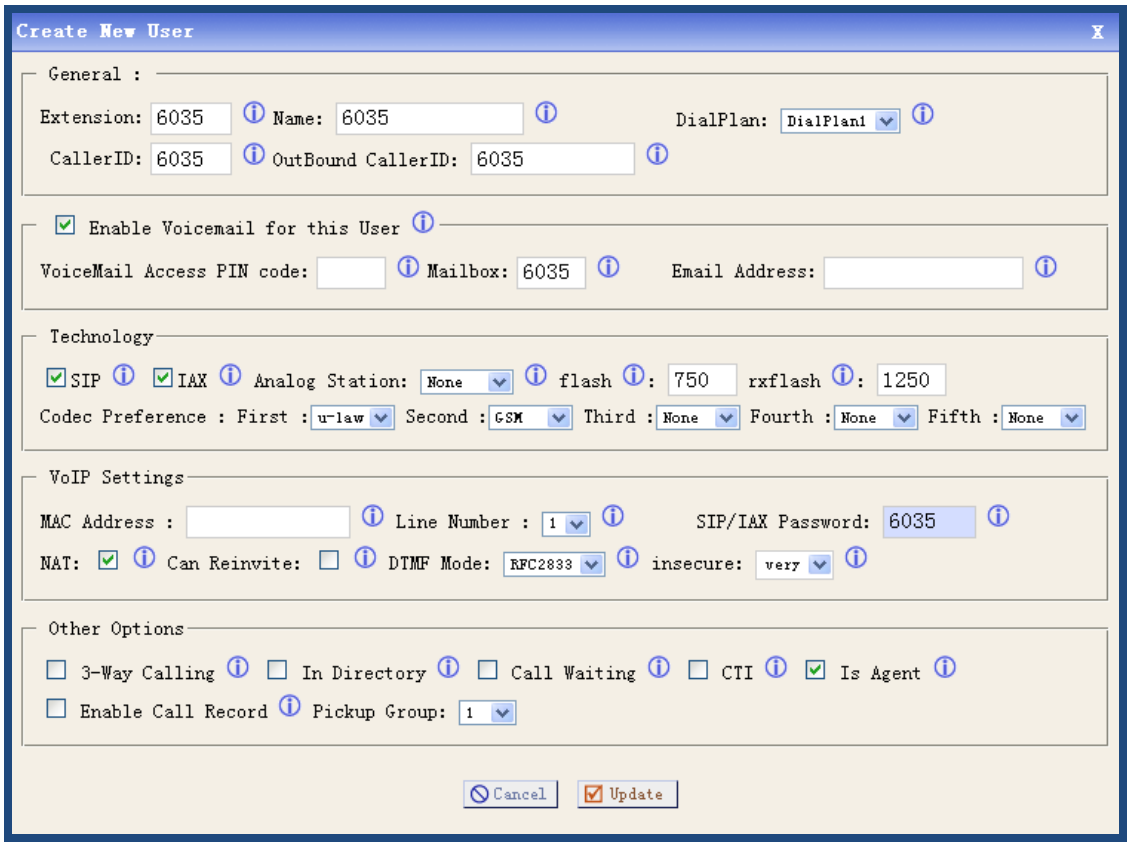

At last, please click on **Update** button, and click on **Apply Changes** button in up right corner of the main page.

Add a SIP user 6030 in IP08 for AT-620, the way is the same as adding 6035.

2) Add a VoIP trunk in IP04, after logging into the webpage of IP04, please click on **Trunks→VOIP Trunks→New SIP/IAX Trunk**, I configure a SIP trunk1 like the following:

http://ArtTel.ru

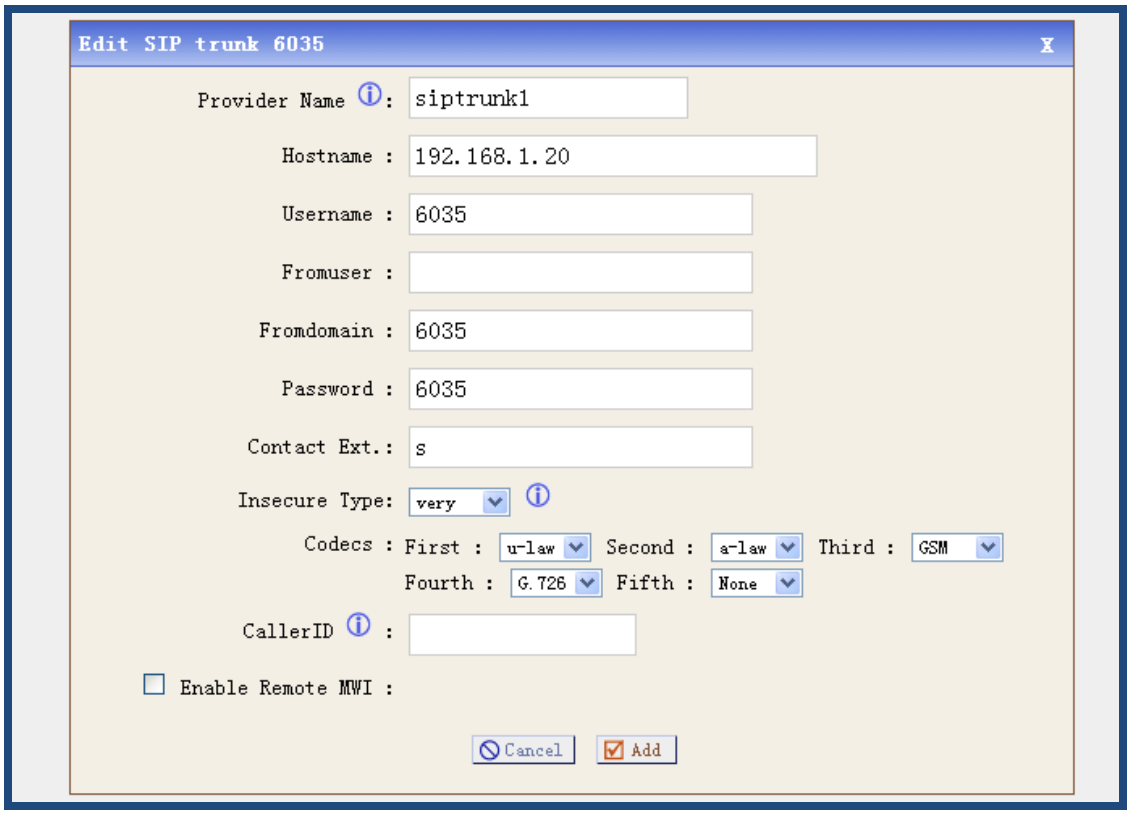

After configuring, please click on **Add** button, and click on **Apply Changes** button in up right corner of the main page.

3) Create an outgoing calling rule in IP04, after logging into the webpage of IP04, please click on **Outgoing Calling Rules→New Calling Rule**, I configure an outgoing2 rule like the following:

http://ArtTel.ru

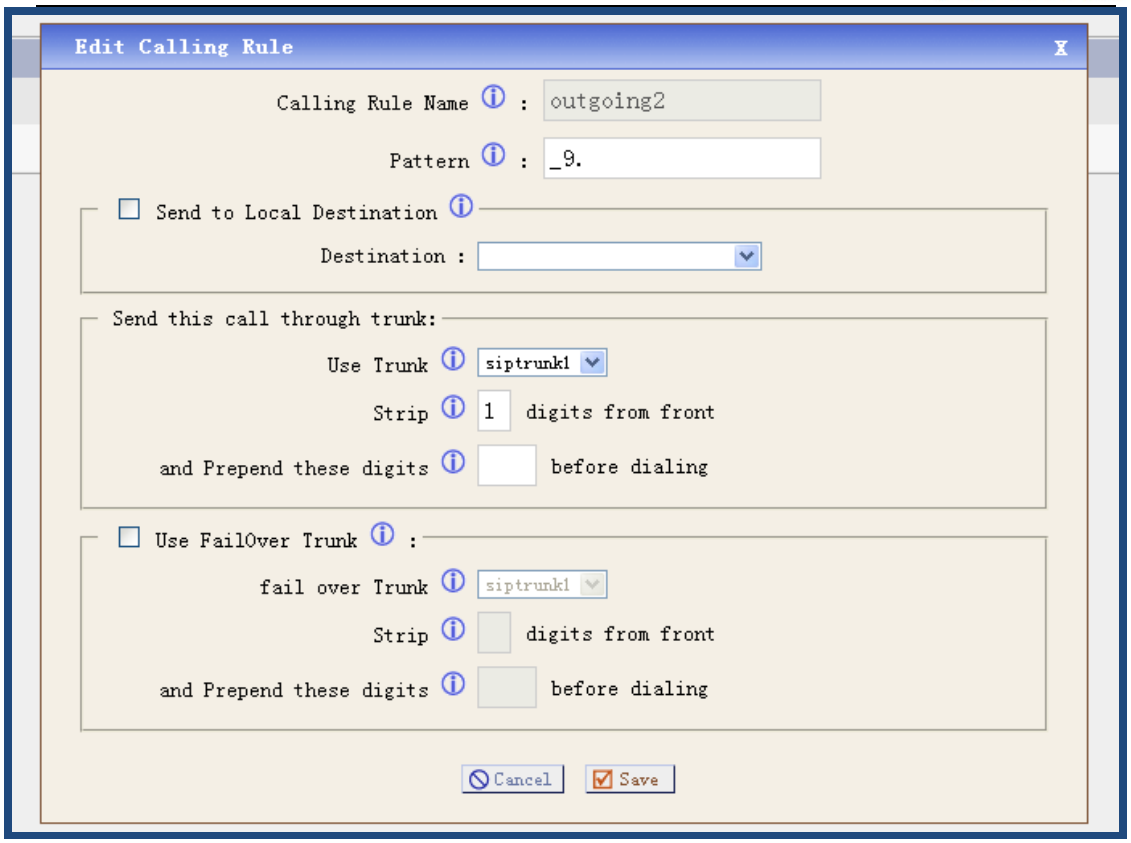

After configuring, please click on **Save** button, and click on **Apply Changes** button in up right corner of the main page.

4) Create a dial plan in IP04, after logging into the webpage of IP04, please click on **Dial Plans→New DialPlan**, I configure a dialplan2 like the following:

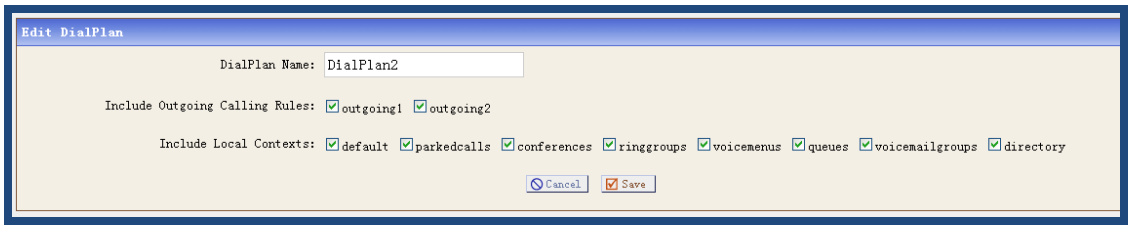
Edit DialPlan
DialPlan Name: DialPlan2
Include Outgoing Calling Rules: outgoing1 outgoing2
Include Local Contexts: default parkedcalls conferences ringgroups voicemenus queues voicemailgroups directory
Cancel
Save

After configuring, please click on **Save** button, and click on **Apply Changes** button in up right corner of the main page.

In configuration screens of 6001 and 6005, please select dialplan2 in the **DialPlan** drop-down list

Now you can call from 6001 and 6005 to 6030 by dialing 96030

4.5.2 Call from IP08 to IP04

In order to call from IP08 to IP04, I will create a SIP user in IP04 for the SIP trunk in IP08, create a SIP trunk, an outgoing call rule and a dial plan in IP08.

1） Add a user 6008 in IP04

Add a SIP user: 6008, after logging into the web page of IP04, please click on **Users→ Create New User**, I add a user 6008 like the following:

http://ArtTel.ru

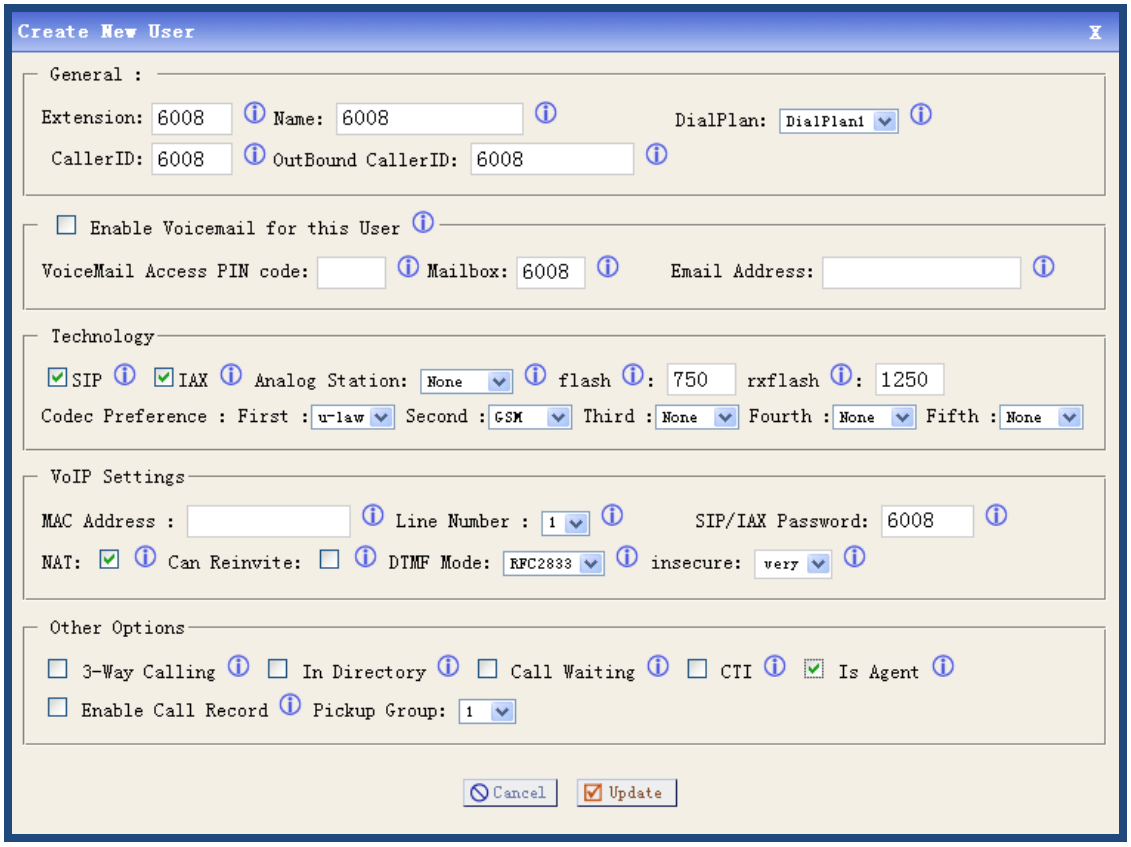

At last, please click on **Update** button, and click on **Apply Changes** button in up right corner of the main page.

2) Create a SIP trunk in IP08

Add a VoIP trunk in IP08, after logging into the webpage of IP08, please click on **Trunks→VOIP Trunks→New SIP/IAX Trunk**, I configure a SIP trunk like the following:

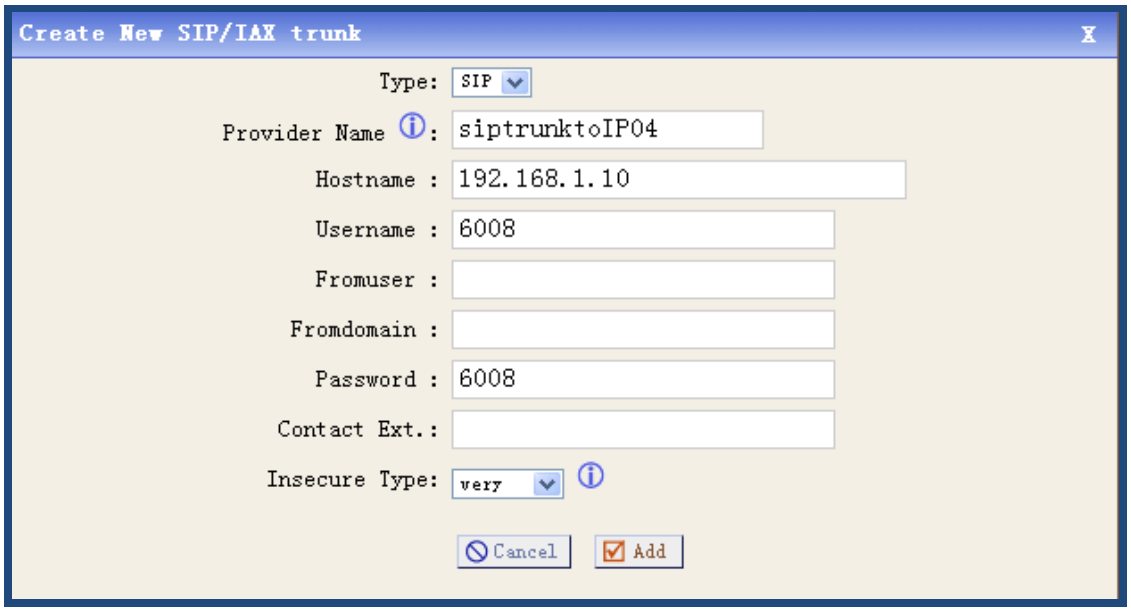

After configuring, please click on **Add** button, and click on **Apply Changes** button in up right corner of the main page.

3) Create an outgoing calling rule in IP08

http://ArtTel.ru

After logging into the webpage of IP08, please click on **Outgoing Calling Rules→New Calling Rule**, I configure an outgoing1 rule like the following:

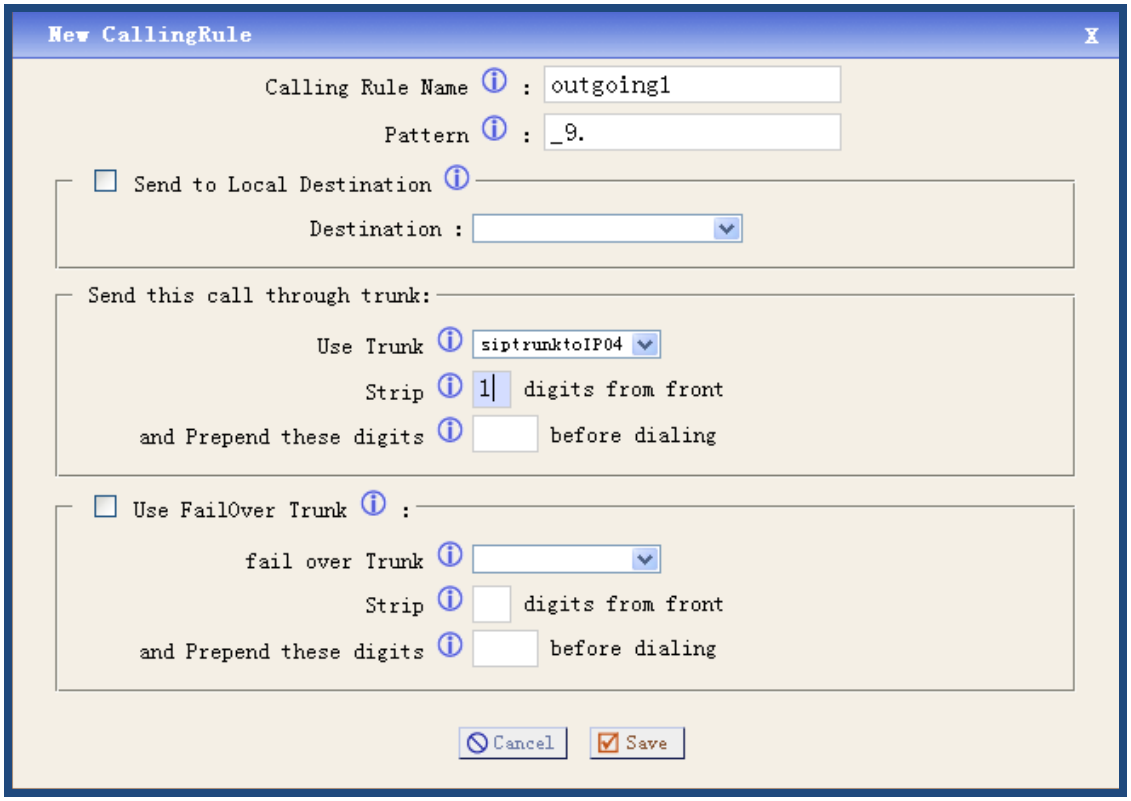

After configuring, please click on **Save** button, and click on **Apply Changes** button in up right corner of the main page.

4) Create a dial plan in IP08

After logging into the webpage of IP08, please click on **Dial Plans→New DialPlan**, I configure a dialplan1 like the following:

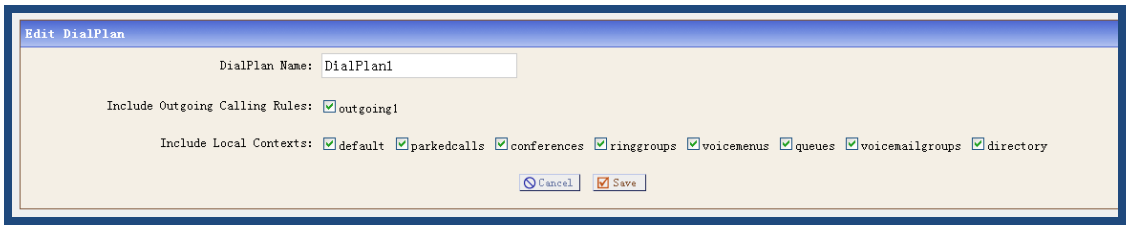

After configuring, please click on **Save** button, and click on **Apply Changes** button in up right corner of the main page.

In configuration screens of 6030, please select dialplan1 in the **DialPlan** drop-down list.

Now you can call from 6030 to 6001 and 6005 by dialing with prefix 9.

4.6 How to Transfer Files between Windows PC and IP04

Using WinSCP software, it is the most convenient way to transfer files between windows PC and IP04. Open your WinSCP software，enter the IP Address, username, password of IP04 like the following screen:

http://ArtTel.ru

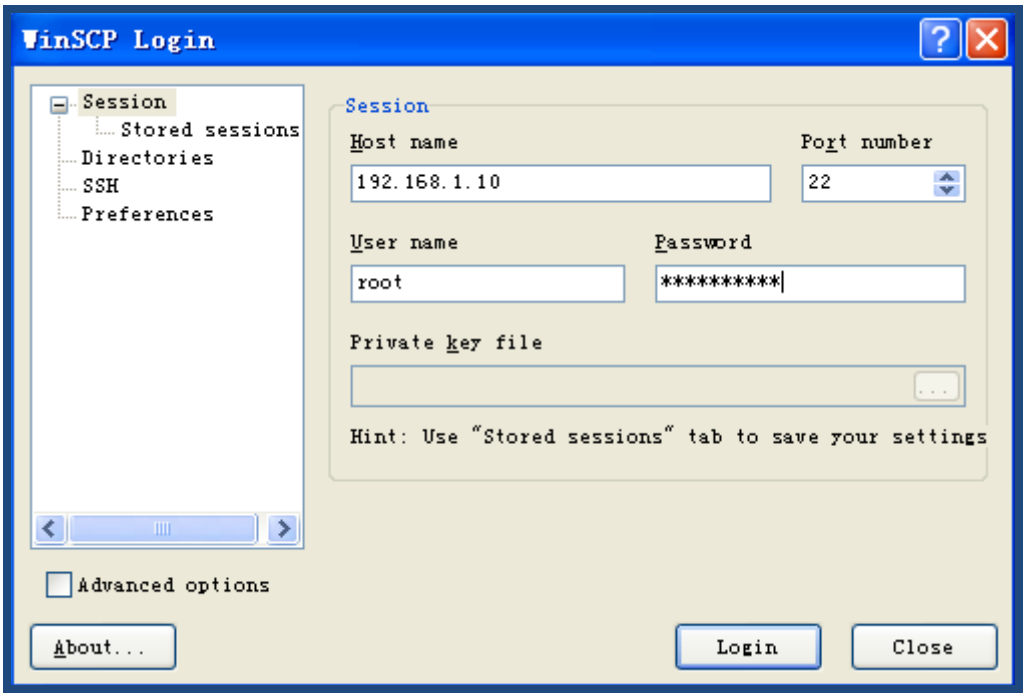

At last, click on **Login** button, then you can get the following screen:

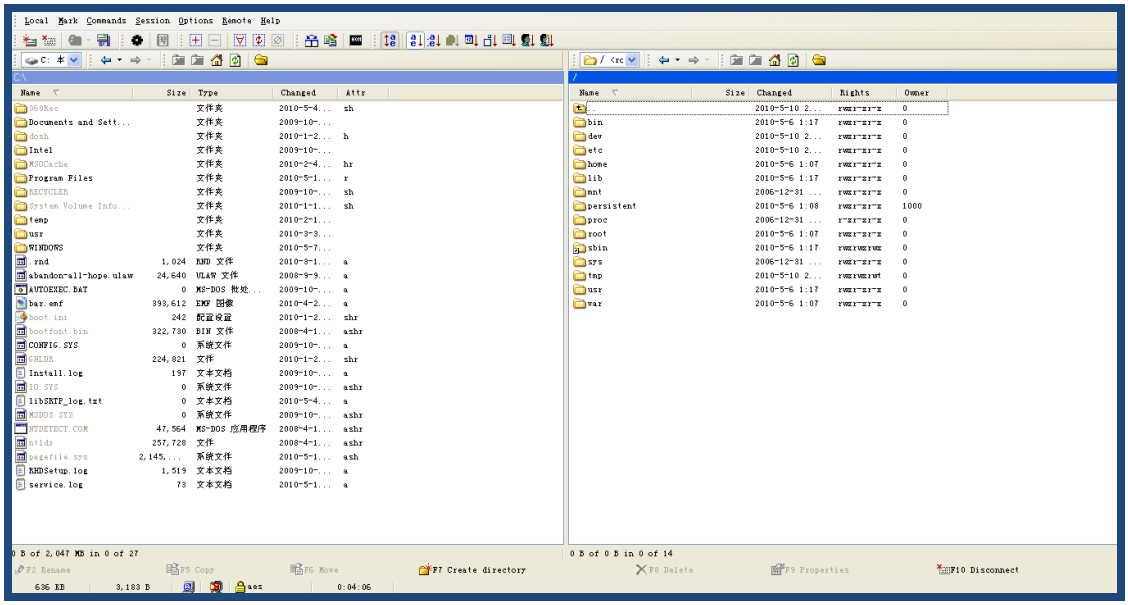

The left part of the screen displays directories and files of your windows PC, the right part of the screen displays directories of IP04.

If you want to transfer a file from windows PC to IP04, you just need to choose the file and drag it to the directory of IP04, at last, click on **copy** button in the popping-up screen like the following:

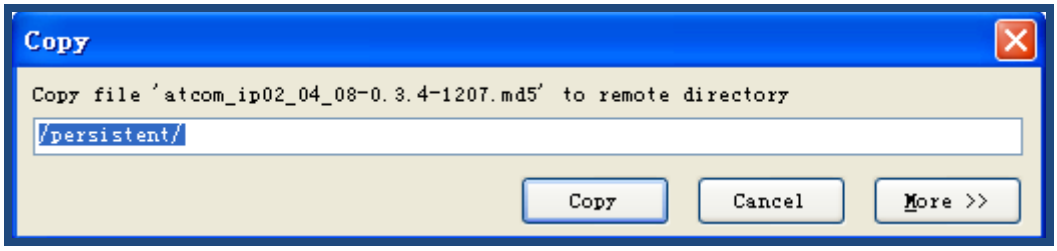

http://ArtTel.ru

Chapter 5 Reference

http://atcom.cn/download.html
http://www.asteriskguru.com/
http://www.openippbx.org/index.php?title=Main_Page
http://www.atcom.cn/

http://ArtTel.ru